



TELEFUNKEN TF-PS1237B Portable Audio System with Bluetooth Instruction Manual

[Home](#) » [TELEFUNKEN](#) » TELEFUNKEN TF-PS1237B Portable Audio System with Bluetooth Instruction Manual



Contents

- [1 TELEFUNKEN TF-PS1237B Portable Audio System with Bluetooth](#)
- [2 Description](#)
- [3 Important safeguards](#)
- [4 Power supply](#)
- [5 General operations](#)
- [6 USB/MicroSD operation](#)
- [7 Maintenance and care](#)
- [8 Accessories](#)
- [9 Specifications](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

TELEFUNKEN

TELEFUNKEN TF-PS1237B Portable Audio System with Bluetooth

 



Dear customer!

Thank you for purchasing our product. For safety, it is strongly recommended to read this manual carefully before connecting, operating and/or adjusting the product and keep the manual for reference in future.


Description

Top panel

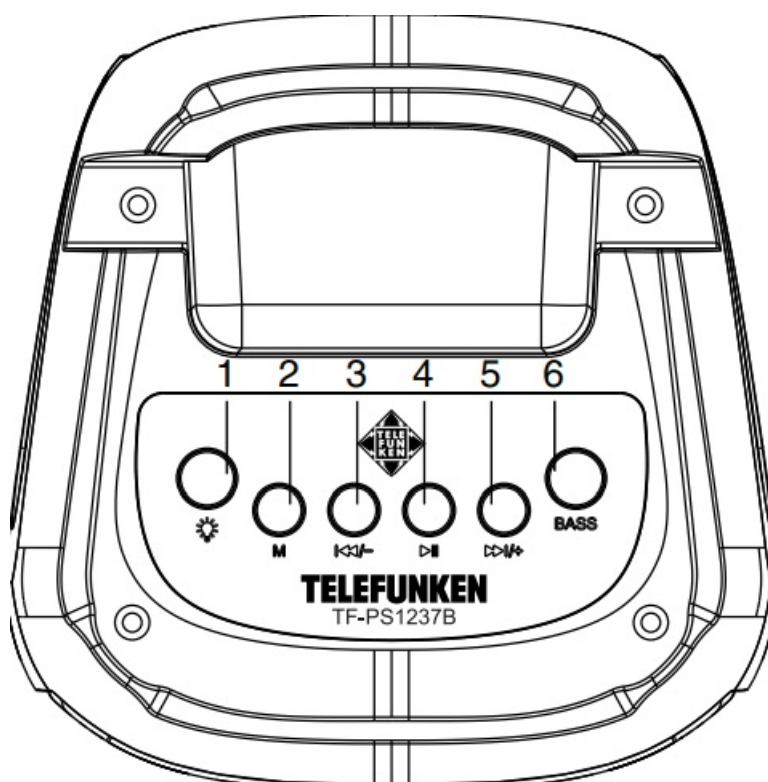


1.  (LIGHT) button
2. M button
3. (PREVIOUS)/ –button
4. (PLAY/PAUSE) button
5. (NEXT) / + button
6. BASS button
7. ON/OFF switch
8. AUX input 3.5 mm
9. TF (microSD) card slot
10. USB port
11. Charging port DC 5V (microUSB)
12. Microphone input 6.35 mm

 Back panel

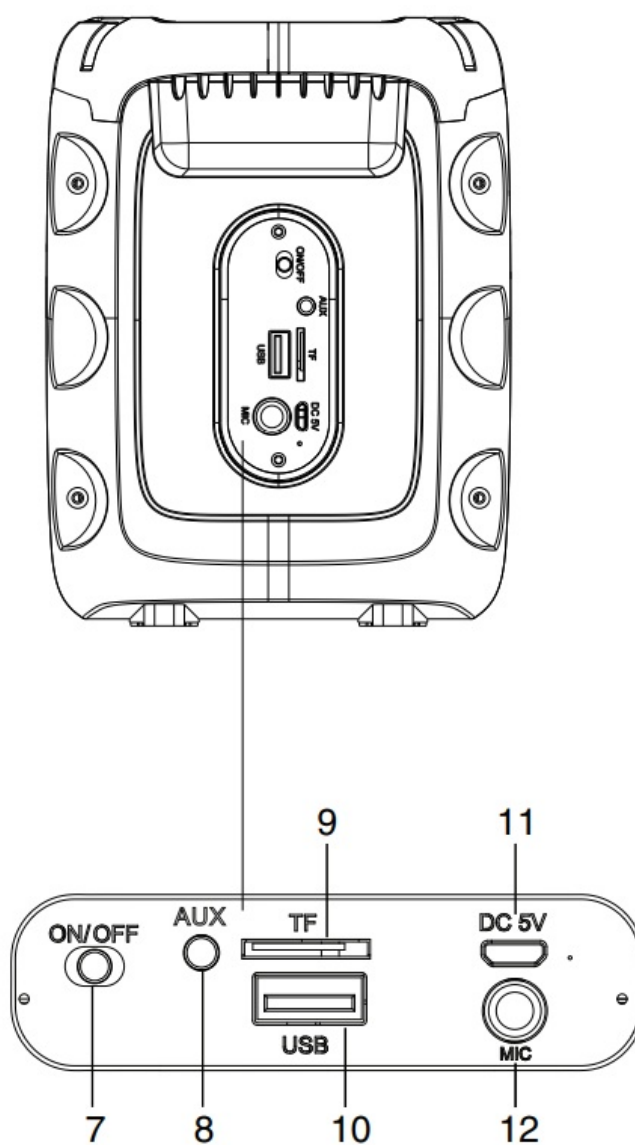

Connection diagram

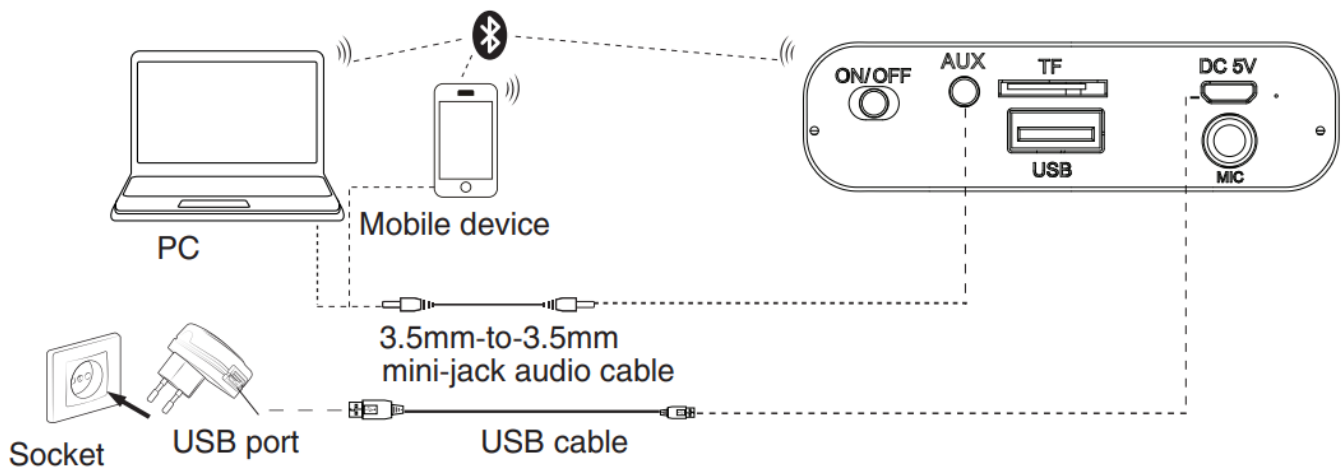 

Important safeguards

- The instruction manual contains important operating and maintenance instructions. For your safety, it is necessary to refer to the manual. Keep the manual for future use.
- Do not hit or drop the unit.
- Do not expose the unit to vibration, direct sunlight, too high or low temperatures or humidity.
- Do not disassemble the unit yourselves.

Refer servicing to qualified service personnel.

All the illustrations in this manual are schematic images, which may differ from actual objects.

Power supply

- The unit operates on an internal rechargeable Li-ion battery and 220V mains via adapter (not included).
- The battery can be recharged with the provided USB charging cable. Before first plugging the appliance check that voltage indicated on the rating label corresponds to the mains voltage in your home.
- Insert the charging cable into the DC 5V socket on the unit.
- Connect the charging cable to the power adapter (not included). Plug the adapter to the power source.
- For best results, try to fully charge the battery before each use.
- Put the ON/OFF switch into ON position to switch the unit on. Put it into OFF position to switch off.

General operations



Bluetooth wireless playback

- This unit can wirelessly playback audio from any device with Bluetooth A2DP function.
- The wireless range is approximately within 10 meters in direct line of sight.
- Wireless audio streaming requires pairing of a Bluetooth device (e.g. smartphone).

HOW TO PAIR YOUR DEVICE TO THIS UNIT:

- Make sure the Bluetooth function is switched on in your device (e.g. smartphone, tablet).
- switched on in your device (e.g. smartphone, tablet).

M button repeatedly to select the Bluetooth mode (selected by default).


- Once the Bluetooth mode is active, you will find the unit listed in the Bluetooth connections list of your device (as TF-PS1237B).
- If asked for a passcode, enter "0000".
- The initial setup is required only once per device. The unit will automatically pair to the last paired device.
- When playing files, you can press the button to pause and resume playback.
- Press the  or  button to go to a previous or next track. Press and hold these buttons to adjust volume.

External device connection

- You can connect the audio output of an external device to this unit, to listen to the sound of that device through the speaker.
- To connect an external audio device, please use the provided audio cable with 3.5mm-to-3.5mm plugs to connect the headphone out or audio line-out of the external device to the AUX input of this unit.
- Press the M button to select the AUX mode.
- Turn on the external device. You can control the volume level by pressing and holding the +/- buttons.

USB/MicroSD operation

Playback


- Turn on the device.
- Insert a microSD (TF) card into the slot. Or insert a USB drive into the USB port. Press the M button repeatedly to select the USB or MicroSD mode.
- When playing, you can press  to play/pause the playback.
- During the playback you can press the and buttons to go to the previous and next track. Press and hold these buttons to adjust volume.



It may take up to 60 seconds to open and verify a large microSD card / USB drive with many files.

General USB/MicroSD notes

- This unit is equipped with a microSD slot and USB port that can read and play MP3 files stored on standard microSD cards and USB drives up to 128 GB.
 - FAT and FAT32 file system is supported by this unit.
- Never remove microSD cards and USB drives from the unit during playback, always stop playback, then press the M button to switch to another mode before removing the storage to prevent damage to your files and cards/drives themselves.

FM radio

- Turn on the device.
- Press the M button repeatedly to select the FM mode.
- Press to automatically scan available radio stations. The procedure will take several minutes. Press again  to stop.

- Once the search is finished, you can press the  and  buttons to go to a previous or next radio station. Press and hold these buttons to adjust volume.

Microphone

- You can connect a microphone for karaoke or other purposes into this unit by plugging it to the 6.35mm microphone input jack. Please do not plug the microphone when the unit is charging. Microphone is not included.

Light

- Press the  button to switch the speaker light off and on.

Bass

- Press the BASS button to enhance the bass.

TWS function

- If you have two units at your disposal, you can pair them to each other and enable the True Wireless (TWS) stereo sound.
- Turn the both units on and switch them into the Bluetooth mode. Press and hold M on any of the units. A beep will sound, indicating that the unit is ready for TWS pairing.
Keep holding M, you will hear another beep sound when the units are paired successfully.
TWS works only in Bluetooth mode and does not work when the microphone is inserted.

Maintenance and care

Switch off the unit, unplug from the power supply. The outside of the appliance can be cleaned with a slightly damp cloth.

Accessories

- **Audio system** 1 pc
- **USB cable** 1 pc
- **AUX cable** 1 pc
- **Instruction manual** 1 pc

Specifications

Power output	15 W
Input voltage	5V 1A
Nominal power consumption	5 W
FM radio	87.5 – 108 MHz
Battery / Mains power supply	Li-ion, 3.7V, 1500 mAh / 220V
Music playtime	up to 10 hours*
Net weight	700 g
Unit dimensions	134*124*175 mm

*The built-in battery life is approximate, depending on the conditions and nature of use (number of recharge cycles of the built-in battery, environmental conditions, use of lighting effects, sound volume level, playback source, type of content being played).

Specifications and functions are subject to change without notice. It is connected with continual improvement of the device.


MANUFACTURED AND DISTRIBUTED BY TECHNO ELECTRIC LIMITED,

Legal address: 801 Luk Yu Building, 24 – 26 Stanley Street, Central, China

TELEFUNKEN and the TELEFUNKEN logo are trademarks of

TELEFUNKEN Licenses GmbH and are used under a trademark license.

Documents / Resources

 <p>PORTABLE AUDIO SYSTEM WITH BLUETOOTH ПОПРАВЛЯЕМЫЙ АУДИОСИСТЕМА С BLUETOOTH SOUNDBIT FLAME TF-PS1237B INSTRUCTION MANUAL Руководство по эксплуатации</p>	<p>TELEFUNKEN TF-PS1237B Portable Audio System with Bluetooth [pdf] Instruction Manual SOUNDBIT FLAME, TF-PS1237B Portable Audio System with Bluetooth, TF-PS1237B, TF-PS 1237B Audio System with Bluetooth, Portable Audio System with Bluetooth, Portable Audio Sy stem, Portable Audio, Audio System</p>
--	---