

TELEFUNKEN TF-PS2212 Portable Audio System with Bluetooth Instruction Manual

Home » TELEFUNKEN » TELEFUNKEN TF-PS2212 Portable Audio System with Bluetooth Instruction Manual



Contents

- 1 TELEFUNKEN TF-PS2212 Portable Audio System with
- **Bluetooth**
- 2 Description
- 3 Connection diagram
- 4 Important Safeguards
- 5 Power supply
- **6 General Operations**
- 7 USB/MicroSD operation
- 8 FM radio
- 9 Microphone
- 10 Light
- 11 TWS function
- 12 Maintenance and care
- 13 Accessories
- 14 Specifications
- 15 Documents / Resources
- **16 Related Posts**



TELEFUNKEN TF-PS2212 Portable Audio System with Bluetooth




Dear customer!

Thank you for purchasing our product. For safety, it is strongly recommended to read this manual carefully before connecting, operating and/or adjusting the product and keep the manual for reference in future.


Description

Control panel

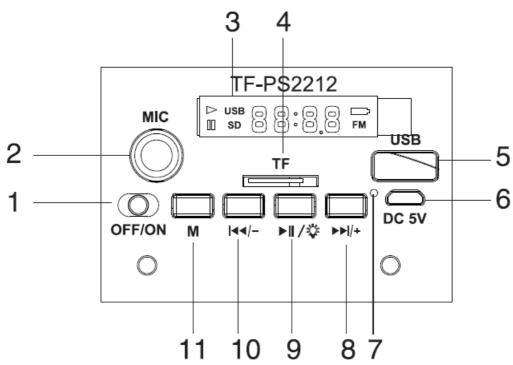


- 1. OFF/ON switch
- 2. Microphone input 6.35 mm
- 3. Display
- 4. TF (microSD) card slot
- 5. USB port
- 6. Charging port DC 5V micro USB)/ AUX input
- 7. Charge LED indicator
- 8. M(NEXT) /+ button
- 9. ► (PLAY/PAUSE)/ ***
 (LIGHT) button
- 10. **K**(PREVIOUS)/ button
- 11. M button

Remote control

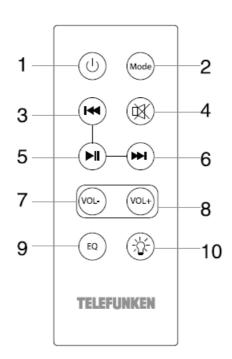

- 1. Ubutton
- 2. MODE button
- 3. Hbutton
- 4. MUTE button
- 5. H_{button}
- 6. Hbutton
- 7. VOL- button
- 8. VOL+ button
- 9. EQ button
- 10. Light button

Connection diagram

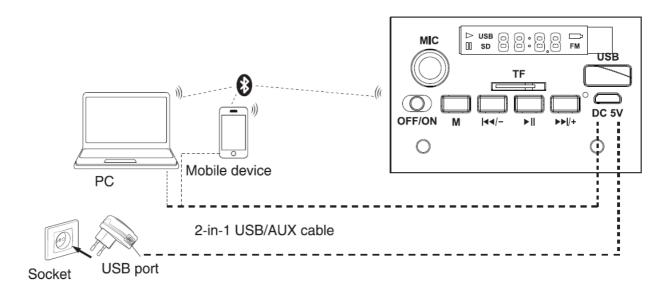

Important Safeguards

- The instruction manual contains important operating and maintenance instructions. For your safety, it is necessary to refer to the manual. Keep the manual for future use.
- · Do not hit or drop the unit
- Do not expose the unit to vibration, direct sunlight, too high or low temperatures or humidity.
- · Do not disassemble the unit yourselves
- Refer servicing to qualified service personnel
- All the illustrations in this manual are schematic images, which may differ from actual objects.
- Insert the charging cable into the DC 5V socket on the unit.
- Connect the charging cable to the power adapter (not included). Plug the adapter to the power source.
- For best results, try to fully charge the battery before each use. Charging LED will light up and then switch off when the charging is finished.
- Put the ON/OFF switch into ON position to switch the unit on. Put it into OFF position to switch off.

Power supply

The unit operates on an internal rechargeable Li-ion battery and 220V mains via an adapter (not included). The battery can be recharged with the provided USB charging cable. Before first plugging the appliance check that voltage indicated on the rating label corresponds to the mains voltage in your home.

General Operations

Bluetooth wireless playback

- This unit can wirelessly playback audio from any device with Bluetooth A2DP function.
- The wireless range is approximately within 10 meters in direct line of sight.
- Wireless audio streaming requires pairing of a Bluetooth device (e.g. smartphone).

HOW T PAIR YOUR DEVICE TO THIS UNIT:

- Make sure the Bluetooth function is switched on in your device (e.g. smartphone tablet).
- Switch on the unit and press the **M** button repeatedly to select the Bluetooth mode (selected by default).
- Once the Bluetooth mode is active, you will find the unit listed in the Bluetooth connections list of your device (as TF-PS2212).
- If asked for a passcode, enter "0000".
- The initial setup is required only once per device. The unit will automatically pair to the last paired device.
- When playing files, you can press the button to pause and resume playback.
- Press the button to go to the previous or next track. Press and hold these buttons to adjust the volume.

External device connection

- You can connect the audio output of an external device to this unit, to listen to the sound of that device through the speaker
- To connect an external audio device, please use the provided audio cable with 3.5mm-to-MicroUSB plugs to connect the headphone out or audio line-out of the external device to the AUX input of this unit.
- Press the **M button** to select the AUX mode. Turn on the external device. You can control the volume level by pressing and holding the -+ buttons.

USB/MicroSD operation

Playback

- Turn on the device.
- Insert a MicroSD (TF) card into the slot.
 Or insert the USB drive into the USB port. Press the M button repeatedly to select the USB or MicroSD mode.
- When playing, you can press to play/pause the playback.
- During the playback, you can press the buttons to go to the previous and next tracks. Press and hold these buttons to adjust the volume.
- It may take up to 60 seconds to open and verify a large microSD card/ USB drive with many files.
- Press the EQ button to switch between various equalizer presets. EQ is only available in the BT and USB/TF modes.

General USB/MicroSD notes

- This unit is equipped with a microSD slot and USB port that can read and play MP3 files stored on standard microSD cards and USB drives up to 32 GB.
- FAT and FAT32 file system is supported by this unit.
- Never remove microSD cards and USB drives from the unit during playback, always stop playback, then press
 the M button to switch to another mode before removing the storage to prevent damage to your files and
 cards/drives themselves.

FM radio

- Turn on the device.
- Press the M button repeatedly to select the FM mode.
- Press to automatically scan available radio stations. The procedure will take several minutes. Press again to stop.
- Once the search is finished, you can press the buttons to go to the previous or next radio station.

 Press and hold these buttons to adjust the volume.

Microphone

You can connect a microphone for karaoke or other purposes to this unit by plugging it to the 6.35mm microphone input jack. Please do not plug in the microphone when the unit is charging. The microphone is not included.

Light

Press and hold the button to switch the speaker light off and on.

TWS function

- If you have two units at your disposal, you can pair them to each other and enable the True Wireless (TWS) stereo sound.
- Turn both units on and switch them into Bluetooth mode. Press and hold **M** on any of the units. A beep wll sound, indicating that the unit is ready for TWS pairing.
- Keep holding **M**, you will hear another beep sound when the units are paired successfully.
- TWS works only in Bluetooth mode and does not work when the microphone is inserted.

Maintenance and care

Switch off the unit, unplug from the power supply. The outside of the appliance can be cleaned with a slightly damp cloth.

Accessories

- Audio system
 - 1 pc
- 2-in-1 USB/AUX cable
 - 1 pc
- Remote control
 - 1 pc
- · Instruction manual
 - 1 pc

Specifications

Rated Maximum Sinusoidal (RMS) Peak music power output (PMPO)	25 W 60 W
Input voltage	5 V 1 A
Nominal power consumption	5 W
FM radio	87.5 - 108 MHz
Battery / Mains power supply	Li-ion, 3.7V, 1800 mAh / 220V
Battery life	up to 8 hours*
Net weight	1.970 kg
Unit dimensions	426*171*185 mm

Specifications and functions are subject to change without notice. It is connected with the continual improvement of the device.

MANUFACTURED AND DISTRIBUTED BY TECHNO ELECTRIC LIMITED,

Legal address: 801 Luk Yu Building, 24 26 Stanley Street, Central, China

TELEFUNKEN and the TELEFUNKEN logo are trademarks of

TELEFUNKEN Licenses GmbH and are used under a trademark license.

Documents / Resources



TELEFUNKEN TF-PS2212 Portable Audio System with Bluetooth [pdf] Instruction Manual TF-PS2212 Portable Audio System with Bluetooth, TF-PS2212, TF-PS2212 Audio System with Bluetooth, Portable Audio System with Bluetooth, Bluetooth Audio System, Audio System, Audio System

Manuals+, home privacy