



TELEFUNKEN TF-PS2303 Portable Music System with Bluetooth Instruction Manual

[Home](#) » [TELEFUNKEN](#) » TELEFUNKEN TF-PS2303 Portable Music System with Bluetooth Instruction Manual 

Contents

- [1 TELEFUNKEN TF-PS2303 Portable Music System with Bluetooth](#)
- [2 Description](#)
- [3 Connection diagram](#)
- [4 Important Safeguards](#)
- [5 General Operations](#)
- [6 USB/MicroSD operation](#)
- [7 TWS function](#)
- [8 Maintenance and Care](#)
- [9 Accessories](#)
- [10 Specifications](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

TELEFUNKEN

TELEFUNKEN TF-PS2303 Portable Music System with Bluetooth




Dear customer!

Thank you for purchasing our product. For safety, it is strongly recommended to read this manual carefully before connecting, operating and/or adjusting the product and keep the manual for reference in future.

Description


1. Echo effect knob {for microphone}
2. Microphone volume knob
3. TF card slot | USB port
4. CH- button
5. Display
6. SCAN button
7. CH+ button
8. LED Sw | MODE button
9. AUX input
10. Power (OFF/ON) switch Volume knob
11. Microphone input
12. DC 5V charging port

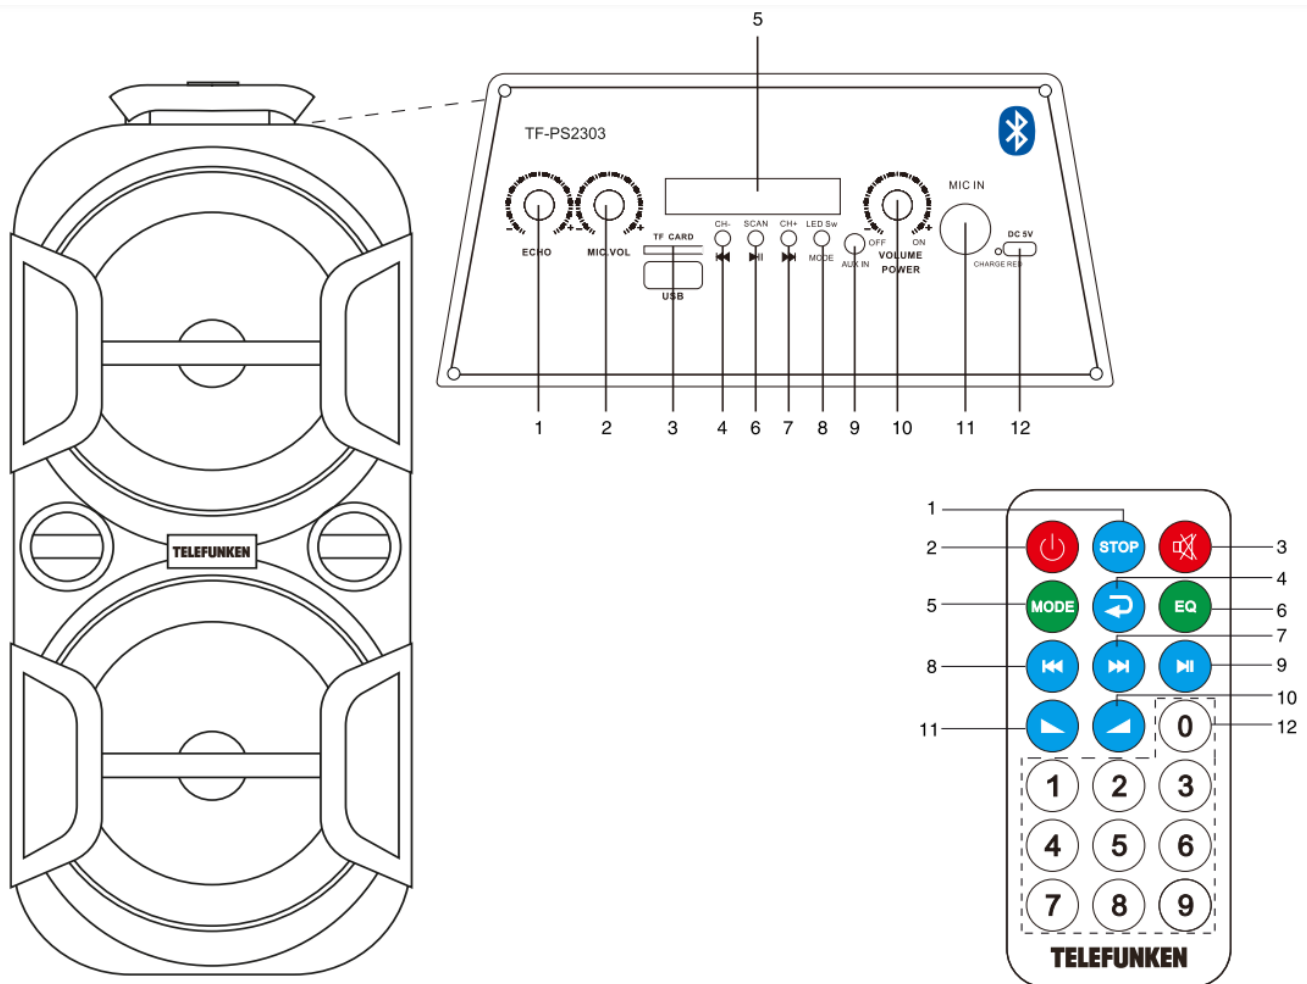

REMOTE CONTROL

1. STOP button
2. (POWER) button
3. MUTE button
4. REPEAT button
5. MODE button
6. EQ button
7. (NEXT) button
8. (PREVIOUS) button
9. (PLAY/PAUSE) button
10. VOL- button
11. VOL+ button
12. Numeric buttons

Connection diagram

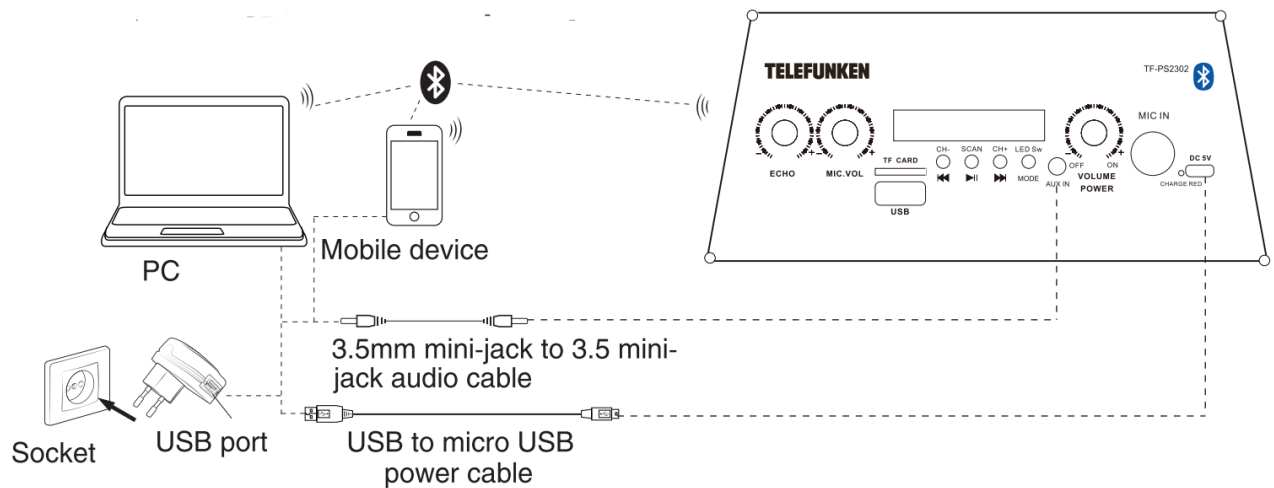

Important Safeguards

- The instruction manual contains important operating and maintenance instructions. For your safety, it is necessary to refer to the manual. Keep the manual for future use.
- Do not hit or drop the unit
- Do not expose the unit to vibration, direct sunlight, too high or low temperatures or humidity.
- Do not disassemble the unit yourselves Refer servicing to qualified service personnel
- Insert the charging cable into the DC 5V socket on the unit.
- Connect the charging cable to the power adapter. Plug the adapter to the power source.
- For best results, try to fully charge the battery before each use. If the battery is drained, please allow it to recharge for a few hours.
- Push the OFF/ON switch into ON position (to the right) to switch the unit on. Put it into OFF position (left) to switch off.

All the illustrations in this manual are schematic Images, which may differ from actual objects.

Power supply

- The unit operates on an internal rechargeable Li-ion battery and 220V mains.
- The battery can be recharged with the provided USB charging cable. Before first plugging the appliance check that voltage indicated on the rating label corresponds to the mains voltage in your home .

General Operations

Bluetooth wireless playback

- This unit can wirelessly playback audio from any device with Bluetooth A2DP function.
- The wireless range is approximately within 10 meters in direct line of sight.
- Wireless audio streaming requires pairing of a Bluetooth device (e.g. smartphone).

HOW TO PAIR YOUR DEVICE TO THIS UNIT:

- Make sure the Bluetooth function is switched on in your device {e.g. smartphone, tablet}.
- Switch on the unit and press the MODE button repeatedly to select the Bluetooth mode (selected by default).
The display will show “bt”.
- Once the Bluetooth pairing indicator begins flashing, you will find the unit listed in the Bluetooth connections list of your device (as TF-PS2303).
- If asked for a passcode, enter “0000”.
- The initial setup is required only once per device. The unit will automatically pair to the last paired device.
- The LED indicator will flash when searching for a Bluetooth device and stay on when the devices are paired.
- When playing files, you can press the M/ button to pause and resume playback.
- Press the 1+1 or ... button to go to a previous or next track.
Rotate the volume knob or press the volume buttons to adjust volume.

External device connection

- You can connect the audio output of an external device to this unit, to listen to the sound of that device through the speaker.
- To connect an external audio device, please use an audio cable with 3.5mm-to-3.5 mm plugs to connect the headphone out or audio line-out of the external device to the AUX input of this unit.
- Press MODE button to select the AUX mode.
- Turn on the external device. You can press the volume buttons to adjust volume.

USB/MicroSD operation

Playback

- Turn on the device.
- Insert a microSD (TF) card into the slot.
Or insert a USB drive into the USB port. Press the MODE button repeatedly to select the USB or MicroSD mode.
- When playing, you can press M/ to play/pause the playback.
- During the playback you can press the ... and 1+1 buttons to go to the previous and next track. Rotate the volume indicator to adjust volume.
It may take up to 60 seconds to open and verify a large microSD card or USB drive with many files.
- Press the EQ button to switch between various equalizer presets. EQ is only available in the BT and USB/TF modes.

General USB/MicroSD notes

- This unit is equipped with a microSD slot and USB port that can read and play MP3 files stored on standard microSD cards and USB drives up to 32 GB.
- FAT and FAT32 file system is supported by this unit.
- Never remove microSD cards and USB drives from the unit during playback, always stop playback, then press the MODE button to switch to another mode before removing the storage to prevent damage to your files and cards/drives themselves.

NOTE: If there is a microSD card or USB drive installed in the unit, when powered on, playback will automatically start from microSD/USB.

NOTE: Slight noise during playback pauses is not a construction defect, it is determined by the factory presets of the dynamic noise reduction system.

FM radio

- Turn on the device.
- Press the MODE button repeatedly to select the FM mode.
- Press SCAN to automatically scan and save all available radio stations. The procedure will take several minutes and cannot be interrupted.
- Radio frequency can be set manually using the numeric buttons on the remote control.
- Once the search is finished, you can press the 1+1 buttons to go to a previous or next radio station. Also you can input the frequency directly using the numeric buttons on the remote.

Microphone

- You can connect a microphone for karaoke or other purposes into this unit by connecting it to the 6.35mm microphone input jack. Please do not plug the microphone when the unit is charging.
- While connected, you can control the microphone volume and echo effect by rotating the corresponding knob on the top panel.

NOTE: This device has a telescopic handle. In order to extend the telescopic handle, press the button on the handle and pull it towards you. To close the telescopic handle, press the button on the handle and slide it back into the device.

TWS function

- If you have two units at your disposal, you can pair them to each other and enable the True Wireless (TWS) stereo sound.
- Turn the both units on and switch them into the Bluetooth mode. Press and hold PLAY/PAUSE on any of the units.

A beep will sound, indicating that the unit is ready for TWS pairing. Keep holding PLAY/PAUSE, you will hear another beep sound when the units are paired successfully.

NOTE: TWS works only in Bluetooth mode and does not work when the microphone is inserted.

Maintenance and Care

Switch off the unit, unplug from the power supply. The outside of the appliance can be cleaned with a slightly damp cloth.

Accessories

- Music system 1 pc
- AUX cable 1 pc

- Power adapter 1 pc
- Remote control 1 pc
- Instruction manual 1 pc


Specifications

Output power	150W
Input voltage	220V – 50/60 Hz
Nominal power consumption	SW
FM radio	87.5 – 108 MHz
Battery Mains power supply	Li-ion, 3.7V, 3600 mAh / 220V
Net weight	5.1 kg
Unit dimensions	260 mm * 550 mm • 260 mm

Specifications and functions are subject to change without notice. It is connected with continual improvement of the device.

MANUFACTIJRED AND DISTRIBUTED BY TECHNO ELECTRIC LIMITED,
Legal address: 801 Luk Yu Building, 24 – 26 Stanley Street, Central, China TELEFUNKEN and the TELEFUNKEN logo are trademarks of TELEFUNKEN Licenses GmbH and are used under a trademark license.

Documents / Resources

 <p>PORTABLE MUSIC SYSTEM WITH BLUETOOTH ПОРТАТИВНАЯ МУЗЫКАЛЬНАЯ СИСТЕМА С BLUETOOTH TF-PS2303 Instruction manual Руководство по эксплуатации</p>	TELEFUNKEN TF-PS2303 Portable Music System with Bluetooth [pdf] Instruction Manual TF-PS2303, Portable Music System with Bluetooth
--	---