



# Home » Telepower Communication » Telepower Communication M1KC Andriod POS Terminal User Manual 📆

## Contents [ hide ]


- 1 Telepower Communication M1KC Android POS Terminal
- 2 Product Description
- 3 Printing instruction
- 4 SIM Card & TF Card Installation
- 5 Card Reading
- 6 Instructions for recharging and battery
- 7 Extremely easy settings
- 8 Battery Installation
- 9 FAQ
- 10 Precautions
- 11 Specification
- 12 Accessories
- 13 Documents / Resources
  - 13.1 References

## **Telepower Communication**

# **Telepower Communication M1KC Android POS Terminal**



# **Product Description**

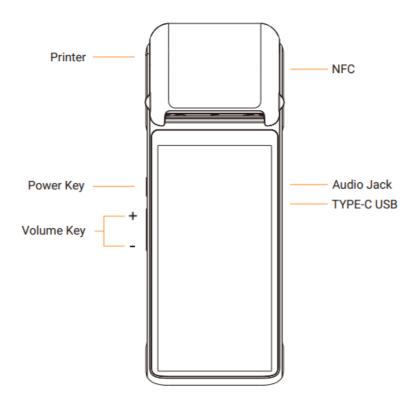

## **Power key**

Short press: wake up the screen, lock the screen.

Long press: long press for 2-3 seconds in power off mode to switch on the device.

Long press for 2-3 seconds in normal operation mode to select power off or reboot.

## Volume key

Volume adjustment.

#### **Printer**


For printing sales slips in power on mode.

## **TYPE-C USB**

For device recharging and development debugging.

#### **Audio Jack**

For listening to songs and data.

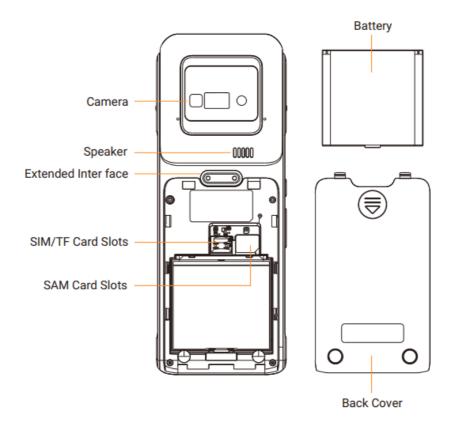

#### Camera

For payment scanning and 1D/2D code quick scanning.

#### **Extended interface**

Mainly used to expand functions.

SIM Card Slots/PSAM Card Slots

Note: To prevent system error, please make sure the device is turned off when you insert or remove the SIM cards.

#### **TF Card Slots**

For a device that adds additional storage space.

**Note:** To prevent system error, please make sure the device is turned off when you insert or remove the TF card.

### **Environmental/Material**

Operating temperature: -5°C~45°C


Storage temperature: -25°C~60°C1.2 M Anti-Drop

## **Printing instruction**

This device supports 58mm thermal paper with specifications of 57±0.5mm\*φ40mm.

- Please open the paper container with the opening hands on both sides of the printer cover.
- Feed the paper correctly into the paper container in the direction as shown, and pull some paper outside the cutter.
- Close the cover of the paper container to finish printing paper feeding.


**Note:** If the printed paper is blank, please check whether the paper roll has been installed in the correct direction.

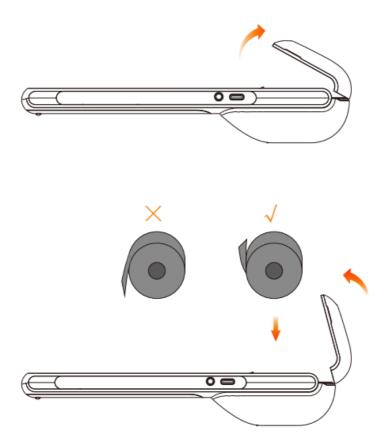


## SIM Card & TF Card Installation


- 1. Take out the back cover, and the card sockets will be shown.
- 2. The left card slot is a SIM&TF card two-in-one card socket. The upper deck can support the insertion of a SIM card and a TF card. The lower deck can support the

insertion of a SIM card. Notes: In the upper deck, the SIM card needs to be inserted horizontally into the card slot, and in the lower deck, the SIM card needs to be inserted into the card slot vertically.

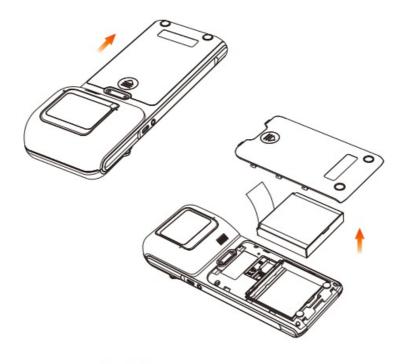


Remove the sticker

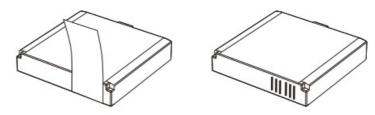


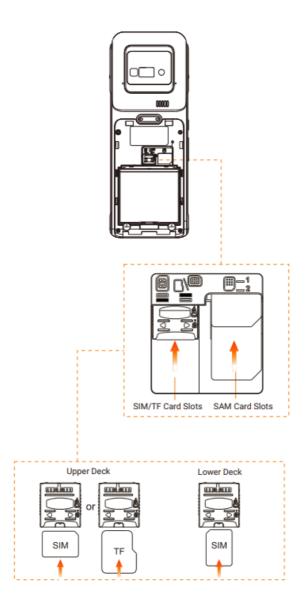

- 1. First, you need to remove the card from the upper deck.
- 2. Withdraw the metal tray from the middle of the two decks.
- 3. Push the metal tray into the middle of the of two decks again.
- 4. Finally, remove the SIM card from the lower deck.

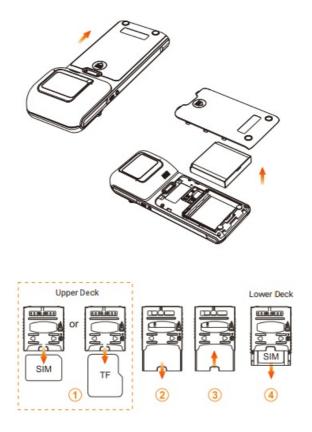

1. Push the PSAM card into the socket correctly. Be sure the PSAM card is in the right position.

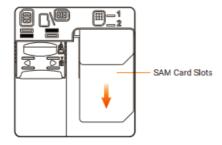

# **Card Reading**

NFC tag, put the NFC tag over the printer case of the device.




# Instructions for recharging and battery

This device supports charging by a USB cable.

Connect the adapter to the power outlet.

Connect the USB cable to the interface of the device for recharging.

**Note:** The screen will display a recharging icon during the recharging process. If the recharging icon does not appear, please check whether the interface is well connected.

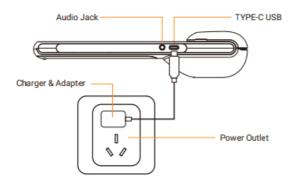

## **Extremely easy settings**

Only a few steps to activate an intelligent business device

- 1. Set 2G/3G/4G: when power off, insert the 2G/3G/4G card and then power on. (Refer to the technical specifications for the support of cards)
- Long press the power key for 2~3s to activate the backlight of the screen, and then operate after entering the startup/booting screen for the first time.
   modes for accessing the Internet are available.


#### 3. Set WiFi

Click the Set button, activate WLAN to enter the WLAN searching screen, and wait it to list all usable WLAN hot spots.

Click the WLAN to be connected, and enter the access password in case of an encrypted network.

# **Battery Installation**

- 1. Remove the battery cover, then put the battery into the battery compartment.
- 2. Put the battery into the holder. Install the battery in rthe ight direction.

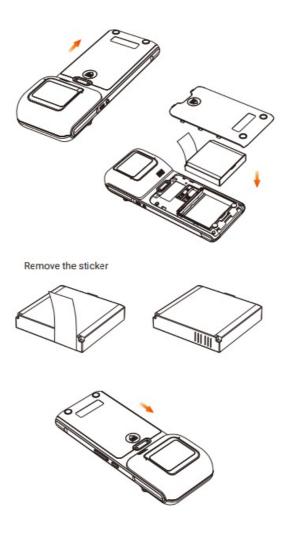

## Warning:

- This device uses a custom battery. Please not replace other types of batteries.
   CAUTION: Attempting to replace the incorrect battery can cause an explosion from the battery.
- 2. Do not put the battery into the fire or a hot oven, or undergo mechanical shock or crush, there is a danger of explosion.
- 3. If the battery is not used for a long time (>6 months), please charge it to 50%~70%, then remove it from the device, and store it in an environment of 10°C~35°C, 45%-85 % RH. It is recommended that the battery be recharged every 3 months to avoid damage.
- 4. If the device is not used for more than 2 weeks, please unplug the battery to prevent overcharging.

## **FAQ**

## **Booting failute(e.g.low battery)**

Plug the cable and charge for 3 minutes.

Check if the screen displays the normal charging status.

## System crash

Long-press the Power Key for 11 seconds or open the back cover, and dial the battery to restart the device.

## **Precautions**

## Safely Warning

Connect the AC plug to AC socket corresponding to the marked input of the power adapter; Do not use in the presence of any potentially explosive gas.

To avoid injury, unauthorized persons shall not open the power adapter.

In that case, the use may be required to take adequate measures against interference

## **Battery replacement**

- 1. Explosion danger may arise if replacing with the wrong battery is used.
- 2. The replaced battery shall be disposed of by maintenance personnel, and please do not throw it into fire.

## **Significant Safety Instructions**

This terminal is a handheld device, and the user shall protect the password from being peered at by others while entering the password;

Do not install or use the device during lightning storms to avoid the potential risks of lightning shock.

Please turn off the power immediately if you notice abnormal odor, heat or smoke.

The paper cutter is sharp, please do not touch.

## Notes for battery

- Do not disassemble the battery. Because it may lead to an internal short circuit, causing fire, explosion, harmful gas or other problems.
- If the battery will not be used for a long time (>6 months), please charge it to 50%~70% battery level, then take it out of the machine, and store it in an environment of 10°C~35°C, 45%-85 % RH. It is suggested to recharge every 3 months to prevent damage to the battery.

- If the machine is not used for more than 2 weeks, please unplug the battery to prevent damage to the battery from over-discharging.
- It is suggested that the charging time should not exceed 24 hours to extend the battery life.

## **Suggestions**

- Do not use the terminal near water or moisture to prevent liquid from entering the terminal.
- Do not always drop, throw or bend the device;
- Use the terminal in a clean and dust-free environment if possible to prevent small items from falling into the terminal.
- Please do not use the terminal near medical equipment without permission.

## **Statements**

- The Company does not assume responsibility for the following actions:
- Damages caused by use and maintenance without complying with the conditions specified in this guide.
- The Company does not assume any responsibilities for the damages or problems
  caused by optional items or consumables (rather than the initial products or approved
  products of the company). The customer is not entitled to change or modify the
  product without our consent.
- The product's operating system supports official system updates, but if you change the operating system to a third-party POM system or alter the system files by system cracking, it may cause system instability and security risks and threats.

#### **Disclaimer**

AS a result of product upgrading, some details in this document may not match the product, and the actual product shall govern. The Company reserves the right of interpret of this document. The company also reserves the right to alter this specification without prior notice.

## **Specification**

- Processor Quad-Core 2.0GHz
- OS Android 12
- Memory
  - o 2GB DDR, 32GB eMMC, Ext. TF card slot
  - 3GB DDR, 32GB eMMC (Optional)
- Display 6-inch, 720\*1440
- Keypad 1 power key, 2 volume keys
- Thermal Printer Paper width: 58mm, @ 40mm
- Contactless Card Reader (Optional) ISO14443 Type A/B, Mifare®
- Camera
  - 5M Pixel, auto focus
     (Barcode software decoding)
- 2D Barcode Reader (Optional) Hard Decoding
- SIM Slots
  - ∘ 1 Nano SIM slot|
  - 2 Nano SIM slots (Optional)
  - eSIM slot (Optional)
- SAM Slots (Optional) 2 SAM slots
- Communications LTE/WCDMA/GPRS/WiFi/Bluetooth
- GPS (Optional) Built-in
- Peripheral Ports 1 Tpye-C(OTG), 1 Audio Jack
- Audio
  - Digital Audio Speaker, Microphone (Optional)
  - Power Supply Fast charging supported
- Battery 7.6V/3500mAh, Li-ion
- Environmental
  - Operating temperature: -5°C~45°C
  - Storage temperature: -55°C~60°C
- MDM (Optional) Mobile Device Management
- Certification CE ,FC,C RoHS

## **Accessories**

Main Device 1 Set

- Power Adapter 1 Piece
- Printer Paper 1 Piece
- User Guide 1 Volume

## Android is a trademark of Google LLC.

Before using the POS terminal, ensure that all the accessories above are included in the package.

If you have any problems, please contact the services provider of the distributors.

# **Documents / Resources**



Telepower Communication M1KC Andriod POS Terminal [pdf] User Manu

al

2AJ2B-M1K, 2AJ2BM1K, m1k, M1KC Andriod POS Terminal, M1KC, Andriod POS Terminal, POS Terminal

## References

- User Manual
- Telepower Communication
- 2AJ2B-M1K, 2AJ2BM1K, Andriod POS Terminal, M1K, M1KC, M1KC Andriod POS Terminal, POS Terminal, Telepower Communication
  - —Previous Post

**Telepower Communication F6 Smart Terminal Instruction Manual** 

Leave	a	con	nm	er	ιt
-------	---	-----	----	----	----

Your email address will not be	published. Red	quired fields are marked*
--------------------------------	----------------	---------------------------

Comme	ent *			

Name
Email
Website
☐ Save my name, email, and website in this browser for the next time I comment.
Post Comment

## Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.