

TELESIN T10 Remote Controller User Guide


Home » **TELESIN** » **TELESIN** T10 Remote Controller User Guide





Contents [hide

- 1 Overview
- 2 LCD Display
- 3 Button
- 4 Pairing
- 5 Pair Up 5
- 6 Charging
- 7 Documents /
- **Resources**
- **8 Related Posts**

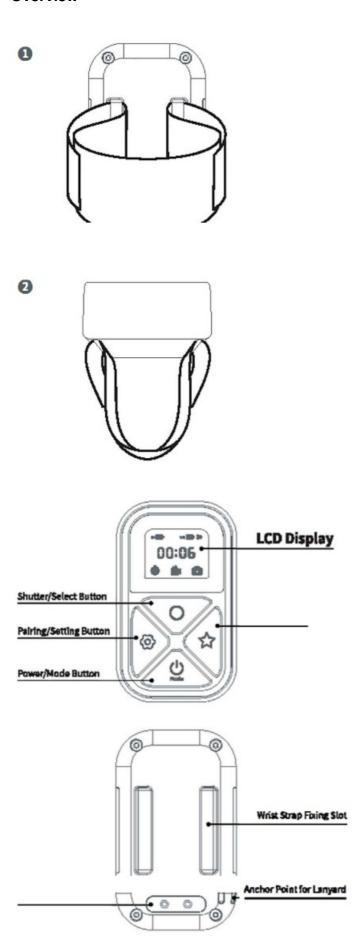

LCD Display

RC D	Remote Control Battery	•	Time Lapse
CHI	Camera Battery	*	Video
刺	Bluetooth	Δ	Photo
00:06	Recording Time/ Number of Videos/Photos		

Button



Shutter/Select Button

1s Short Press

Shoot photo, turn on/off recording

3s Long Press Enter phone pairing mode, only photo function in phone mode, Bluetooth name is 'T-10"



Star Button

When in the three main modes 'Video", 'Photo", "Time-lapse" Set the current main mode to 'Quick mode' Enter the main mode ear responding to the "Quick mode



Mode Button [Power/Mode Switching

2s Long press
Power On
3s long press
Power Off
1s Short press
Mode Switching
(After pairing, you can control the camera on and of)



Setting Button (Pairing, small mode switching)

1s short press

The camera switches between the normal sub-modes of the main mode.

(The sub-modes of different camera models are different and cannot be standardized)

Pairing

Setting Button

3s Long Press

The remote control enters pairing mode, and the Bluetooth indicator flashes

Camera Setting

Select connections > Connected Device > Remote control put the Camera into Pairing mode wait for a successful pairing message to appear on the camera screen

If the pairing fails, select Reset Connection in the camera setting and repeat the process.

If the camera has already been paired, you don't need to pair it again when you connect the remote control next

time, just make sure the wireless Connection of the camera has been turned on, and it will be connected automatically after a few moments. When the camera Es not used for long time, the wit connection may be turned off completely so please unplug the camera battery and plug It back In to activate the wireless connection.

Pair Up 5

1. Camera mode

In the state of the first camera connected, long press the pairing button 3 seconds remote control Bluetooth Indicator flashing you can connect the second camera and so on, the maximum number of connected 5.

2. Status Display

The display status of the first camera connected

3. Power On/OFF

- All the connected camera can be controlled at the same time to (Shutdown)
- Only the first connected camera can remain connected in the shutdown state
- The first connected camera can be controlled to (Power on)
- Connecting the next four camera requires the previous steps to be performed again.

Charging

Plug the charging cable into the charging slot. connect the other and of the cable a computer or other USB power source.



Charging Time 2.5h Usage Time 10h



Please keep the charging device away from metal object to prevent fire caused by short circuit.

When Charging the screen lights up and the power indicator starts to work

0-5	Side Blinking		
5-24	Side Always On	- Side Always On	
25-49	1/3 Power	1/3 Power	
50-74	2/3 Power	2/3 Power	
75-100	Full Power	Full Power	

Documents / Resources



<u>TELESIN T10 Remote Controller</u> [pdf] User Guide GP-RMT-T10, GPRMTT10, 2A6I2-GP-RMT-T10, 2A6I2GPRMTT10, T10, Remote Controller, T1 0 Remote Controller

Manuals+, home

privacy