

TELTONIKA 4G/LTE Wi-Fi Router User Guide

Home » teltonika » TELTONIKA 4G/LTE Wi-Fi Router User Guide 1

Contents

- 1 TELTONIKA 4G/LTE Wi-Fi
- Router
- **2 FRONT VIEW**
- **3 BACK VIEW**
- **4 POWER SOCKET PINOUT**
- **5 HARDWARE INSTALLATION**
- **6 LOGIN TO DEVICE**
- **7 TECHNICAL INFORMATION**
- **8 SAFETY INFORMATION**
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts



TELTONIKA 4G/LTE Wi-Fi Router



Wiki knowledge base https://wiki.teltonika-networks.com/




FRONT VIEW


FRONT VIEW Mobile network type LEDSs Mobile signal strength indication LEDs • Ethernet 0 0 2G 3G 4G Power socket oports Power LED o-SIM **POWER** LAN WAN SIM holder LAN LED **WAN LED**

BACK VIEW

BACK VIEW

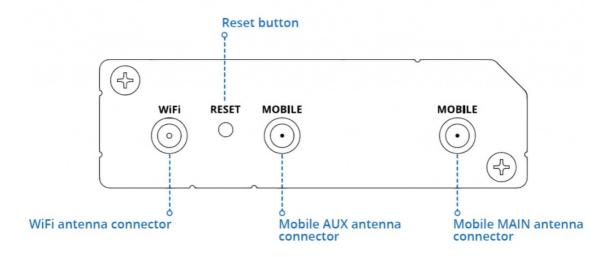


POWER SOCKET PINOUT

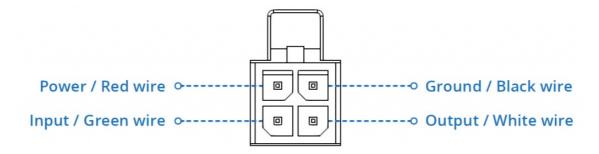

HARDWARE INSTALLATION

- 1. Push the SIM holder button with the SIM needle.
- 2. Pull out the SIM holder.
- 3. Insert your SIM card into the SIM holder.
- 4. Slide the SIM holder back into the router.
- 5. Attach all antennas.
- 6. Connect the power adapter to the socket on the front of the device. Then plug the other end of the power adapter into a power outlet.


7. Connect to the device wirelessly using SSID and password provided on the device information label or use an Ethernet cable connected to LAN port.

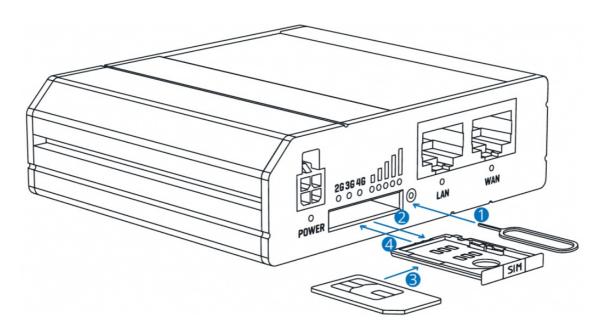

LOGIN TO DEVICE

- 1. To enter the router's Web interface (WebUI), type http://192.168.1.1 into the URL field of your Internet browser.
- 2. Use login information shown in image A when prompted for authentication.
- 3. After you login, you will be prompted to change your password for security reasons. The new password must contain at least 8 characters, including at least one uppercase letter, one lowercase letter and one digit. This step is mandatory and you will not be able to interact with the router's WebUI before you change the password.
- 4. When you change the router's password, the Configuration Wizard will start. The Configuration Wizard is a tool used to setup some of the router's main operating parameters.
- 5. Go to the Overview page and pay attention to the Signal Strength indication (image B). To maximize the cellular performance try adjusting the antennas or changing the location of your device to achieve the best signal conditions.



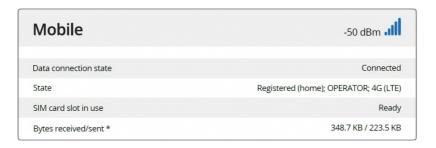

TECHNICAL INFORMATION

RF technologies	2G, 3G, 4G, WiFi
Max RF power	33 dBm@GSM, 24 dBm@WCDMA, 23 dBm@LTE, 20 dBm@ WiFi
Bundled accessories specifications*	
Power adapter	Input: 0.4 A@100-200 VAC, Output: 9 VDC, 1A, 4-pin plug
Mobile antenna	698~960/1710~2690 MHz, 50 Ω, VSWR<3, gain** 3 dBi, omnidirectional, SM A male connector
WiFi antenna	2400~2483,5 MHz, 50 Ω, VSWR<2, gain** 5 dBi, omnidirectional, RP-SMA m ale connector

^{*}Order code dependent.

SAFETY INFORMATION

RUT240 router must be used in compliance with any and all applicable national and international laws and with any special restrictions regulating the utilization of the communication module in prescribed applications and environments.

- Hereby, TELTONIKA NETWORKS declares that this RUT240 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.
- Instruction Manual: Connect the power adapter to turn on the device. Open 192.168.1.1 in your web browser to configure it. More information on https://wiki.teltonika-networks.com/

www.teltonika-networks.com



Documents / Resources

^{**}Higher gain antenna can be connected to compensate for cable attenuation when a cable is used. The user is responsible for the compliance with the legal regulations.

References

- <u>Amazone service client telephone tel contacter contact Amazon</u>
- In the latest terms of t
- <u>wiki.teltonika-networks.com</u>
- <u>wiki.teltonika-networks.com/</u>

Manuals+.