



## TELTONIKA Gigabit Ethernet Router User Guide

[Home](#) » [teltonika](#) » TELTONIKA Gigabit Ethernet Router User Guide 

TELTONIKA Gigabit Ethernet Router User



RUTX08

Wiki Knowledge base <https://wiki.teltonika.lt/>



## Contents

### 1 Overview

#### 1.1 FRONT VIEW

#### 1.2 BACK VIEW

### 2 POWER SOCKET

#### PINOUT

### 3 LOGIN TO DEVICE

### 4 SETUP WIZARD

### 5 SAFETY INFORMATION

### 6 CE Compliance


### 7 Documents / Resources

#### 7.1 References

### 8 Related Posts

## Overview


### FRONT VIEW

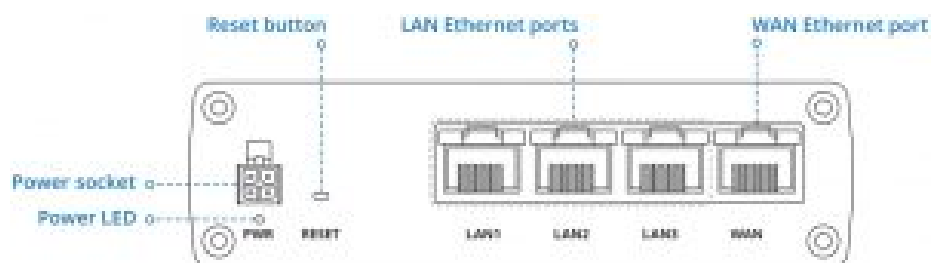

### BACK VIEW



### POWER SOCKET PINOUT

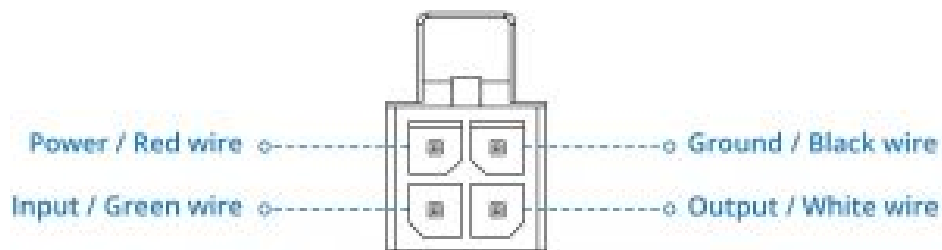

## LOGIN TO DEVICE

1. To enter the router's Web interface (WebUI), type <http://192.168.1.1> into the URL field of your Internet browser.

← → ↻ http://192.168.1.1

**Authorization Required**

Please enter username and password

Username

Password

2. Use login information shown in image A when prompted for authentication.
3. After you log in, you will be prompted to change your password for security reasons. The new password must contain at least 8 characters, including at least one uppercase letter, one lowercase letter, and one digit. This step is mandatory, and you will not be able to interact with the router's WebUI before you change the password.
4. When you change the router's password, the Configuration Wizard will start. The Configuration Wizard is a tool used to set up some of the router's main operating parameters.

## SETUP WIZARD

After logging in to the router's WebUI, you will be prompted to change the default password and the Setup Wizard will start:

1. Choose your time zone and sync the router's time with the browser if needed.

**TIME ZONE SETTINGS**

Current system time Thu Mar 7 14:49:06 2019

Time zone

2. Default LAN settings are recommended unless you have specific requirements for your LAN network.

**LAN CONFIGURATION**

IP address

Netmask

**LAN CONFIGURATION**

IP address ☒

Start

Limit

Lease time

Units

## SAFETY INFORMATION

RUTX08 router must be used in compliance with any and all applicable national and international laws and with any special restrictions regulating the utilization of the communication module in prescribed applications and environments.

- Hereby, TELTONIKA declares that this RUTX08 is in compliance with the essential requirements and other relevant provisions of Directive CE/RED.

**Instruction Manual:** Connect the power adapter to turn on the device. Open 192.168.1.1 in your web browser to configure it. More information on <https://wiki.teltonika.lt>

## CE Compliance



■ This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.




Hereby, Teltonika declares that the radio equipment type RUTX08 is in compliance with Directives: 2014/53/EU, 2014/35/EU, 2014/130/EU. The full text of the EU declaration of conformity is available at the following Internet address: <https://wiki.teltonika.lt/rutx081>

Visit: [www.teltonika.lt](http://www.teltonika.lt)



## Documents / Resources

	<a href="#">TELTONIKA Gigabit Ethernet Router</a> [pdf] User Guide TELTONIKA, RUTX08, Gigabit Ethernet Router
---	--

## References

- [Teltonika - IoT, Internet of Things](#)
- [RUTX08 - Gigabit Ethernet Router | Teltonika Networks](#)
- [Teltonika | Wiki Knowledge Base](#)
- [Teltonika | Wiki Knowledge Base](#)