


RUT361 Cellular
Router



TELTONIKA RUT361 Cellular Router Instruction Manual

[Home](#) » [teltonika](#) » TELTONIKA RUT361 Cellular Router Instruction Manual 

Contents

- [1 TELTONIKA RUT361 Cellular Router](#)
- [2 Safety information](#)
- [3 FCC](#)
- [4 Operating conditions](#)
- [5 Product handling](#)
- [6 Front view](#)
- [7 Back view](#)
- [8 Hardware installation](#)
- [9 Configure your computer LAN \(Windows\)](#)
- [10 Login to device](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)



TELTONIKA RUT361 Cellular Router



- Namespaces
 - PagePage
- Variants
- Views
 - Read
 - View source
 - View history
 - PDF Export
- More
 - Read
 - View source
 - View history
 - PDF Export
 - Page
 - Discussion
- Search
 - Search Teltonika Networks Search Go

QSG RUT361

From Teltonika Networks Wiki

Main Page > RUT Routers > RUT361 > QSG RUT361

This Wiki page contains the online version of the Quick Start Guide (QSG) for the RUT361 LTE Router. Here you will find an overview of the various components on the front and back of a RUT361 device, hardware installation instructions, first login information, device specifications, and general safety information. It is highly recommended to acquaint yourself with the Quick Start Guide before using the device. You can also locate a printed version of the Quick Start Guide in the packaging box of your device.

Safety information

Before starting operating the device, please review recommendations and precautions to minimize the possibility of accidents. Safety precautions presented are supplementary and subject to the local safety regulations. When various operations are executed on the device, the user must fully follow the safety instructions and recommendations provided with the device.

General

Radio specifications	
RF Technologies	3G, 4G, WiFi
Max RF power	25 dBm@WCDMA, 25 dBm@LTE, 20 dBm@WiFi
Bundled accessories specifications*	
Power adapter	Input: 0.6A@100-240 VAC, Output: 12 VDC, 1.5A, 4-pin plug
Mobile antenna	698~960/1710~2690 MHz, 50 Ω, VSWR<3, gain** 2.49dBi@800 ~ 960 MHz; 4.08dBi@1710 ~ 2690 MHz, omnidirectional, SMA male connector
WiFi antenna	2400~2500 MHz, 50 Ω, VSWR<2.5, gain** 2.91 dBi, omnidirectional. RP-SMA male connector

1. Order code dependant.
2. Higher gain antenna can be connected to compensate for cable attenuation when a cable is used. The user is responsible for the compliance with the legal regulations.

RUT361 ethernet router must be used in compliance with any and all applicable national and international laws and with any special restrictions regulating the utilization of the communication module in prescribed applications and environments.

CE Declaration of Conformity

Detailed compliance information is available at the following internet address: wiki.teltonika-networks.com/view/Certificates (<https://wiki.teltonika-networks.com/view/Certificates>).



This sign means that is necessary to read the User's Manual before you start using the device.



This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.



Hereby, TELTONIKA NETWORKS declares that this RUT361 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://wiki.teltonika-networks.com/view/RUT361_CE/RED.



Hereby, TELTONIKA NETWORKS declares that the radio equipment type RUT361 is in compliance with Radio Equipment Regulations 2017.

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.ISED Canada This device contains license-exempt transmitters)/receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This radio transmitter IC: 26511-RUT361 has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

Antenna type	Maximum antenna gain (dBi)	Impedance (ohm)
Mobile antenna	4.08	50
WiFi antenna	2.91	50

Detailed compliance information is available at the following internet address: wiki.teltonika-networks.com/view/Certificates (<https://wiki.teltonika-networks.com/view/Certificates>).



This sign means that is necessary to read the User's Manual before you start using the device.



This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.

RF exposure

This device meets the official requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by authorized agencies. The device must be used with a minimum separation of 20 cm from a person's body to ensure compliance with RF exposure guidelines. Failure to observe these instructions could result in your RF exposure exceeding the applicable limits.

External antennas used with RUT361 must be installed to provide a distance of at least 20 cm from any people and must not be co-located or operated in conjunction with any other antenna or transmitter.

Any external antenna gain must meet RF exposure and maximum radiated output power limits of the applicable rule section.

Operating Frequency / Maximum transmission power		
WCDMA	B1	1920-1980, 2110-2170 MHz, 25 dBm
	B3	1710-1785, 1805-1880 MHz, 25 dBm
	B5 ¹	824-849, 869-894 MHz, 25 dBm
	B8	880-915, 925-960 MHz, 25 dBm
LTE-FDD	B1	1920-1980, 2110-2170 MHz, 25 dBm
	B3	1710-1785, 1805-1880 MHz, 25 dBm
	B5 ¹	824-849, 869-894 MHz, 25 dBm
	B7	2500-2570, 2620-2690 MHz, 25 dBm
	B8	880-915, 925-960 MHz, 25 dBm
	B20	832-862, 791-821 MHz, 25 dBm
	B28	703-748, 758-803 MHz, 25 dBm
LTE-TDD	B38	2570-2620 MHz, 25 dBm
	B40	2300-2400 MHz, 25 dBm
	B41 ²	2496-2690 MHz, 25 dBm
	B42	3400-3600 MHz, 25 dBm
	B43	3600-3800 MHz, 25 dBm
Wi-Fi 2.4 GHz	2412-2472 MHz, 20 dBm	

1 – Not supported in Europe region.

2 – Not supported in Europe and Oceania regions.

FCC Radiation Exposure Statement

This device complies with the relevant FCC RF radiation exposure limit set forth for an uncontrolled environment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter and must be installed to provide a separation distance of at least 20 cm from all persons.

ISED Canada Statements

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Operating conditions

- Operating temperature: -40° to +40° Celsius
- Humidity should be in the range of 10% to 90% (non-condensing). Only use the device in dry environments.
- Out of direct sunlight
- Away from heat source, corrosive substances, salts, and flammable gases

Attention: operation outside the permissible range can considerably shorten the service life of the device.

Faulty and damaged products

- Do not attempt to disassemble the device or its accessories.
- Only qualified personnel must service or repair the device or its accessories.
- If your device or its accessories have been submerged in water punctured or subjected to a severe fall, do not use until they have been checked at an authorized service center.

Electrical safety

- Only use approved accessories.
- Do not connect with incompatible products or accessories.
- It is recommended to ground devices with grounding terminals before connecting them to power. Failure to ground appropriately might result in a shock hazard. The cross-sectional area of the protective grounding conductor should be at least 1 mm².

 
Product handling

- You alone are responsible for how you use your device and any consequences related to its use.
- Use of your device is subject to safety measures designed to protect users and their environment.
- Always treat your device and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your device or its accessories to open flames, lit tobacco products, liquid, moisture, or high humidity.
- Do not drop, throw or try to bend your device or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories. Do not paint your device or its accessories.
- Do not attempt to disassemble your device (exemptions for devices that require disassembly for SIM insertion) or its accessories: it does not contain any user-serviceable parts. For safety reasons, the equipment should be opened only by qualified personnel.
- Make sure to use ESD personal protective equipment while the equipment is serviced.
- Do not use your device in an enclosed environment where heat dissipation is poor.
- Prolonged use in such space may cause excessive heat and raise ambient temperature, which will lead to the automatic shutdown of your device or the disconnection of the mobile network connection for your safety. To use your device again after such a shutdown, cool it in a well-ventilated place before turning it on.
- Please check all national laws and local regulations for the disposal of electronic products.
- Do not operate the device where ventilation is restricted.
- Do not use or install this product near water to avoid fire or shock hazards.
- Avoid exposing the equipment to rain or damp areas.
- Arrange power and Ethernet cables so that they are not likely to be stepped on or have items placed on them.
- Ensure that the voltage and the rated current of the power source match the device's requirements. Do not connect the device to an inappropriate power source.
- During a thunderstorm, no operations should be carried out on the device and cables.
- The unit must be powered off where blasting is in progress and explosive atmospheres are present or near medical life support equipment.
- Do not leave your device and its accessories within reach of small children or allow them to play with it. They


could hurt themselves or others and could accidentally damage the device. Your device contains small parts with sharp edges that may cause an injury choking hazard.

- Like any wireless device, this device operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless device for emergency communications or otherwise use the device in situations where the interruption of data connectivity could lead to death, personal injury, property damage, data, or other loss.
- The device may become warm during regular use.

Front view

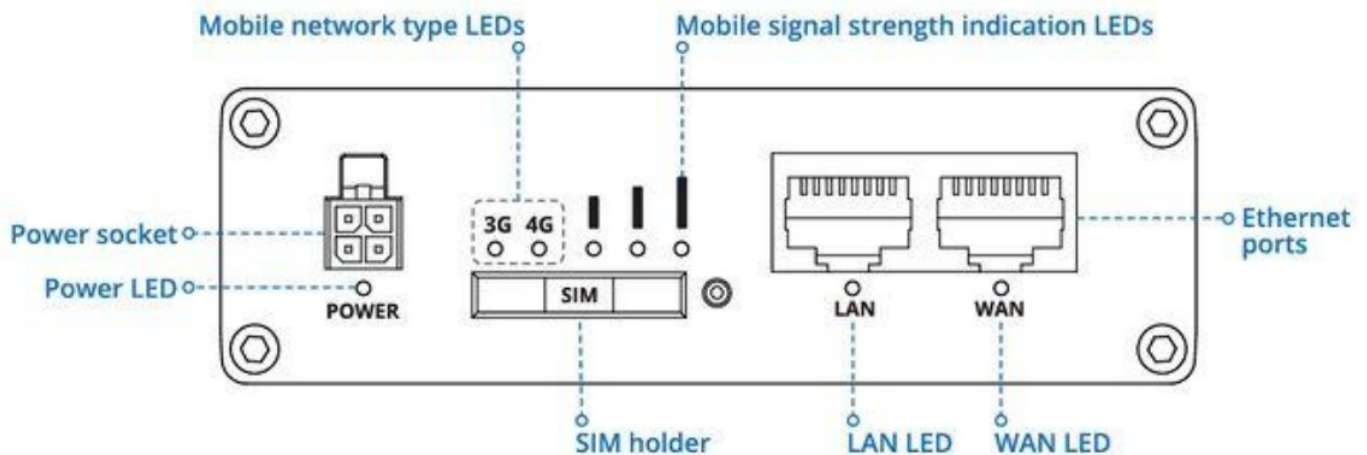


Back view

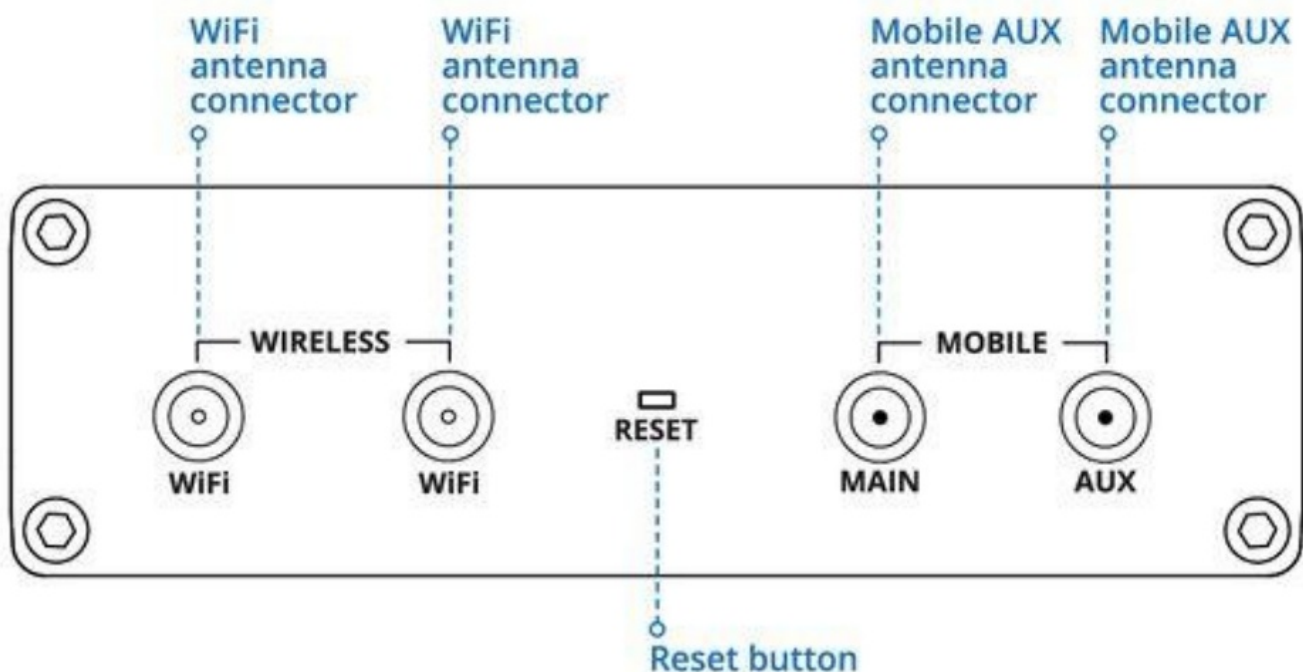 

Connectors

POWER SOCKET PINOUT

NO.	DESCRIPTION	WIRE COLOR
1	Power	Red
2	Ground	Black
3	I/O	Green
4	I/O	White

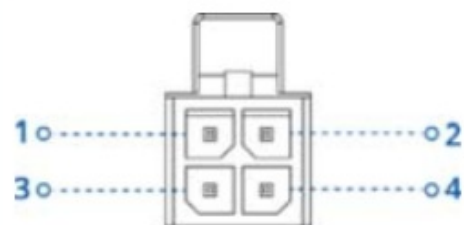 


Video Quick Start Guide

Need some help setting up your new Teltonika Networks RUT361 industrial cellular router? Watch our quick start guide video and follow the step by step instructions to easily set up your new router for operation.




Hardware installation

 
Locate the SIM Adapter kit.

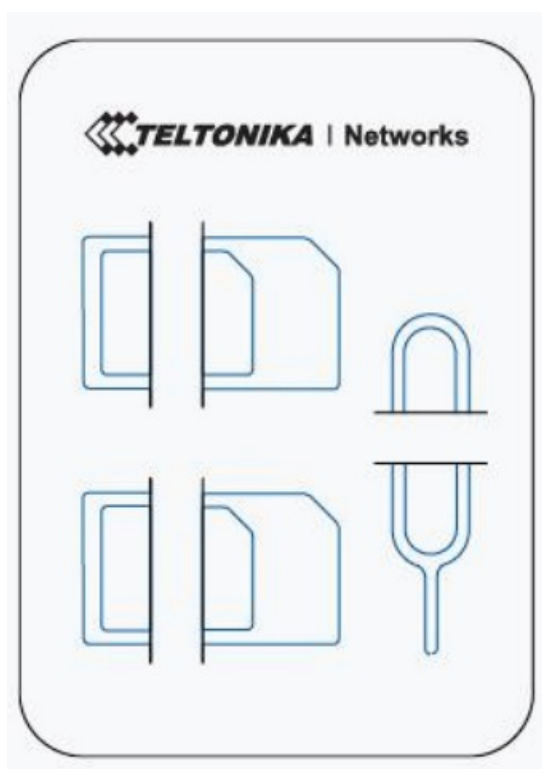


Pull out the SIM holder.

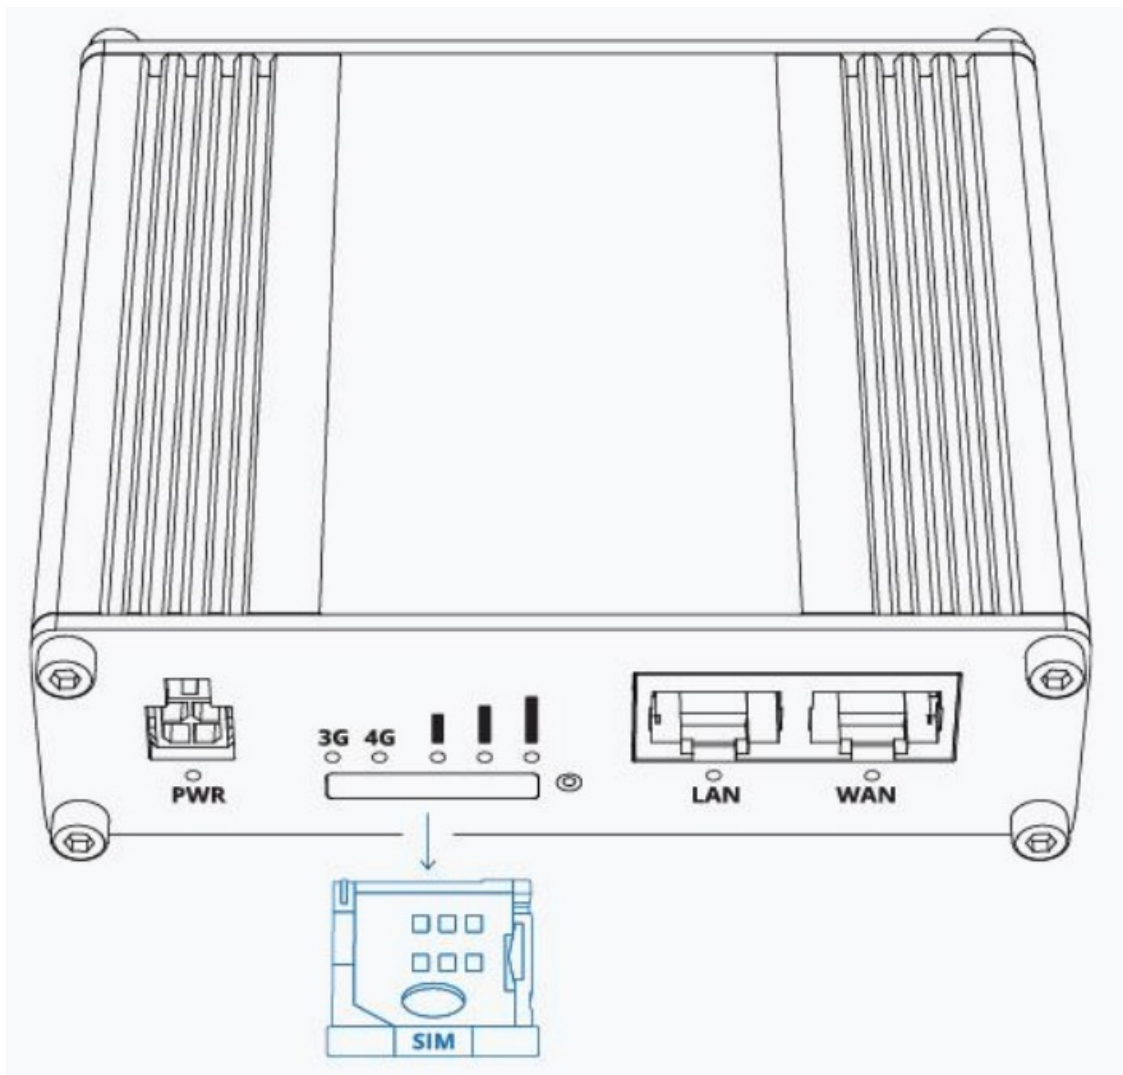 

 
Slide the SIM holder back into the router.

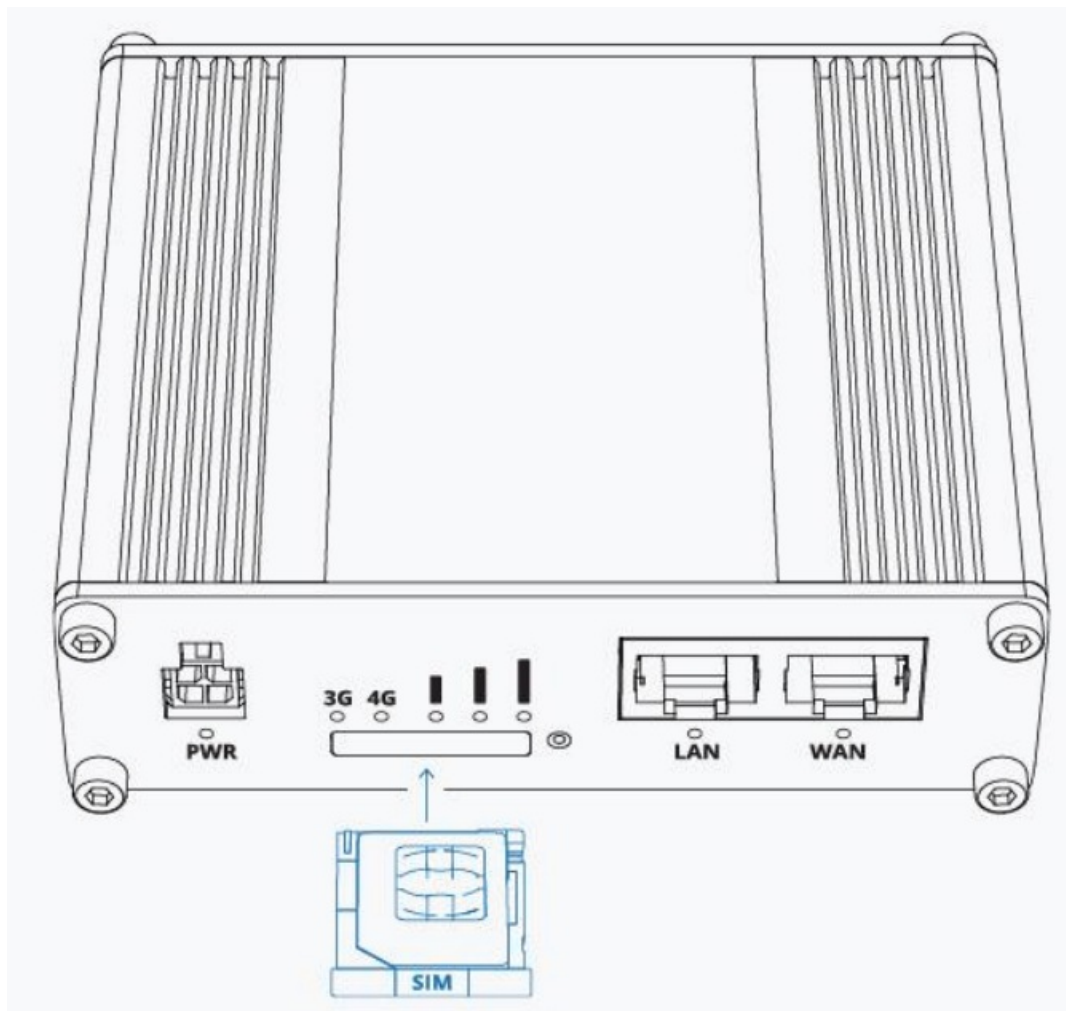

 Attach both WiFi antennas to connectors labeled “WiFi.”

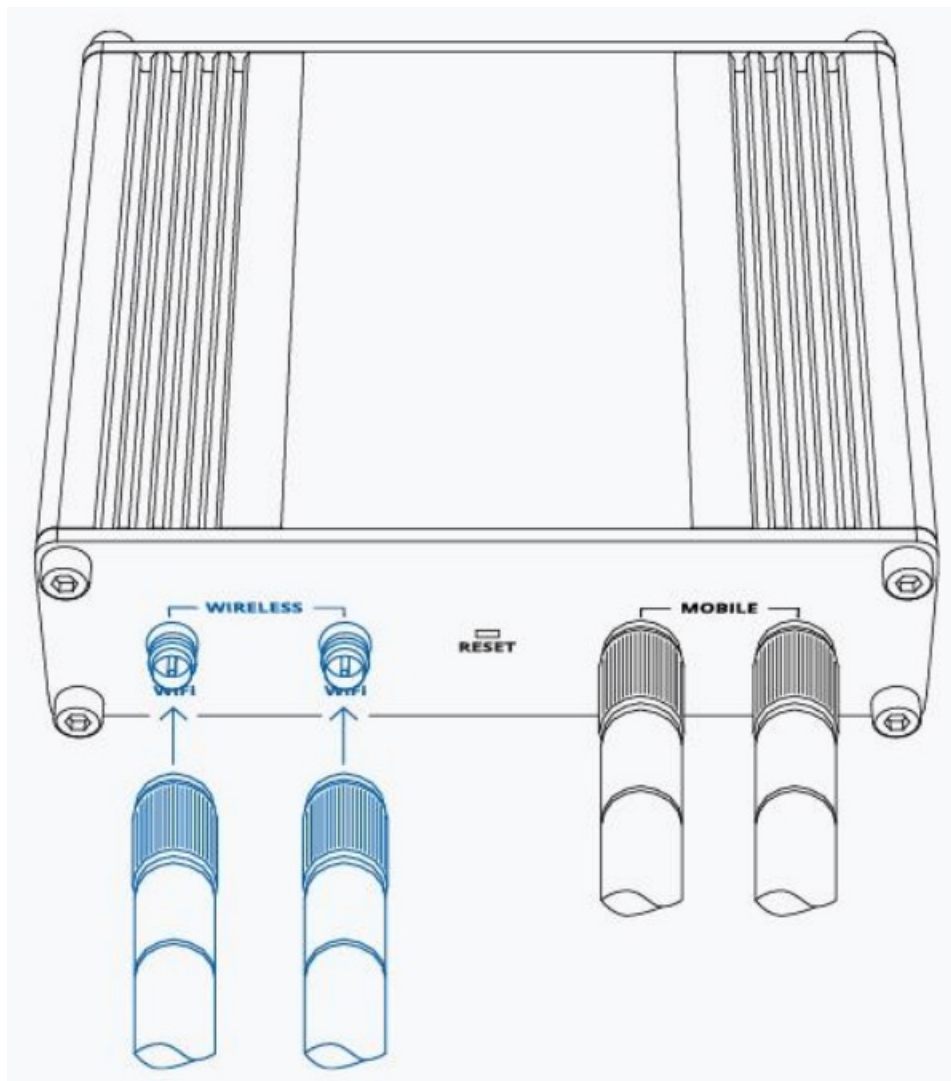


 Connect to the device wirelessly using SSID and password provided on the device information label or use an Ethernet cable connected to the LAN port.

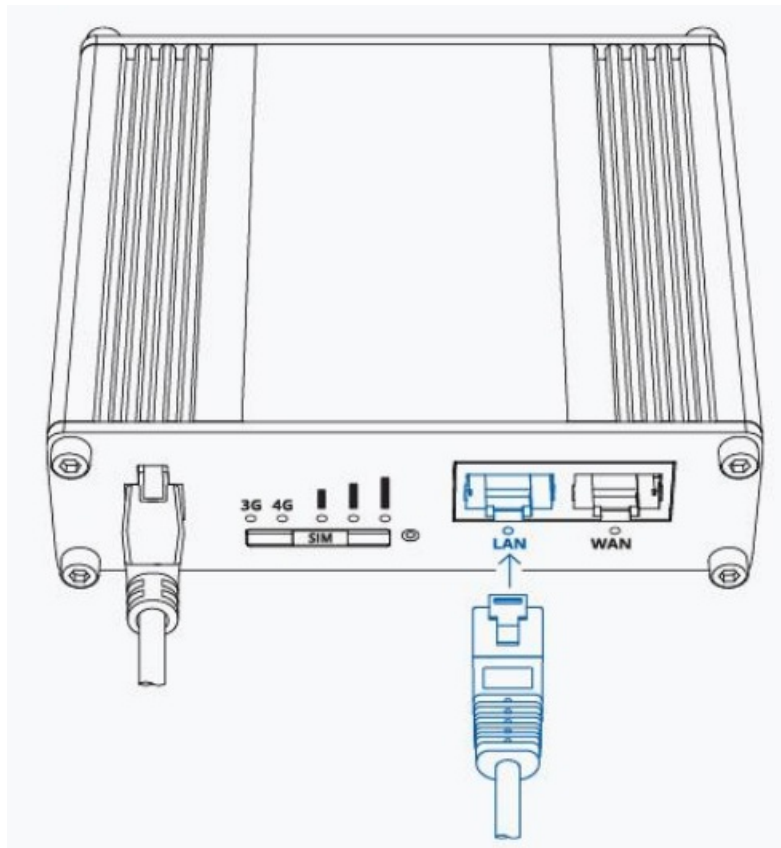

Configure your computer LAN (Windows)

 1. Ensure the Network connection is Enabled. Go to Start – Control Panel – Network and Internet – Network and Sharing Center. Click on the Change adapter settings in the left panel, then right-click on Network Adapter, and select Enable.

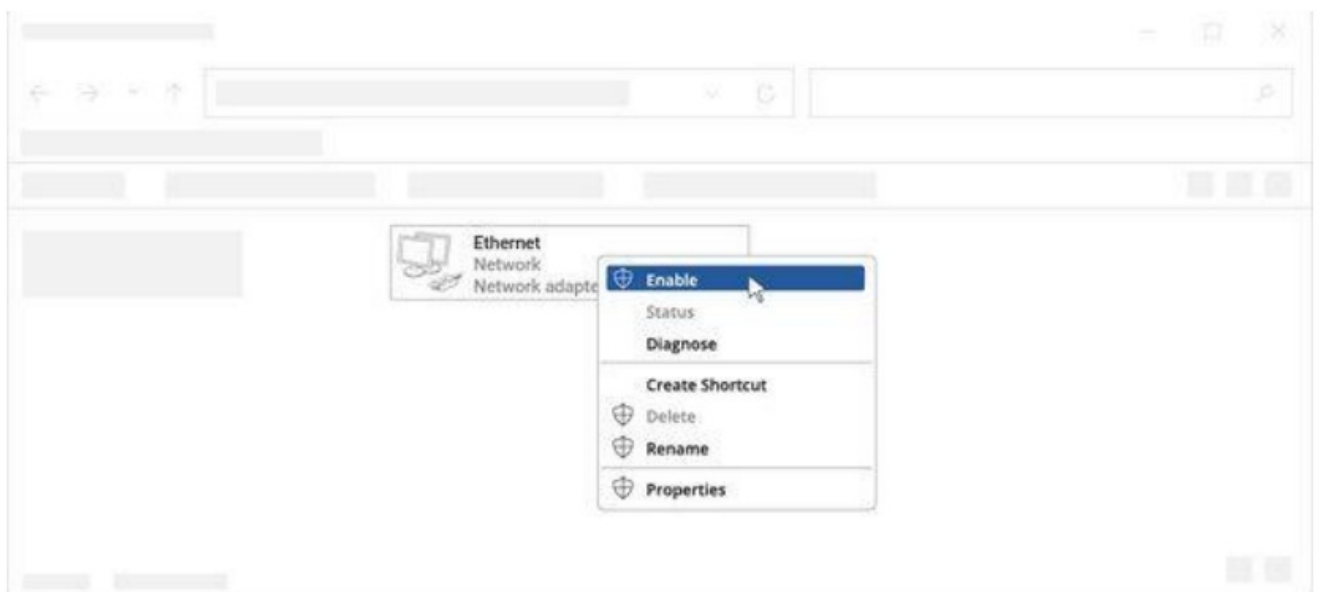


2. Check if IP and DNS are obtained automatically. Right-click on Wireless Network Adapter and select Properties. Then select Internet Protocol Version 4 and click Properties.
3. If not selected, check to obtain an IP address and obtain DNS server address automatically. Click OK.



Configure your computer Wi-Fi (Windows)

 
1. Ensure the Wireless network connection is Enabled. Go to Start – Control Panel – Network and Internet – Network and Sharing Center. Click on the Change adapter settings in the left panel, then right-click on Wireless Network Adapter, and select Enable.

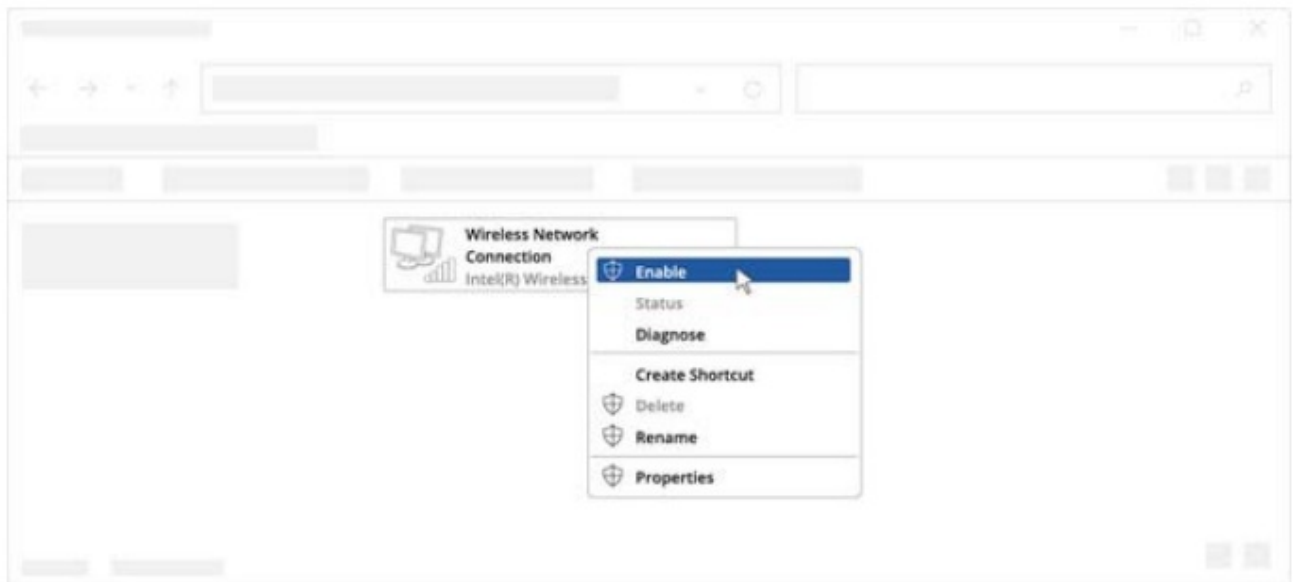

2. Check if IP and DNS are obtained automatically. Right-click on Wireless Network Adapter and select Properties. Then select Internet Protocol Version 4 and click Properties.
3. If not selected, check to obtain an IP address and obtain DNS server address automatically. Click OK.



 4. Connect to a wireless network by right-clicking on Wireless Network Adapter and selecting Connect.

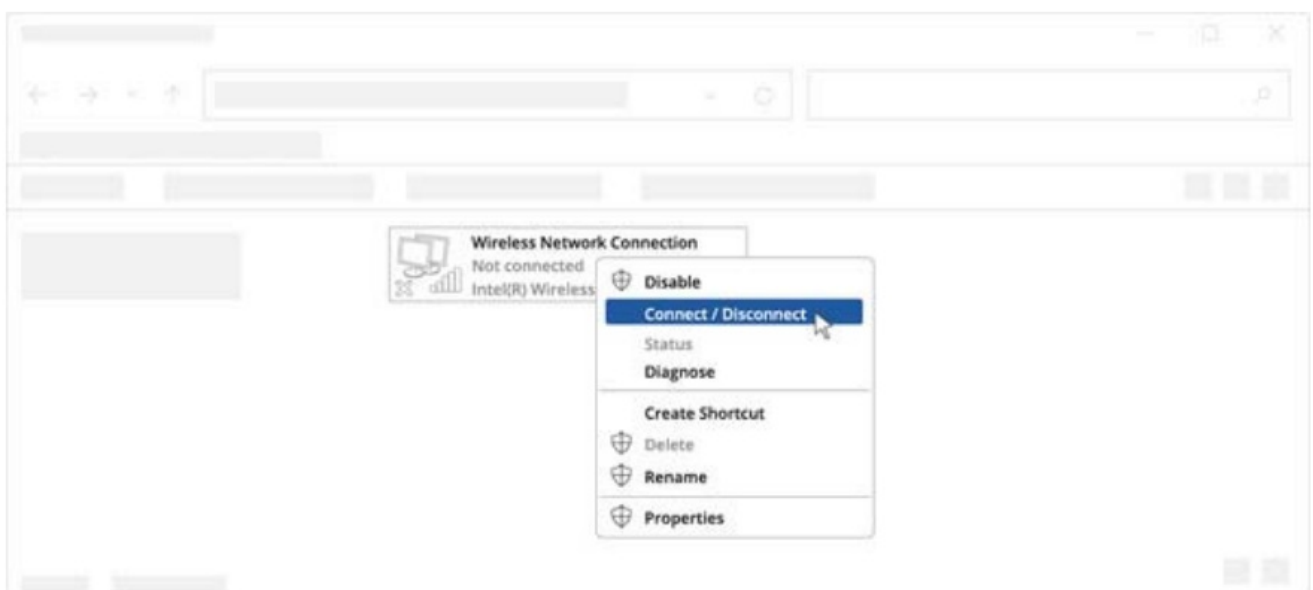


5. Choose the wireless network RUT360 **** from the list and click Connect. Enter the Wi-Fi password located on the device's label.




Login to device

 1. To enter the router's Web interface (WebUI), type `http://192.168.1.1` into the URL field of your Internet browser.
2. When prompted for authentication enter the username `admin` and enter the password located on the device information label/engraving.

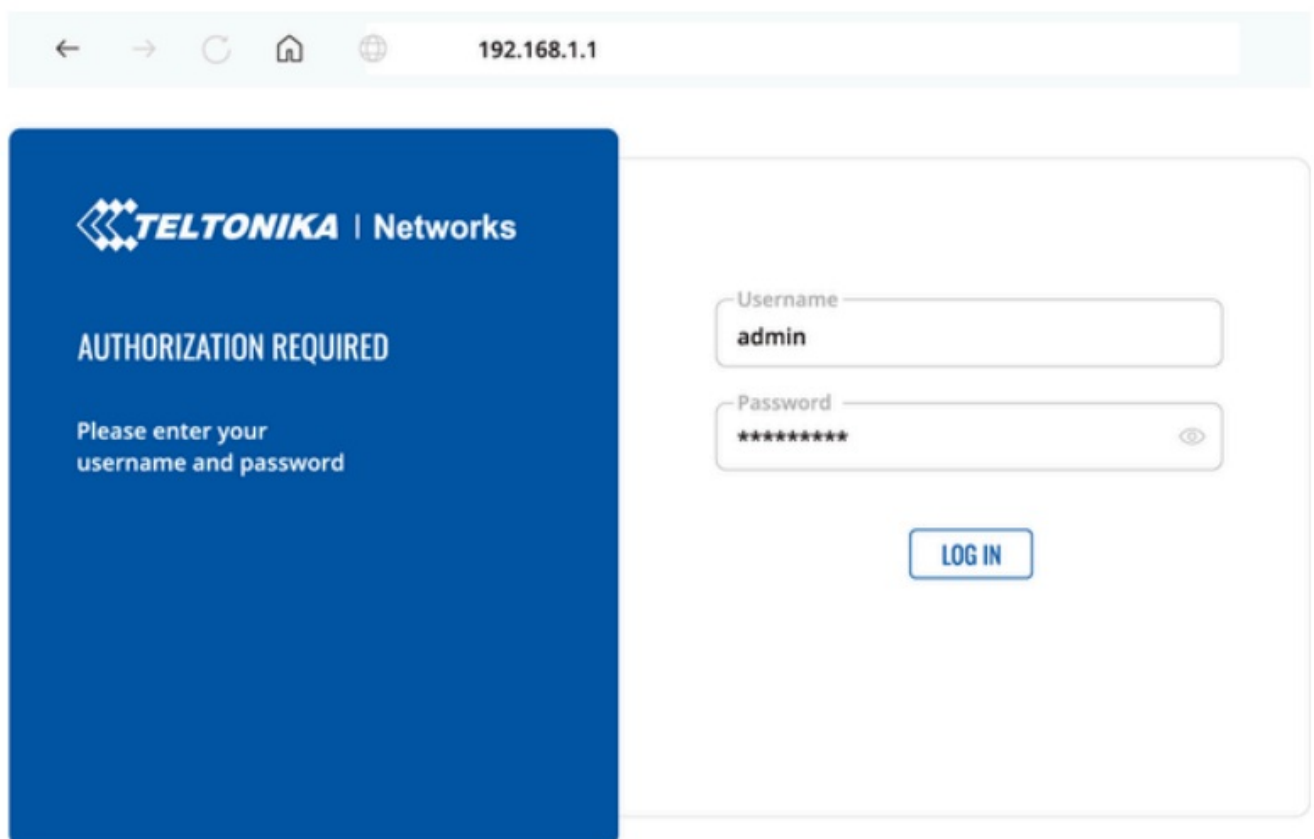

3. After logging in, you must set a new password for security reasons. You will not be able to interact with the router's WebUI until the default password is changed. The new password must consist of a minimum of 8 characters. Requirements: one uppercase letter, one lowercase letter, and one digit.
4. Next, the Configuration Wizard will start to help you set up some of the router's main operational parameters.
5. Finally, let's verify the Mobile signal strength. Go to the Status – Network page and pay attention to the Signal Strength indication. To achieve the best signal conditions and maximize cellular performance, try adjusting the antennas or changing the location of your device. You can find information on signal strength recommendations [here](#).

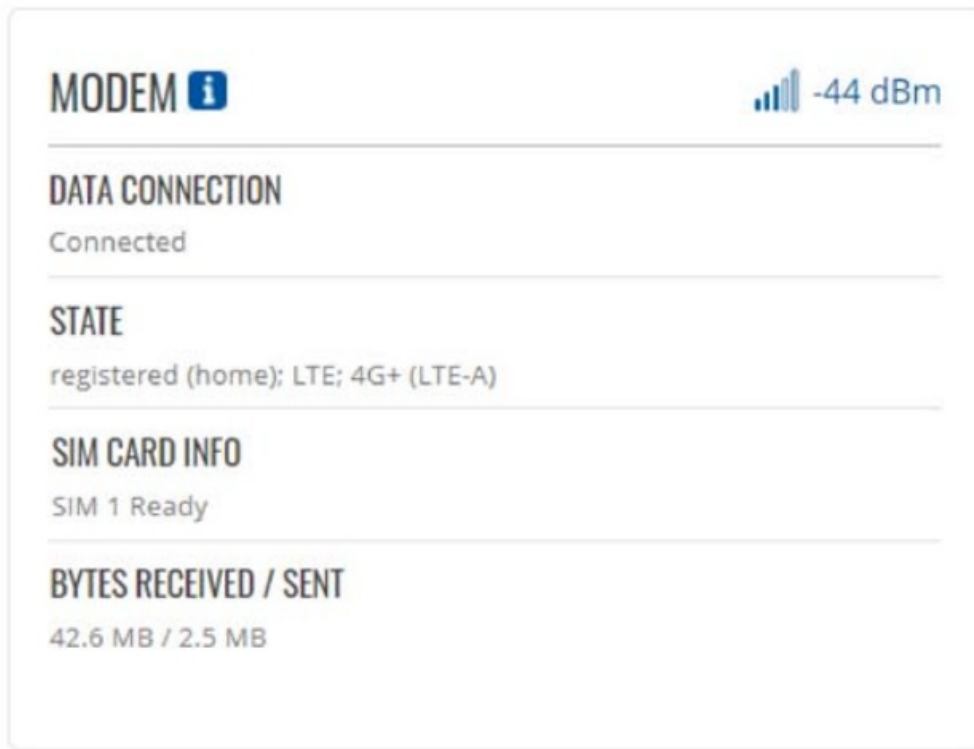 

To achieve the best signal conditions and maximize cellular performance, try adjusting the antennas or changing the location of your device. You can find information on signal strength recommendations [here](#).

SIM card recommendations


- Before installing the SIM cards, please apply a thin layer of dielectric grease to the SIM card contacts for devices used in environments with h-vibration levels. This will help avoid SIM cards losing touch with the SIM slot and prevent unexpected failures.
- Industrial Grade SIM cards are recommended for devices requiring a long lifespan used in environments with extreme temperatures, corrosive or extra humid climates, or hard-to-reach locations.

Retrieved from https://wiki.teltonika-networks.com/incex.php?title=QSG_RUT361&oldid=130949

- This page was last edited on 20 August 2024, at 16:44.
- Use Cases
 - Industrial & automation
 - Energy & utilities
 - Smart city
 - Transportation
 - Enterprise
 - Retail
- Products
- Remote Management System
- Routers
- Gateways
- Switches
- Modems

- [Access points](#)
- [Accessories](#)
- [Support](#)
- [Product support](#)
- [Crowd support forum](#)
- [Warranty & repair](#)
- [EOL products](#)
- [Security center](#)
- [About us](#)
- [Who we are](#)
- [Mission, vision & values](#)
- [Career](#)
- [Contacts](#)

Documents / Resources

	<p>TELTONIKA RUT361 Cellular Router [pdf] Instruction Manual 2AET4RUT361, rut361, RUT361 Cellular Router, RUT361, Cellular Router, Router</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.