



tempmate i16MCS100 i1 Single Use Temperature Indicator User Manual

[Home](#) » [tempmate](#) » tempmate i16MCS100 i1 Single Use Temperature Indicator User Manual 

Contents


- [1 tempmate i16MCS100 i1 Single Use Temperature Indicator](#)
- [2 Operation Instructions](#)
- [3 Using Notes](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)




tempmate i16MCS100 i1 Single Use Temperature Indicator



Single-Use Temperature Indicator for Cold Chain Temperature Monitoring

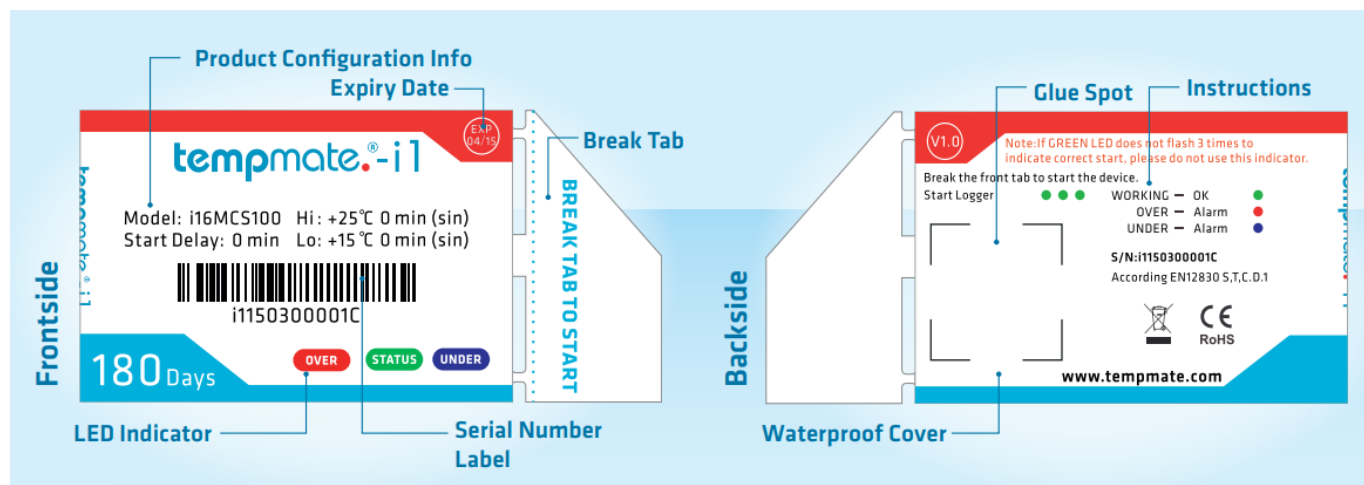

Operation Instructions

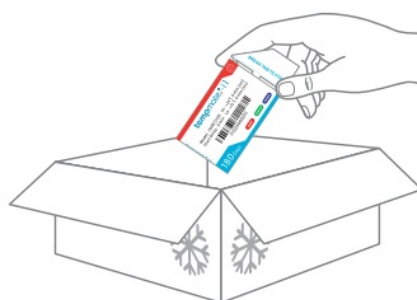

- STATUS** Ok
- UNDER** Lower threshold breached
- OVER** Upper threshold breached

1. Break the tab to start the device – notice that the green LED flashes three times to indicate a correct start.
2. Attach the started tempmate.®-i1 to your shipment.
3. Check the status after receiving the goods.

Using Notes

1. Take care of the expiry date
2. Don't hold the indicator too long in your hand (false alarm through self-heating)
3. Before using, cool or heat the indicator to operating temperature
4. The indicator can only be started, not stopped
5. Only for disposable use



**Easy
handling**



**EN 12830
compliant**



**GDP
compliant**



**German
Quality**



**IP 67
protected**




**Temperature
-20°C to +50°C**

tempmate.com

- T +49 7131 6354 0
- F +49 7131 6354 100
- info@tempmate.com
- www.tempmate.com

Documents / Resources

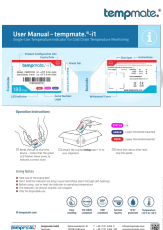	tempmate i16MCS100 i1 Single Use Temperature Indicator [pdf] User Manual i16MCS100, i1 Single Use Temperature Indicator, i16MCS100 i1 Single Use Temperature Indicator, Single Use Temperature Indicator, Temperature Indicator, Indicator
---	---

References

- [t. tempmate.® - data logger & supply chain monitoring](#)
- [t. tempmate.® - data logger & supply chain monitoring](#)