



TEMPUR-PEDIC MFI137924 Smart Adjustable Base with SleepTracker Instructions

[Home](#) » [TEMPUR-PEDIC](#) » TEMPUR-PEDIC MFI137924 Smart Adjustable Base with SleepTracker Instructions

Contents [[hide](#)]

- [1 TEMPUR-PEDIC MFI137924 Smart Adjustable Base with SleepTracker](#)
- [2 Disabling the Child Lock Feature](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)



TEMPUR-PEDIC MFI137924 Smart Adjustable Base with SleepTracker



Disabling the Child Lock Feature

Instructions for the following base models:

Ease 3.0

Ergo Power Base | Ergo Smart Base with Sleeptracker

Ergo Extend 1.0 | Ergo Extend Smart Base with Sleeptracker
(remote serial number beginning with 680012)
Before you begin, please ensure your remote has fresh batteries.

Child Lock Removal

Press and hold HEAD DOWN and FOOT DOWN buttons together for approximately three (3) seconds. Then hold HEAD UP and FOOT UP for approximately 3 seconds. The remote backlight will flash twice. When the backlight light goes away, the remote is no longer in Child Lock. The remote and adjustable base will work normally. At times the remotes can get stuck in a limbo state between locked and unlocked. In that event please use the Activate Lock steps below, then repeat the Deactivation Steps.

Child Lock Activation

Press and hold HEAD UP and FOOT UP buttons together for approximately three (3) seconds. The remote backlight will flash twice. When the backlight light goes away, the remote is now in Child Lock. Pressing any buttons while in Child Lock will yield no movement to your adjustable base.

Documents / Resources

<div><p>Disabling the Child Lock Feature</p><p>Instructions for disabling base remote</p><p>Step 1: Press and hold HEAD DOWN and FOOT DOWN buttons together for approximately three (3) seconds. The remote backlight will flash twice. When the backlight light goes away, the remote is no longer in Child Lock. The remote and adjustable base will work normally.</p><p>Step 2: Press and hold HEAD UP and FOOT UP buttons together for approximately three (3) seconds. The remote backlight will flash twice. When the backlight light goes away, the remote is now in Child Lock. Pressing any buttons while in Child Lock will yield no movement to your adjustable base.</p></div>	<div><p>TEMPUR-PEDIC MFI137924 Smart Adjustable Base with SleepTracker [pdf] Instructions MFI137924, Smart Adjustable Base with SleepTracker</p></div>
---	--