

Tenda 4G09 Router All for Better NetWorking User Guide


[Home](#) » [Tenda](#) » Tenda 4G09 Router All for Better NetWorking User Guide 

Contents


- [1 Tenda 4G09 Router All for Better NetWorking](#)
- [2 Set up the router](#)
- [3 Customize your network](#)
- [4 LED indicators](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Tenda


Tenda 4G09 Router All for Better NetWorking

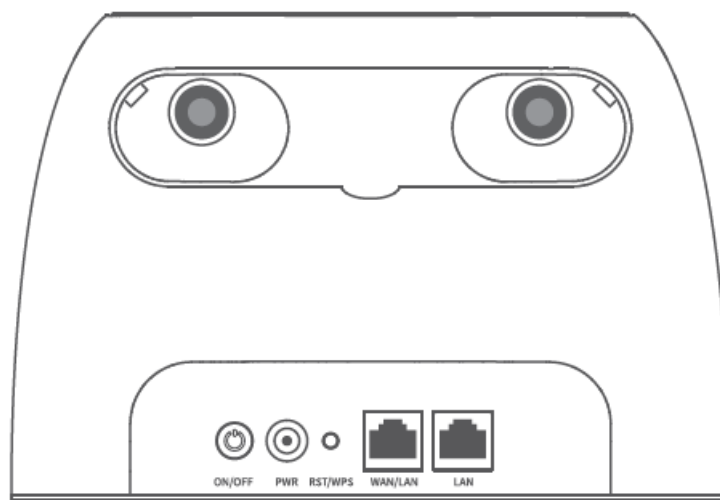


Set up the router

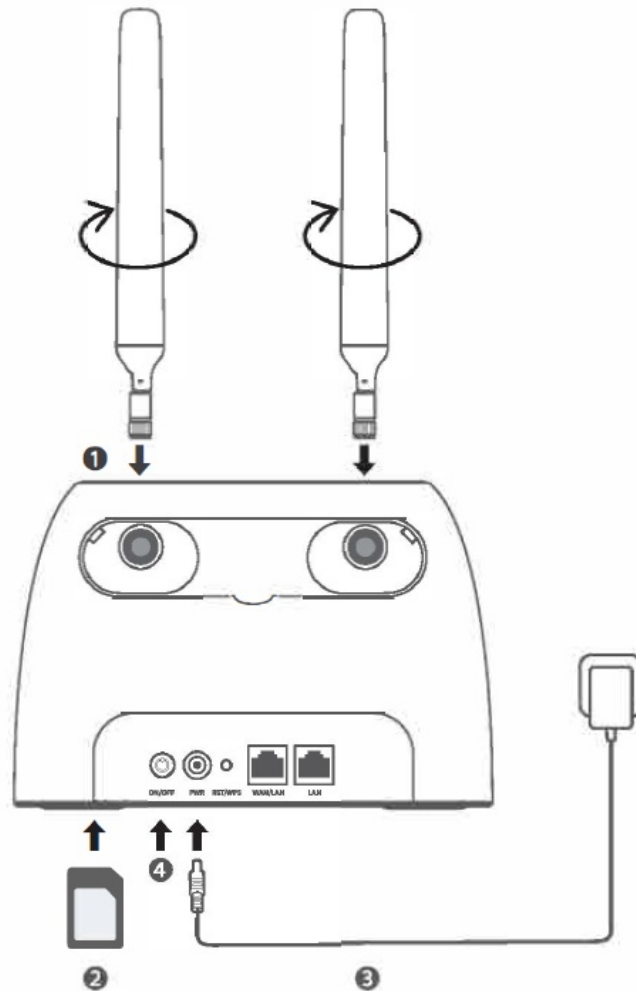

1. Attach the antennas to the router,
2. Insert a Mini SIM card into the slot on the bottom panel of the router.

 

Mini SIM card

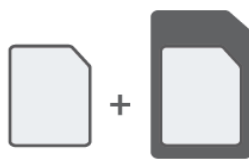

Micro SIM card + adapter



Nano SIM card + adapter




3. Use the included power adapter to connect the PWR jack of the router to a power source.
4. Press the ON/OFF button down to turn on the router. Wait for a few seconds, the router is successfully connected to the Internet, when the following indicators light up.



NOTE: If the .fJ indiCiltor does not light up, refer to 01 in FAQ to find a solution.



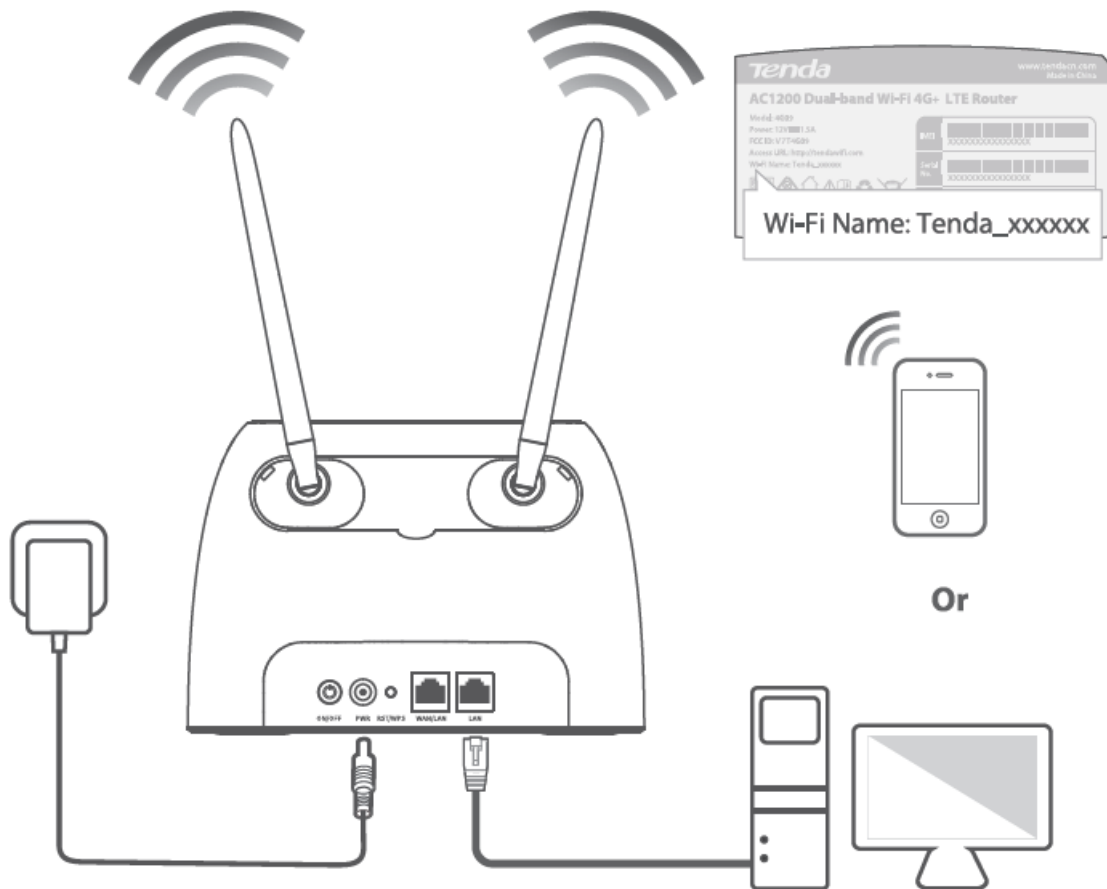


Customize your network

1. Connect your computer to the WAN/LAN or LAN port of the router using an Ethernet cable, or connect your smart phone to the Wi-Fi network of the router using the Wi-Fi Name labeled on the bottom panel of the router. There is no Wi-Fi password by default.



2. Start a web browser and visit tendawifi.com.
3. Follow the Quick Setup Wizard to customize your Wi-Fi network.

LED indicators

| LED indicator | Status | Description |
|---|----------|---|
|  | Solid on | The router is powered on properly. |
| | Off | The router is powered off or not powered on properly. |
|  | Solid on | The router is connected to the Internet. |
| | Off | No Internet access is available. |
|  | Solid on | The Wi-Fi network is enabled. |
| | Blinking | The router is performing WPS negotiation. |
| | Off | The Wi-Fi network is disabled. |
|  | Solid on | At least one device is connected to a LAN port of the router. |
| | Off | No device is connected to any LAN port of the router. |
|  | 3 bars | Excellent signal. |
| | 2 bars | Good signal. |
| | 1 bar | Fair signal. |
| | Off | No 4G/3G signal. |

FAQ

Q1 :The [J] LED indicator does not light up. What should I do?

A 1: Start a web browser, and access tendawifi.com to customize your network:

- If you are required to enter a PIN code to unlock the SIM card, contact your ISP for the PIN code.
- If you are required to enter APN parameters manually, enter these parameters provided by your ISP.
- If the [j] LED indicator is still off after you finish the Quick Setup Wizard, your SIM card may run out of money.

If the problem persists, contact your ISP for help.

Q2: I cannot access the web UI of the router by visiting tendawifi.com. What should I do?

A2: Try the following solutions.

If you log In with a wire less device:


- Ensure that your wireless device is connected to the Wi-Fi network of the router.
- Disable the cellular network of your wireless device.
- Clear the cache of your web browser or change another web browser and try again

If you log In with a wired device:

- Check if the computer is connected to the router properly.
- Check If your computer used to set up the router obtains an IP address of 192.1 68.0.X (X ranges from 2 to 254). Otherwise, connect your computer to the router again after disconnecting from the router.
- Clear the cache of your web browser or change another web browser and try again.

If the problem persists, reset the router and configure it again.

Documents / Resources

| | |
|---|--|
|  | <p>Tenda 4G09 Router All for Better NetWorking [pdf] User Guide 4G09, Router All for Better NetWorking</p> |
|---|--|