



# Tenda 4G09V1.0 Wifi Router User Manual

[Home](#) » [Tenda](#) » Tenda 4G09V1.0 Wifi Router User Manual 

## Contents

 
- [1 Tenda 4G09V1.0 Wifi Router](#)
- [2 Set up the router](#)
- [3 Customize your network](#)
- [4 LED indicators](#)
- [5 FAQ](#)
- [6 FCC Statement](#)
- [7 Declaration of Conformity](#)
- [8 Technical Support](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

# *Tenda*

**Tenda 4G09V1.0 Wifi Router**



## Set up the router

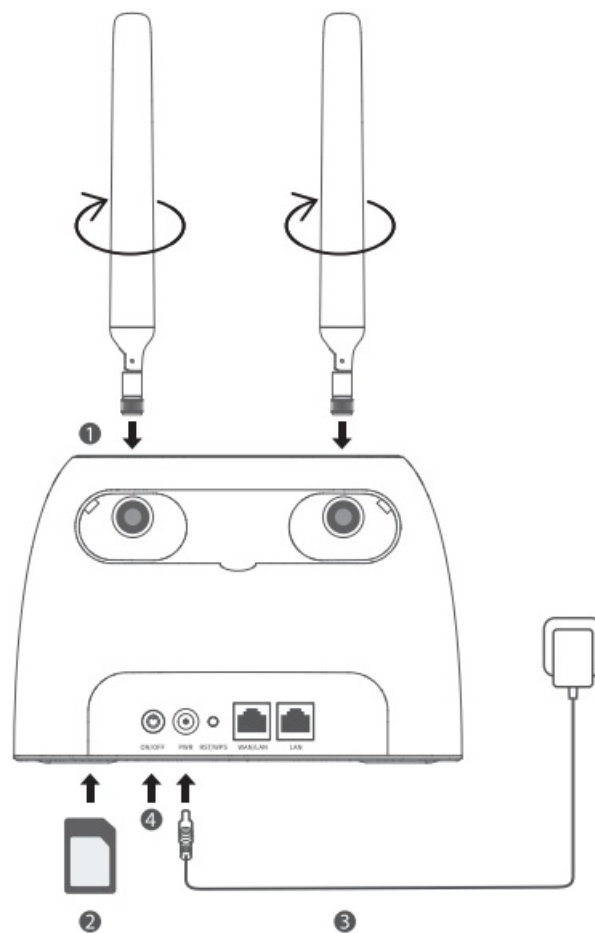

1. Attach the antennas to the router
2. Insert a Mini SIM card into the slot on the bottom panel of the router




3. Use the included power adapter to connect the PWR jack of the router to a power source.
4. Press the ON/OFF button down to turn on the router.

Wait for a few seconds, the router is successfully connected to the internet when the following indicators light up.



## Customize your network

 
1. Connect your computer to the WAN/LAN or LAN port of the router using an Ethernet cable, or connect your smartphone to the Wi-Fi network of the router using the Wi-Fi Name labeled on the bottom panel of the router. There is no wifi password by default.

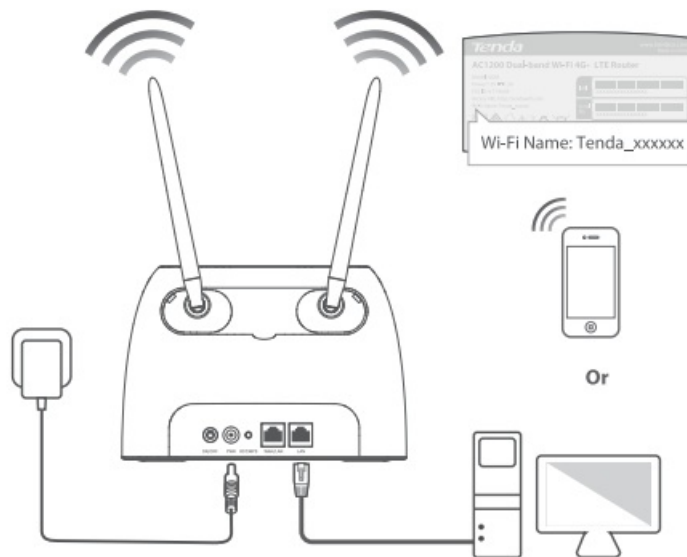





 
2. Start a web browser and visit [tendawifi.com](http://tendawifi.com).

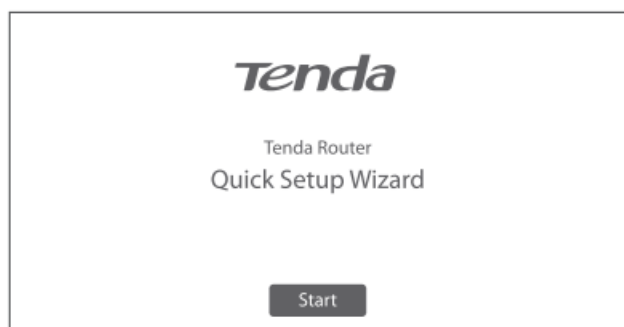

3. Follow the Quick Setup Wizard to customize your Wi-Fi network.



## LED indicators

LED indicator	Status	Description
	Solid on	The router is powered on properly.
	Off	The router is powered off or not powered on properly.
	Solid on	The router is connected to the internet.
	Off	No internet access is available.
	Solid on	The Wi-Fi network is enabled.
	Blinking	The router is performing WPS negotiation.
	Off	The Wi-Fi network is disabled.
	Solid on	At least one device is connected to a LAN port of the router.
	Off	No device is connected to any LAN port of the router.
	3 bars	Excellent signal.
	2 bars	Good signal.
	1 bar	Fair signal.
	Off	No 4G/3G signal.

## FAQ

- Q1: The LED indicator does not light up. What should I do?
  - **A1:** Start a web browser, and access [tendawifi.com](http://tendawifi.com) to customize your network:
    - If you are required to enter a PIN code to unlock the SIM card, contact your ISP for the PIN code.
    - If you are required to enter APN parameters manually, enter these parameters provided by your ISP.
    - If the LED indicator is still off after you finish the Quick Setup Wizard, your SIM card may run out of money.
    - If the problem persists, contact your ISP for help.
- **Q2: I cannot access the web UI of the router by visiting [tendawifi.com](http://tendawifi.com). What should I do?**
  - **A2:** Try the following solutions.
    - If you log in with a wireless device:**
      - Ensure that your wireless device is connected to the Wi-Fi network of the router.
      - Disable the cellular network of your wireless device.
      - Clear the cache of your web browser or change to another web browser and try again.
    - If you log in with a wired device:
      - Check if the computer is connected to the router properly.
      - Check if your computer used to set up the router obtains an IP address of 192.168.0.X (X ranges from 2 to 254). Otherwise, connect your computer to the router again after disconnecting from the router.
      - Clear the cache of your web browser or change to another web browser and try again.
      - If the problem persists, reset the router and configure it again.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device is for indoor use only. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **Radiation Exposure Statement**

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment should be installed and operated with a minimum distance of 20cm between the device and your body.

**Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Operating frequency: 2412-2462MHz, 5150-5250MHz, 5725-5850MHz

**NOTE:** (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

### **Declaration of Conformity**

Hereby, SHENZHEN TENDA TECHNOLOGY CO., LTD. declares that the radio equipment type 4G09 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.tendacn.com/en/service/download-cata-101.html>

#### **Operating Frequency:**

- **2.4 GHz:** EU/2400-2483.5MHz (CH1-CH13)
- **5 GHz:** EU/5150-5250MHz (CH36-CH48)
- **EIRP Power (Max.):** 2.4 GHz<20dBm/5 GHz<23dBm
- **Software Version:** V16.03.07.0X

#### **Operating Environment**

- **Temperature:** 0°C-40°C
- **Humidity:** (10 -90) %RH, non-condensing

### **RECYCLING**

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.


### **Technical Support**

Shenzhen Tenda Technology Co., Ltd.  
6-8 Floor, Tower E3, NO.1001, Zhongshanyuan Road,  
Nanshan District, Shenzhen, China. 518052  
USA hotline: 1-800-570-5892  
Toll Free: 7 x 24 hours  
Canada hotline: 1-888-998-8966  
Toll Free: Mon – Fri 9 am -6 pm PST  
Hong Kong hotline: 00852-81931998  
Global hotline: +86 755-2765 7180 (China Time Zone)  
Website: [www.tendacn.com](http://www.tendacn.com)  
E-mail: [support@tenda.com.cn](mailto:support@tenda.com.cn)

### Copyright

2020 Shenzhen Tenda Technology Co., Ltd. All rights reserved. Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.

### Documents / Resources

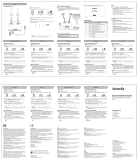	<p><a href="#">Tenda 4G09V1.0 Wifi Router</a> [pdf] User Manual 4G09V1.0 Wifi Router, 4G09V1.0, Wifi Router, Router</p>
---	---

[Manuals+](#)