



Tenda A33 AX3000 Wi-Fi 6 Range Extender Installation Guide

[Home](#) » [Tenda](#) » Tenda A33 AX3000 Wi-Fi 6 Range Extender Installation Guide 

Contents

- [1 Tenda A33 AX3000 Wi-Fi 6 Range Extender Installation](#)
- [2 Power on the extender](#)
- [3 Connect to the internet](#)
- [4 Relocate the extender](#)
- [5 Connect to the extender](#)
- [6 FAQ](#)
- [7 Appearance](#)
- [8 FCC Statement](#)
- [9 Safety Precautions](#)
- [10 CE Mark Warning](#)
- [11 Technical Support](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)

 
Tenda

Tenda A33 AX3000 Wi-Fi 6 Range Extender Installation



Power on the extender

Plug the extender into a power outlet near the router, and wait until the LED indicator of the extender blinks red.

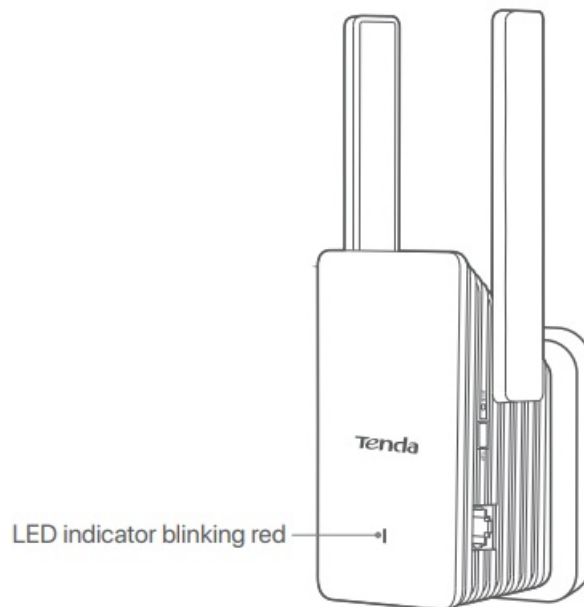


Connect to the internet

Method 1: Set up the extender to extender mode

Tips

Select this mode if you want to extend the WiFi coverage of your original router.

 Setup by smartphone

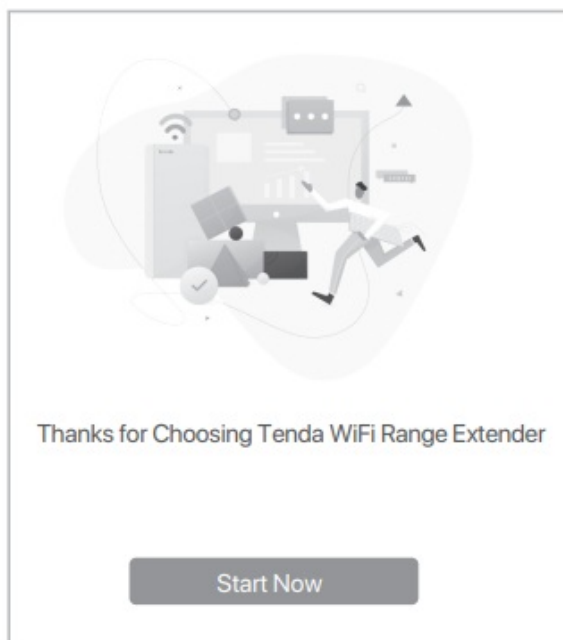

Set Login Password

Set Extender Login Password

For network security, please set a login password for logging in to the web UI.

1. Connect the smartphone to the WiFi network of the extender: Tenda_EXT and when the web UI of the extender is displayed automatically, tap Start Now.
* If the above page does not appear, please start a web browser, and access re.tenda.cn in the address bar to manually log in to the web UI. If the web UI still does not appear, refer to Q1 in FAQ.
2. Set Login Password, and tap Next.

Working Mode



Please choose the working mode based on your scenario

 
Extender Mode ☒
Extend the coverage of the existing WiFi network.

AP Mode ☐
Convert the existing wired network to a WiFi network.

Internet Settings

Please choose the WiFi network to be extended

Tenda_1 2.4G ☒  



3. Choose Extender Mode, and tap Next.
4. Choose the WiFi network to be extended.

Internet Settings

Upstream WiFi Name

Tenda_1

Upstream WiFi Password

No fewer than 8 characters

Extender WiFi Name

Tenda_1

The WiFi name and WiFi password of the extender are those of the upstream WiFi network; you can also choose to customize the extender WiFi name

Next


Internet Settings

Before you start, record the following information for confirmation after extension.

✔ LED indicator lighting solid on indicates successful extension. You can connect to the following WiFi network to access the internet

WiFi Name: Tenda_1

WiFi Password: XXXXXXXXX



- Solid blue: Proper position or too close to the router
- Solid yellow: Fair position. Move towards the router
- Solid red: Poor position. Move towards the router

✘ LED indicator blinking red indicates extension failed. Please connect to the following WiFi network to extend again

 
WiFi Name: Tenda_EXT

WiFi Password: XXXXXXXXX

Extend

5. Enter the WiFi password of the network to be extended. You can change the extender WiFi name as required, and tap Next.
6. Tap Extend.

Extension completed

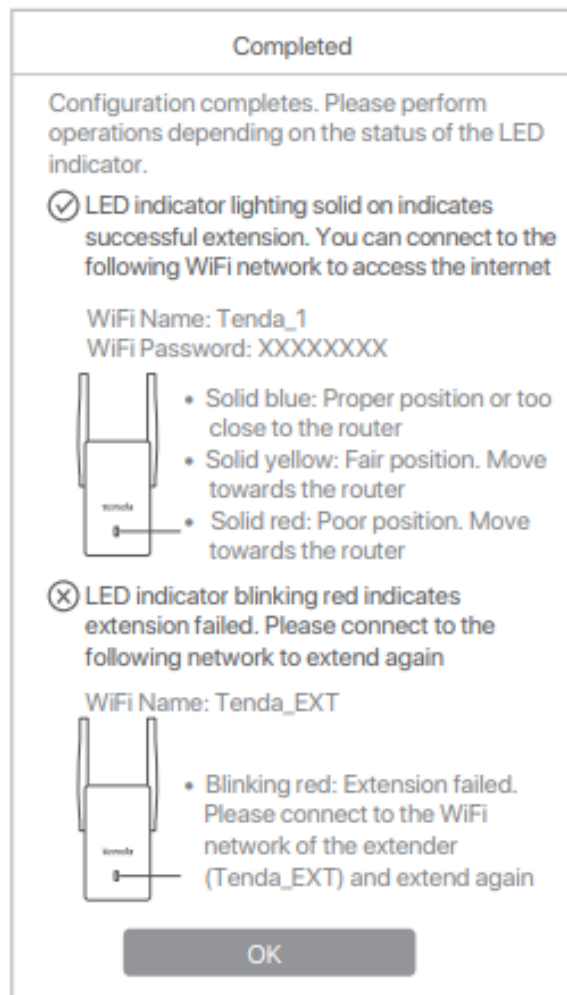

Other methods

 
Setup by computer

1. Connect your laptop to the WiFi network of the extender: Tenda_EXT, or use an Ethernet cable to connect the computer to the Ethernet port of the extender.
2. The computer is redirected to the web UI of the extender. Click Start Now.
3. Set the extender to work in Extender Mode to bridge the router WiFi network following the onscreen instructions.
 - * If you cannot log in to the web UI, please start a web browser, and access re.tenda.cn in the address bar to manually log in to the web UI. If the web UI still does not appear, refer to Q1 in FAQ.

Setup by WPS button

* This method is applicable if your router has a WPS button or supports Tenda Wi-Fi+ Mesh technology.

1. Press the WPS button on the router to enable its WPS function.
2. Within 2 minutes, press the WPS button on the extender, and its LED indicator blinks red fast. When the LED indicator lights solid on, the setup is successful.

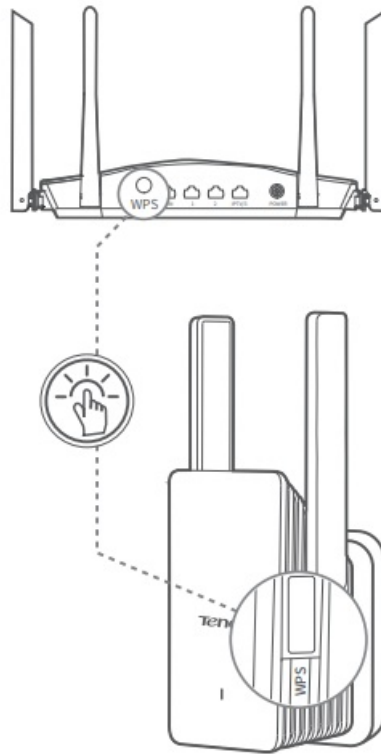


Method 2: Set up the extender in AP mode

Tips

Select this mode if you want to convert the wired signal to WiFi signal.

 1. Use an Ethernet cable to connect the Ethernet port of the extender to a LAN port of the router.

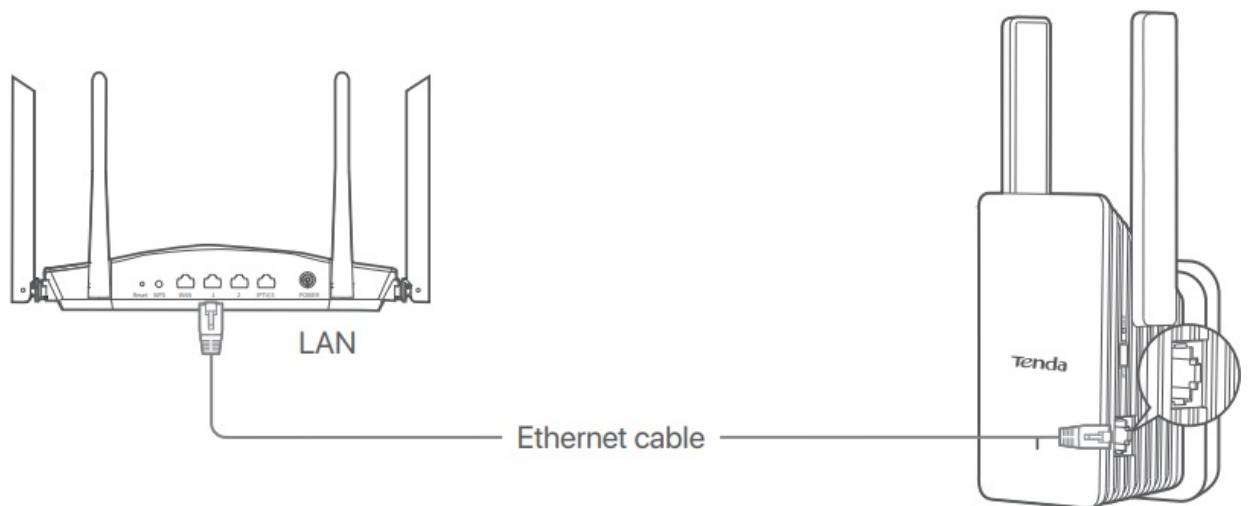


2. Connect your smartphone to the WiFi network of the extender:
3. Tenda_EXT. The smartphone is automatically redirected to the web UI of the extender. Tap Start Now and set the extender to work in AP Mode following the onscreen instructions.

* If you cannot log in to the web UI, please start a web browser, and access re.tenda.cn in the address bar to manually log in to the web UI. If the web UI still does not appear, refer to Q1 in FAQ.


Relocate the extender

(applicable for extender mode only)

 1. Refer to the following relocation tips to locate the extender to obtain a better performance:
 - Place the extender between the router and the WiFi dead zone (the location you choose must be within the coverage of the router).
 - Keep your extender away from electronics with strong interference, such as microwave ovens, induction cookers, and refrigerators.
 - Place the extender in a high position with few obstacles.
2. Observe the LED indicator of the extender to ensure the extender is located in a proper position.
 - Solid blue: Proper position.
 - Solid yellow: Fair position. Move the extender closer to the router.
 - Solid red: Poor position. Move the extender closer to the router.

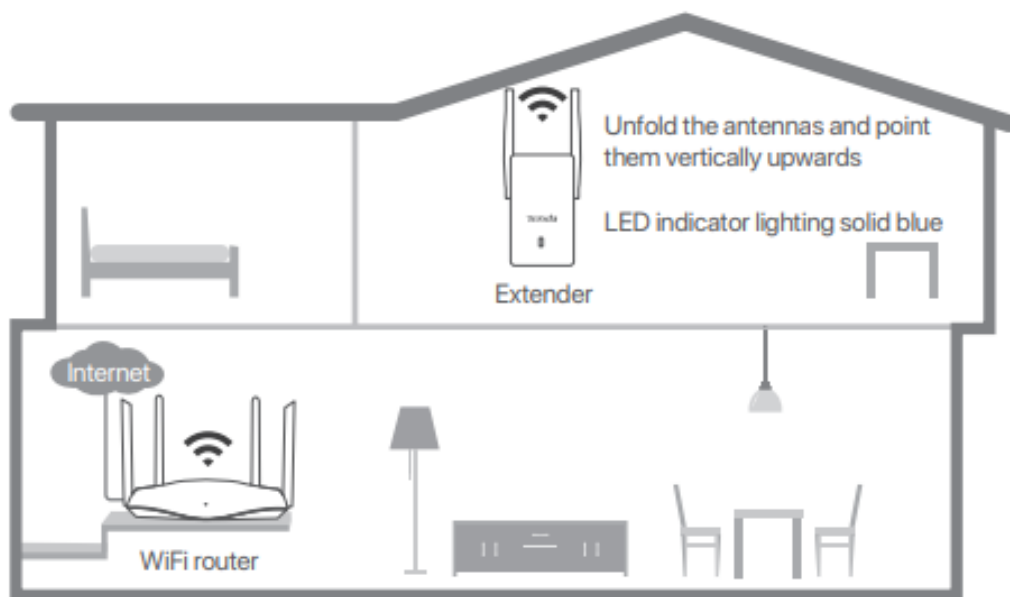

Connect to the extender

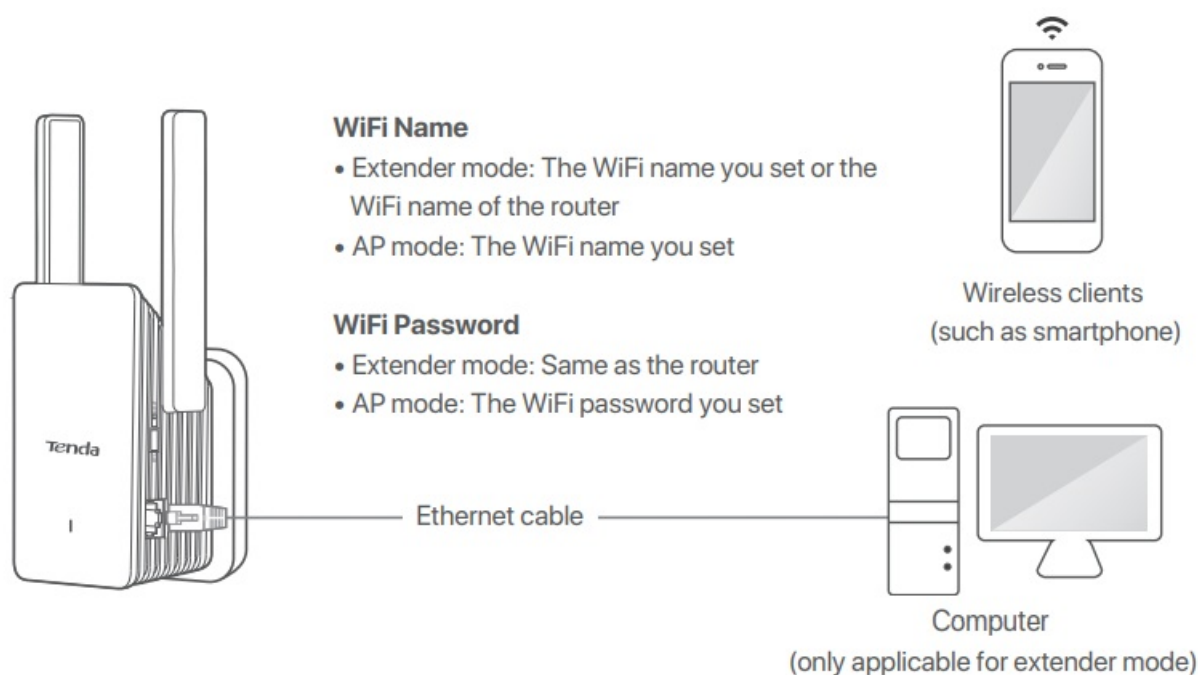 

FAQ

Q1. I cannot log in to the web UI of the extender.

What should I do?

A1. Try the following solutions:

Before extension:

- If you are using a wireless client, such as a smartphone:
 - Ensure that your smartphone has connected to the WiFi network of the extender: Tenda_EXT.
 - Ensure that the Mobile Data (if any) function is disabled.
- If you are using a wired client, such as a computer, ensure that your computer is set to Obtain an IP address automatically and Obtain DNS server address automatically.
 - Reset the extender, and then log in again. After extension:
 - If you are using a wireless client, such as a smartphone, ensure that your smartphone has connected to the WiFi network of the extender. Its WiFi name is the same as the upstream router by default unless you set one by yourself. If the WiFi name of the extender is the same as the upstream router, please stand nearby the extender and connect to its WiFi network (the extender should not be too close to the router).
 - If you are using a wired client, such as a computer, ensure that your computer is set to Obtain an IP address automatically and Obtain DNS server address automatically.

Q2. How to reset the extender?

A2. When the extender completes startup, press the RESET button using a needle-like item (such as a pin) for about 1 to 3 seconds. When the LED indicator blinks blue, the extender is reset successfully.

Q3. My extender cannot find the WiFi network of my router. What should I do?

 
A3. Try the following solutions:

- Verify that your smartphone can detect the WiFi network of your router.
- Change the channel of your router, and try again.
- Change the encryption type of the router to WPA-PSK or WPA2-PSK, and try again.

Q4. I cannot find the WiFi name of the extender after extending the network successfully (the LED indicator is solid blue). What should I do?

A4. The possible reason is that you did not customize the extender WiFi name when extending the network. In this case, the WiFi name of the extender is the same as the upstream router after the extension is successful.

Appearance

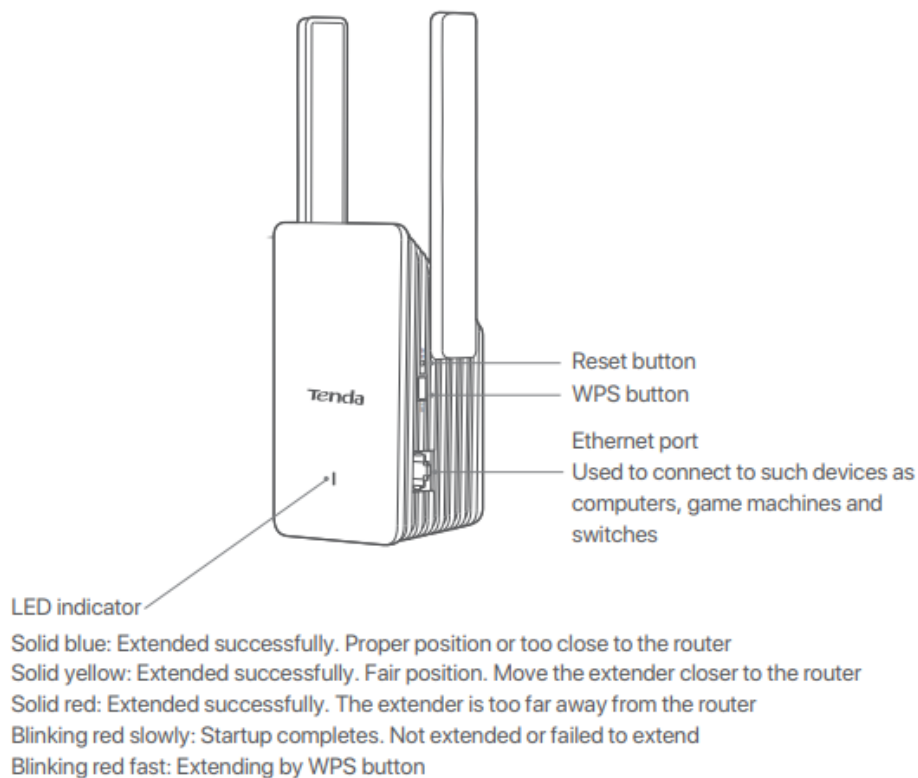

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device is for indoor usage only.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement

- This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules.
- This equipment should be installed and operated with minimum distance 20cm between the device and your body. Caution:
- Any changes or modifications not expressly approved by the party responsible for compliance could void the

user's authority to operate this equipment.

- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- Operating frequency: 2412-2462MHz, 5150-5350MHz, 5725-5850MHz

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

Safety Precautions

Before performing an operation, read the operation instructions and precautions to be taken, and follow them to prevent accidents. The warning and danger items in other documents do not cover all the safety precautions that must be followed. They are only supplementary information, the installation and maintenance personnel need to understand the basic safety precautions to be taken.

1. Do not use this apparatus near water.
2. Clean only with dry cloth.
3. Do not block any ventilation openings, such as newspapers, table-cloth, curtains, etc.
4. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus that produce heat.
5. Do not damage the ground conductor or operate the device in the absence of well installed ground conductor. Conduct the appropriate electrical inspection.
6. Protect the power cord from being walk on or pinched particularly at the plugs, convenience receptacles and at the point where they exit from the apparatus.
7. Only use attachments/accessories specified by the manufacturer.
8. Unplug this apparatus during lighting storms or when unused for long periods of time.
9. Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing.
12. Warning: To reduce the risk of electric shock, do not remove cover as there no user-serviceable parts inside. Refer servicing to qualified personnel.



CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Operations in the 5.15-5.25GHz band are restricted to indoor use only. This equipment should be installed and

operated with a minimum distance 20cm between the device and your body. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.



Declaration of Conformity

Hereby, SHENZHEN TENDA TECHNOLOGY CO., LTD. declares that the radio equipment type A33 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.tendacn.com/en/service/download-cata-101.html>

Operating Frequency:

2.4 GHz: EU/2412-2472 MHz (CH1-CH13)

5 GHz: 5180-5825 MHz (CH36-CH165)

EIRP Power (Max.):

2.4 GHz: < 20 dBm

5 GHz: < 21 dBm

Software Version: V16.03.19.01

For EU/EFTA, this product can be used in the following countries:

	BE	BG	CZ	DK	DE	EE	IE	EL	ES	FR	HR	IT	CY	LV
	LT	LU	HU	MT	NL	AT	PL	PT	RO	SI	SK	FI	SE	UK



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

Operating Temperature: 0°C – 40°C

Operating Humidity: (10% – 90%) RH, non-condensing

Technical Support

Shenzhen Tenda Technology Co., Ltd.

6-8 Floor, Tower E3, NO.1001, Zhongshanyuan Road, Nanshan District, Shenzhen, China. 518052

USA hotline: 1-800-570-5892

Canada hotline: 1-888-998-8966

Toll Free: 7 x 24 hours Toll Free: Mon – Fri 9 am – 6 pm PST

Hong Kong hotline: 00852-81931998

Global hotline: +86 755-2765 7180 (China Time Zone)

Website: www.tendacn.com

E-mail: support.nova@tenda.com.cn

 
Copyright

© 2021 Shenzhen Tenda Technology Co., Ltd. All rights reserved.

is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names

mentioned herein are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.

Documents / Resources

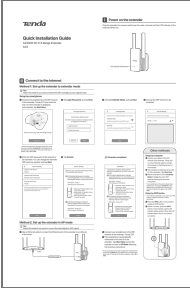	<p>Tenda A33 AX3000 Wi-Fi 6 Range Extender [pdf] Installation Guide A33, AX3000 Wi-Fi 6 Range Extender, Wi-Fi 6 Range Extender, AX3000 Range Extender, Range Extender, Extender</p>
---	---

References

-  [Tenda US](#)
-  [CE Center-Tenda-All For Better NetWorking](#)