



# Tenda A9 Wireless Universal Range Extender Installation Guide

[Home](#) » [Tenda](#) » Tenda A9 Wireless Universal Range Extender Installation Guide 

## Contents

- 1 Tenda A9 Wireless Universal Range Extender
- 2 LED
- 3 Option 1:
- 4 Use Web Browser to Extender Your WiFi
- 5 Option 2:
- 6 Use WPS Button to Extender Your WiFi
- 7 FAQ
- 8 CE Mark Warning
- 9 Declaration of Conformity
- 10 FCC Statement
- 11 Technical Support
- 12 Documents / Resources
  - 12.1 References
- 13 Related Posts

**Tenda A9 Wireless Universal Range Extender**



## Installation Guide

Wireless N300 Universal Range Extender  
Model: A9

### LED

#### Red

- Solid: The device is starting
- Blinking Slowly: The device is negotiating with a router/AP Detecting signal with auto-extending feature (hasn't developed yet) Blinking quickly: The device is performing WPS negotiation to a router/AP

#### Green

Solid: Extended successfully, the WiFi signal is strong

#### Orange

Solid: Extended successfully, the WiFi signal is poor Blinking: Extended successfully, the WiFi signal is very poor

### Button

RST : Use the end of a paper clip or a similar object to press and hold this button for about 8 seconds, and then release it to restore the extender to factory settings.

 


Press this button and then (within 2 minutes) press WPS button on a router/AP to establish a WPS connection.

## Option 1:

### Use Web Browser to Extender Your WiFi

1. Plug the extender (A9) into an electrical outlet near your wireless router.

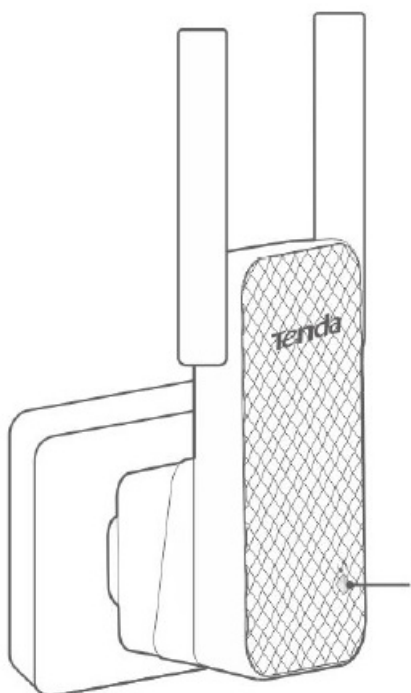


The LED indicator on the extender will be solid red when it is starting; and then starts blinking indicating successful start.

2. Use your computer to search and connect to the extender's @ Select the WiFi name (SSID) you want to extend, and click WiFi. The default WiFi (SSID: Tenda\_XXXXXX) is on the Next. product label on the extender's back panel.



 3. Launch a web browser, type the default login domain name re.tenda.cn or default login IP address 192.168.0.254 into the address bar, and tap Enter on the keyboard.

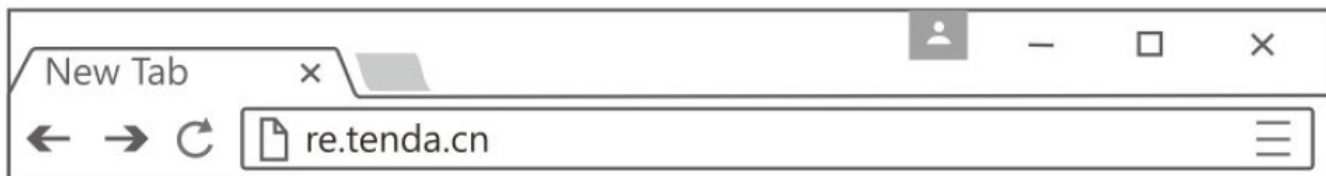

4. Select the WiFi name (SSID) you want to extend, and click **Next**

A screenshot of the Tenda WiFi configuration page. The page has the Tenda logo at the top left. Below the logo, it says 'Select WiFi Name > Enter Password'. There is a section titled 'Please select a WiFi name...' with a refresh icon. Below this is a table with three columns: 'Select', 'WiFi Name', and 'Encryption/Signal Strength'. The table lists five WiFi names: 'Tenda\_666666', 'Tenda\_office', 'Tenda\_ceshi', 'Tenda\_ssid', and 'Tenda\_1EEFD8'. The first row is selected with a radio button. Below the table is a 'Next' button.

Select	WiFi Name	Encryption/Signal Strength
<input checked="" type="radio"/>	Tenda_666666	🔒 📶
<input type="radio"/>	Tenda_office	📶
<input type="radio"/>	Tenda_ceshi	🔒 📶
<input type="radio"/>	Tenda_ssid	📶
<input type="radio"/>	Tenda_1EEFD8	📶

5. Enter the WiFi password of the selected WiFi name (if any), and click **Finish**.

**Tenda**

Select WiFi Name > Enter Password

Base Station WiFi Name: Tenda\_666666

- ☒ Set up the extender's WiFi name and password to the same as those of the Base Station

Back

Finish

### Tips

If you don't want to set up the extender's WiFi name and password to the same as those of the selected WiFi name, uncheck the option before **Set up the extender's WiFi name and password to the same as those of the Base Station**, customize the extender's WiFi name and password, and then click Finish.

6. The device is performing extending process. Wait for a moment.

**Tenda**



 
Extending... Please wait...

7. Extended successfully.



8. Relocate the extender to other electrical outlet. Observe the LED indicator on the extender to choose an optimum extended location for best WiFi performance.


### Poor Signal

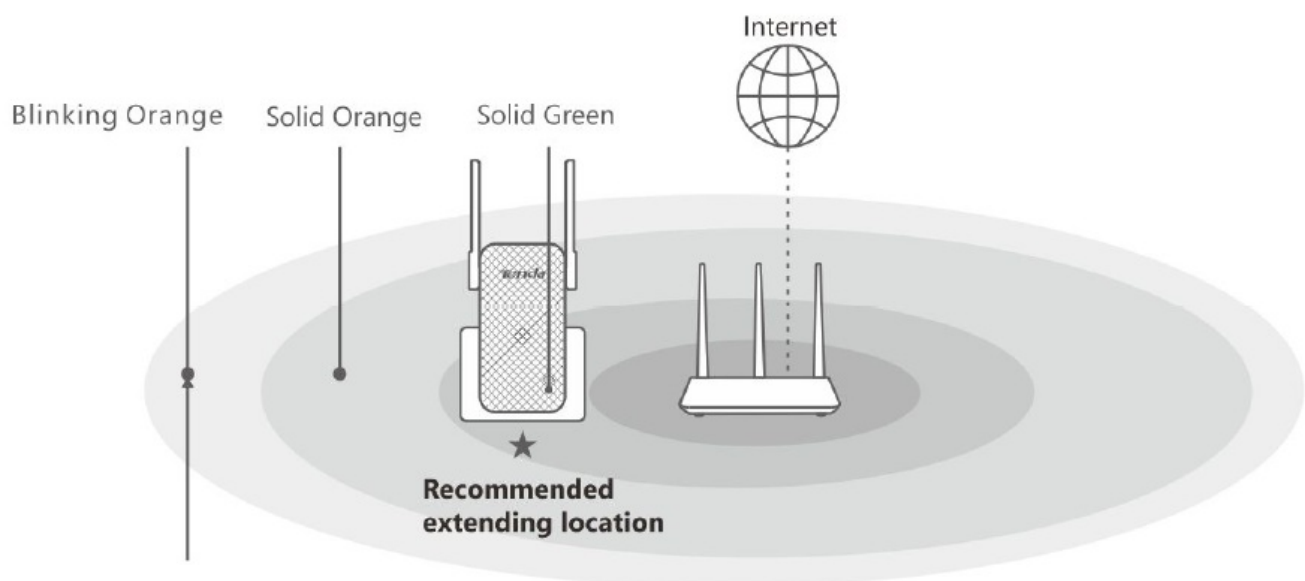

Keep moving the extender to outlets closer to the router until the LED indicator on the extender lights solid green.

### Tips

 1. You can also log in to the extender's web UI to check the WiFi signal strength (40%-79% is the optimum extending location).
  2. Keep the extender away from Bluetooth devices, microwave, refrigerator, etc. to minimize signal interference.
9. Enjoy your WiFi! The extender's WiFi name and password are the same as those of your router.

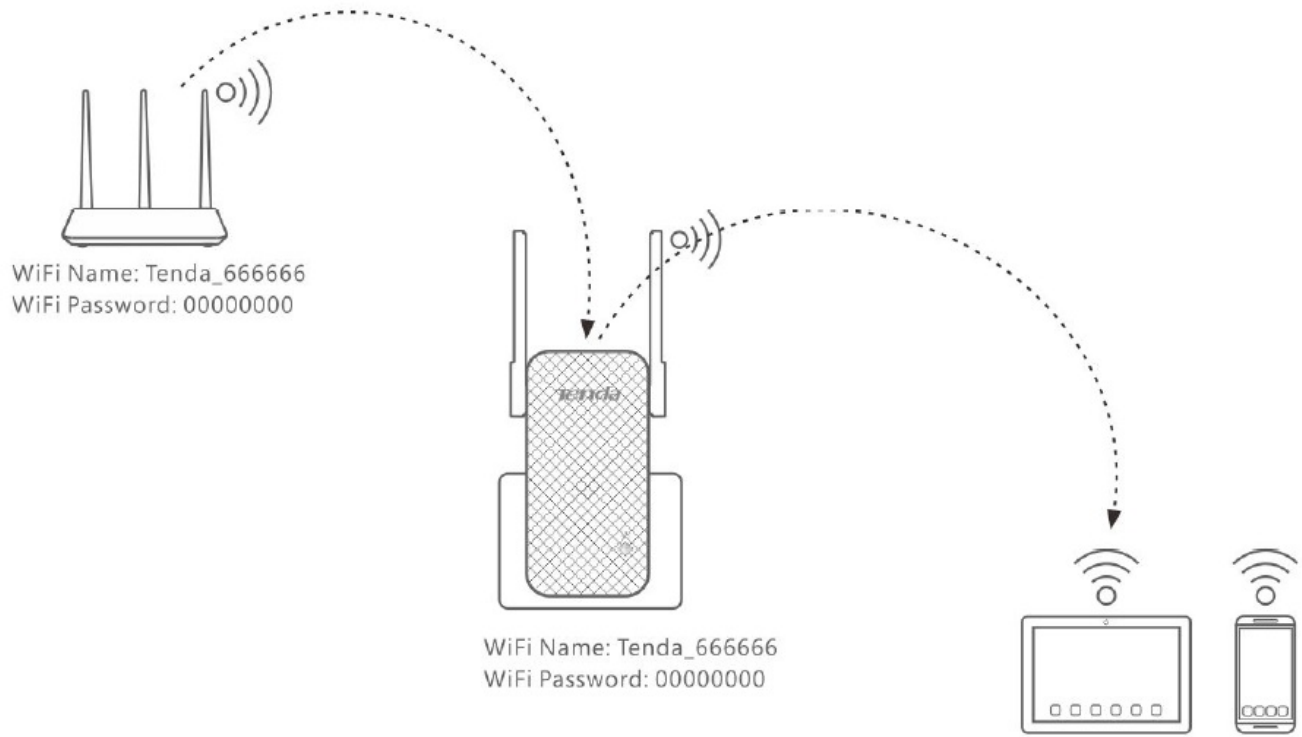


---

## Option 2:
 
### Use WPS Button to Extender Your WiFi

1. Plug the extender (A9) into an electrical outlet near your wireless router (with WPS enabled).

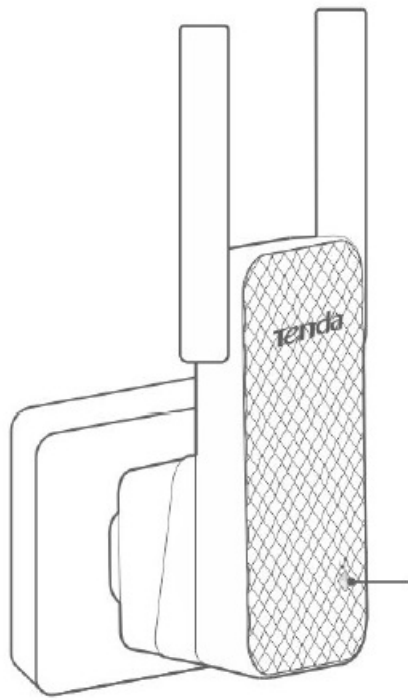


The LED indicator on the extender will be solid red when it is starting; and then starts blinking indicating successful start.

2. Press the WPS button on your router, and then (within 2 minutes) press



 
the on the extender.

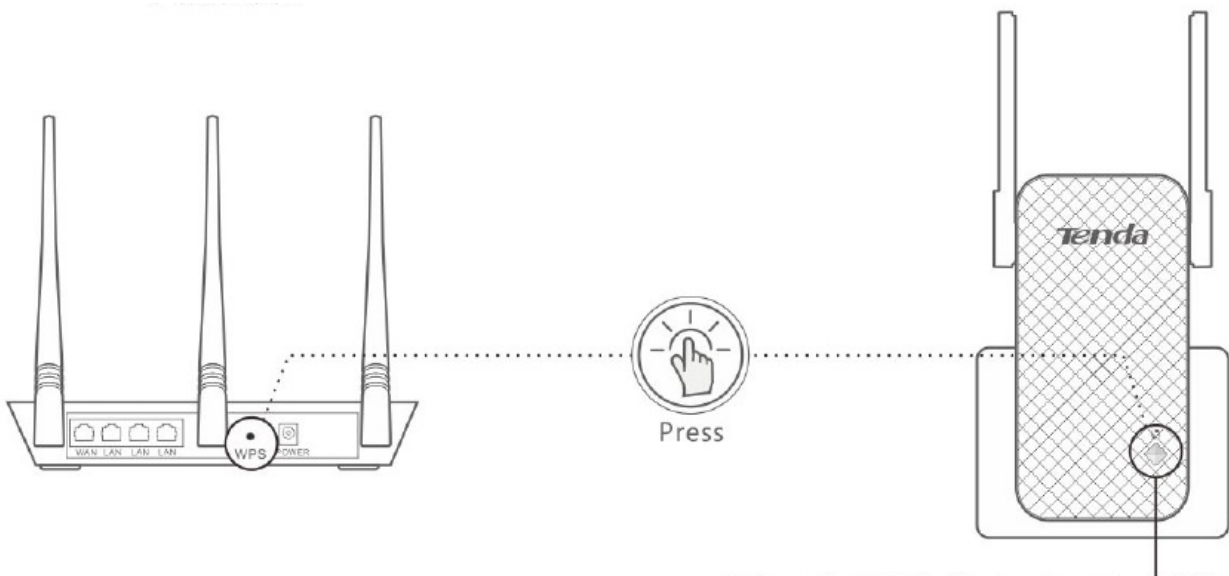

When the LED indicator turns to solid green, it indicates that a successful WPS connection has been established.

 3. Relocate the extender to other electrical outlet. Observe the LED indicator on the extender to choose an optimum extended location for best WiFi performance.




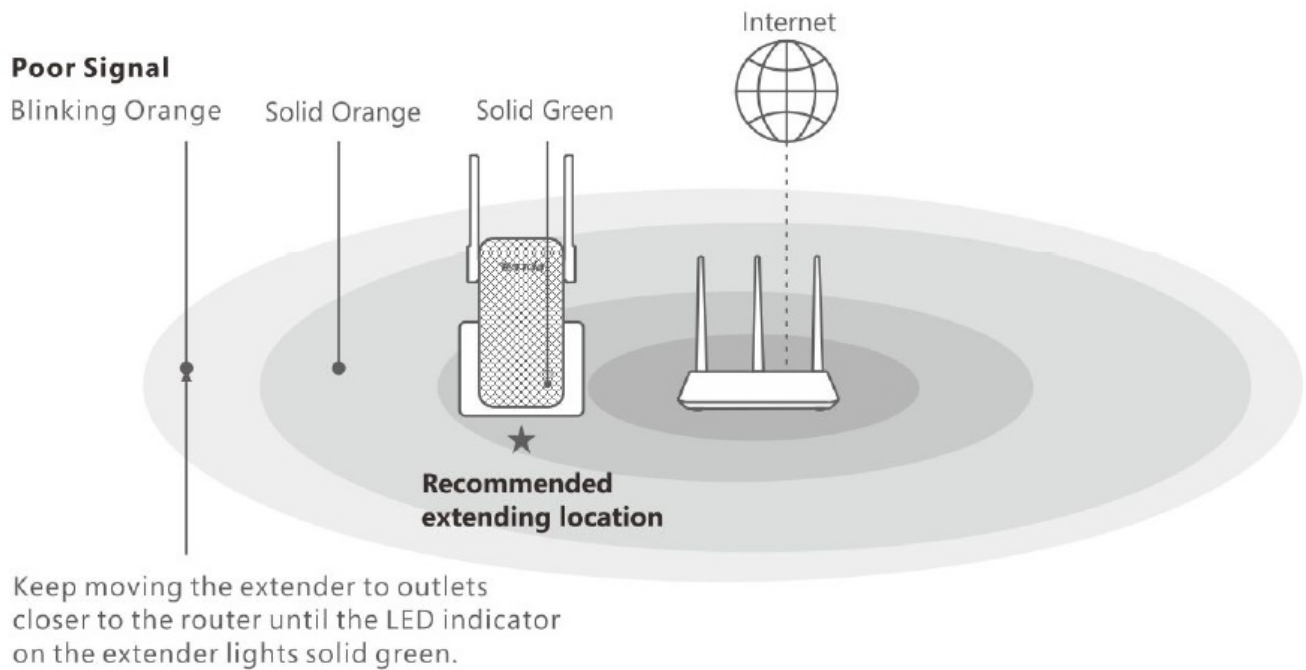


Keep moving the extender to outlets closer to the router until the LED indicator on the extender lights solid green.

### Tips

 1. You can also log in to the extender's web UI to check the WiFi signal strength (40%-79% is the optimum extending location).
2. Keep the extender away from Bluetooth devices, microwave, refrigerator, etc. to minimize signal interference.
4. Enjoy your WiFi! The extender's WiFi name and password are the same as those of your router.

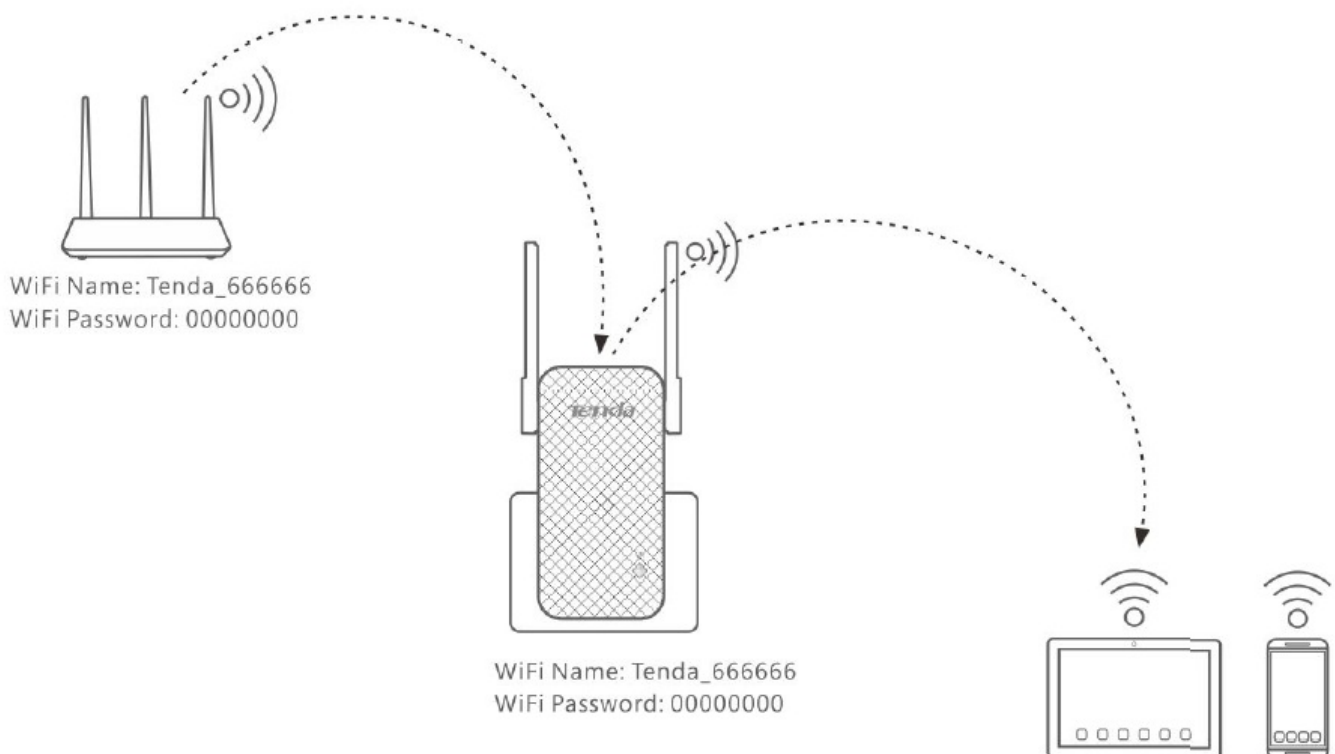

 Position the antennas as shown in the figure below for best WiFi performance.

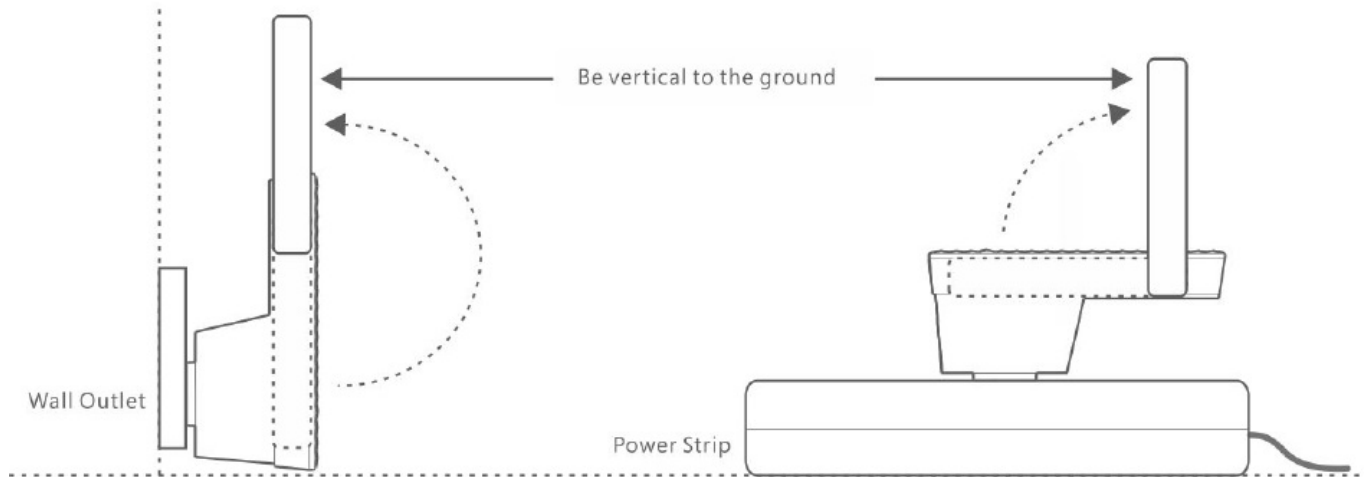

## FAQ

### Q1: I cannot log in to the extender's User Interface, what should I do?

A1: Before extending

1. Use your computer to connect to the WiFi name (SSID) on the label of the extender's back panel;
2. Launch a web browser, type 192.168.0.254 or re.tenda.cn into the address bar and tap Enter on the keyboard.

After extending

1. Use your computer to connect to the extended WiFi name (if you customize the WiFi name of the extender, connect that);
2. Launch a web browser, type re.tenda.cn into the address bar and tap Enter on the keyboard.

### Q2: What should I do if my router has no WPS button?

A2: Follow Option 1: Use Web Browser to Extend Your WiFi to set up the extender.

## CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

**NOTE:** (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded R145 cable.

## Declaration of Conformity

Hereby, SHENZHEN TENDA TECHNOLOGY CO., LTD., declares that the radio equipment type A9 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.tendacn.com/en/service/page/ce.html> Operate Frequency: 2412-2472 MHz EIRP

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Radiation Exposure Statement This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

**NOTE:** (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded R145 cable.

## Technical Support

United States Hotline:1-800-570-5892

Canada Hotline: 1-888-998-8966

HongKong Hotline:00852-81931998

Skype: Tendasz

Website: <http://www.tendacn.com>

E-mail: support@tenda.com.cn

## Copyright

@ 2016 Shenzhen Tenda Technology Co., Ltd. All rights reserved. Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.


Address Info:

6-8 Floor, Tower E3, NO.1001, Zhongshanyuan Road,  
Nanshan District, Shenzhen,  
China. 518052

e7a7fc7511c221ea04842686847c0194c62942b5eee2cbf7eca8dd2b\_optim.pdf" viewer\_width=100%  
viewer\_height=800px fullscreen=true download=true print=true]

---

Documents / Resources

	<a href="#">Tenda A9 Wireless Universal Range Extender</a> [pdf] Installation Guide A9, A9 Wireless Universal Range Extender, Wireless Universal Range Extender, Universal Range Extender, Range Extender, Extender
---	--

References

- [User Manual](#)