



Tenda F9 Wireless Router Installation Guide

[Home](#) » [Tenda](#) » Tenda F9 Wireless Router Installation Guide 

Tenda

F9 Wireless Router Installation Guide

You can download the user guide from www.tendacn.com for more details of the router.
600 Mbps Wireless N Router
Model: F9

Contents

- [1 Packing List](#)
- [2 Configure The Router](#)
- [3 Appendix Join Your WiFi](#)
- [4 Technical Support](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

Packing List

Wireless Router * 1
Power Adapter * 1
Ethernet Cable * 1
Installation Guide * 1



<http://download.cloud.tenda.com.cn/down/app>

If any item is incorrect, missing or damaged, please keep the original package and contact the vendor.

Configure The Router

 
- If you did NOT set up a dial-up connection on a router for internet access before using this router, refer to Option 1.
- If you use this router to replace an original one and you have set up a dial-up connection on the original router, refer to Option 2.

◆ Option 1

1. Connect your cable with internet connectivity provided by your ISP to your router.


Select an internet connection type to connect the router to the internet according to the internet connection type provided by your internet service provider (ISP).

Telephone line/Optic fiber/Cable TV

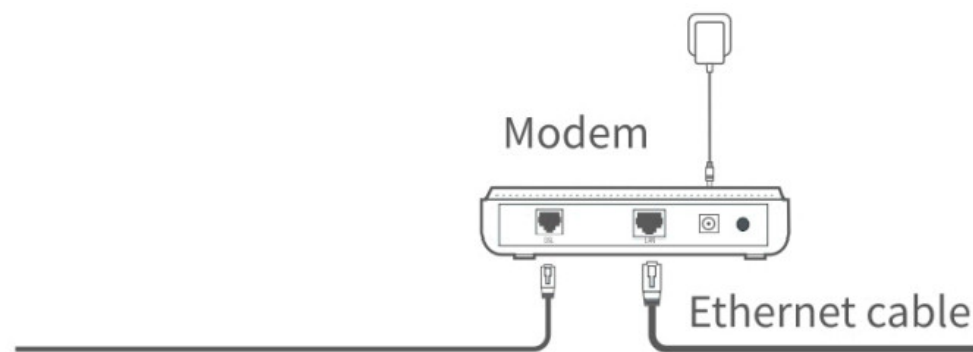

Or

 Ethernet cable

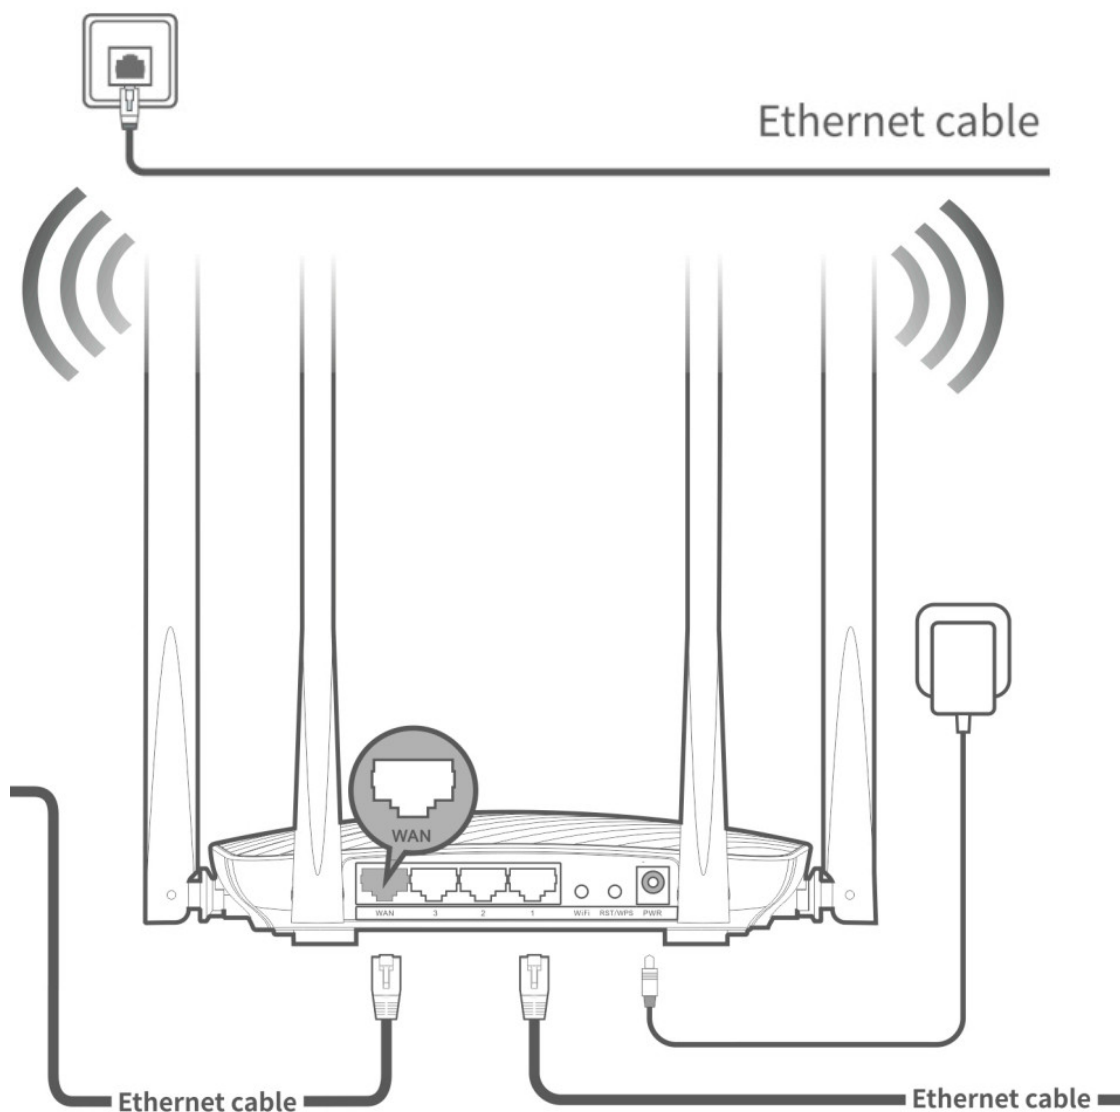

2. Connect a device to the router.

Wireless Connection

Use the WiFi name (Tenda_XXXXXX) on the label of the bottom panel of the router to connect the wireless

 
devices to the wireless network. No WiFi password by default.



Or

Wired Connection

Use an Ethernet cable to connect the computer to one of the LAN ports of the router.

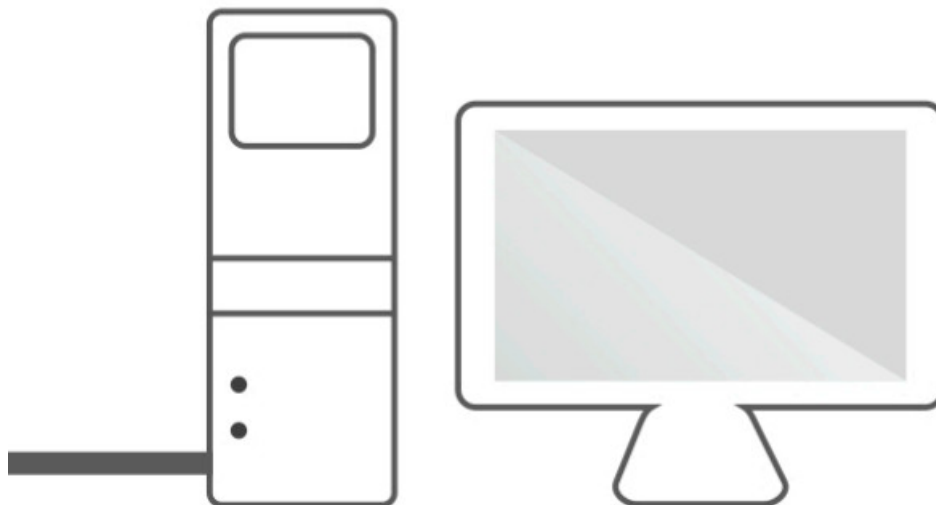

3. Set up an internet connection.


Step 1: Start a browser on a device connected to the router, enter tendawifi.com or 192.168.0.1 in the address bar, and press Enter on the keyboard.

Step 2: The router automatically detects your internet connection type. Enter the internet parameters according to the instructions on the page.

Step 3: Customize a WiFi name and password, and then click OK to apply the settings.

Tenda You can access the internet after completing settings on this page.


As detected, your connection type is: **PPPoE**



Internet

Connection Type ☒ PPPoE ☐ DHCP ☐ Static IP Address


This type is applicable if you have a user name and password for setting up a broadband dial-up connection. You can import them from your original router.



Wireless

User Name

Password



WiFi

WiFi Name

WiFi Password

OK

 
◆ Option 2

* If you use this router to replace an original one and you have set up a dial-up connection on the original router, the PPPOE user name and password can be imported to this router quickly to enable the router to access the internet without any configuration on its web UI.

1. Import pppoe user name and password.


Step 1: Power on the original router and this router.

Step 2: Connect the WAN port of the original router to one of LAN ports of this router using an Ethernet cable. When all the LAN port indicators of this router stay on for 3 seconds, the PPPOE user name and password import succeeds.

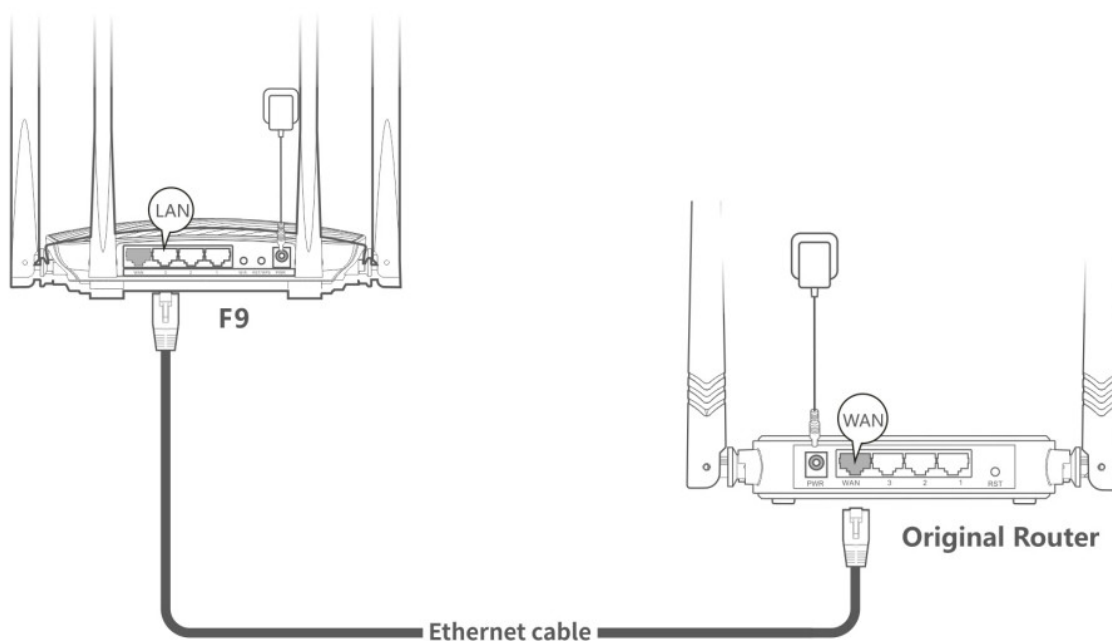

2. Connect your cable with internet connectivity provided by your ISP to your router.

 Select an internet connection type to connect the router to the internet according to the internet connection type provided by your internet service provider (ISP).

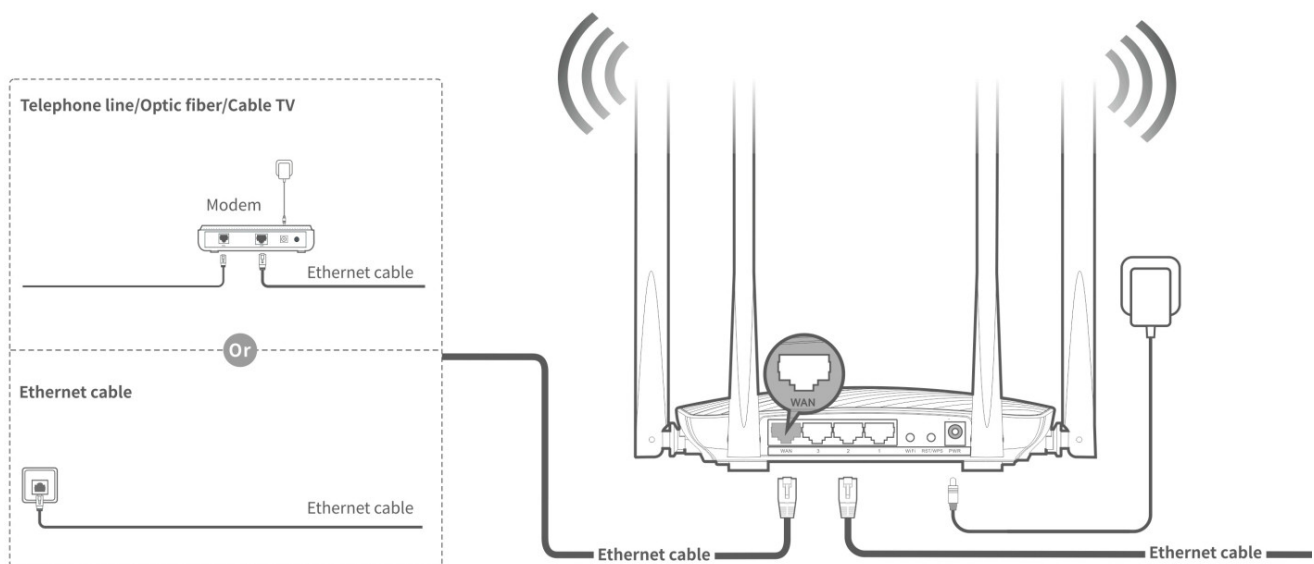

3. Connect a device to the router.

Wireless Connection

Use the WiFi name (Tenda_xxxxxx) on the label of the bottom panel of the router to connect the wireless devices to the wireless network.

No Wifi password by **default**.



Or

Wired Connection

Use an Ethernet cable to connect the computer to one of the LAN ports of the router.



Tip

There is no Wi-Fi password by default. You'd better configure a WiFi password on the web UL of the router.

 
Appendix Join Your WiFi

Here we take iPhone/iPad/Windows 8 as examples. Steps on other operating systems are similar.


iPhone/iPad



1. Scroll screen to find the Settings icon.
Click the icon.

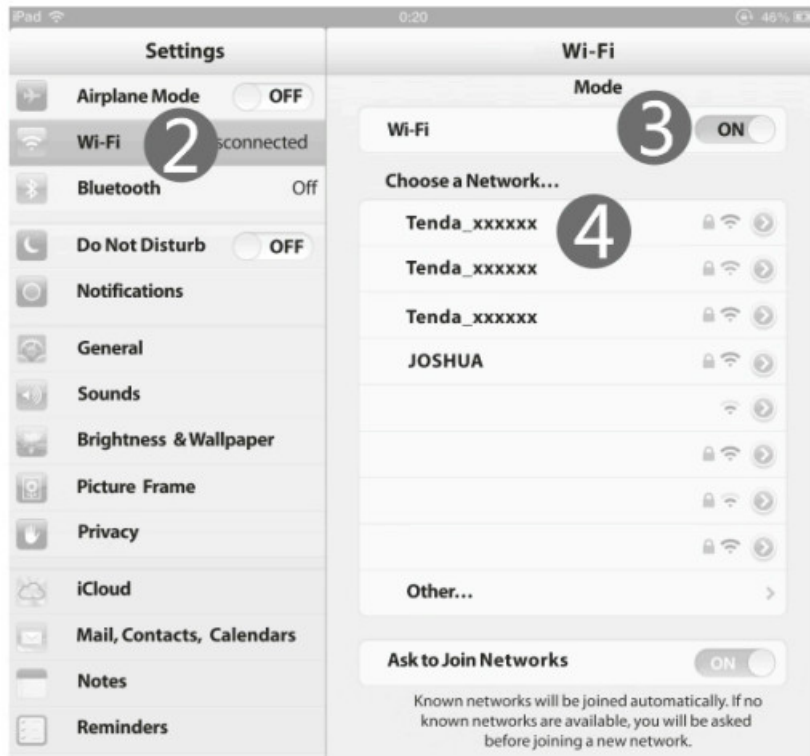

 2. Click Wi-Fi
3. Click to open Wi-Fi
4. Find the WiFi name you wish to connect.
Click the name.

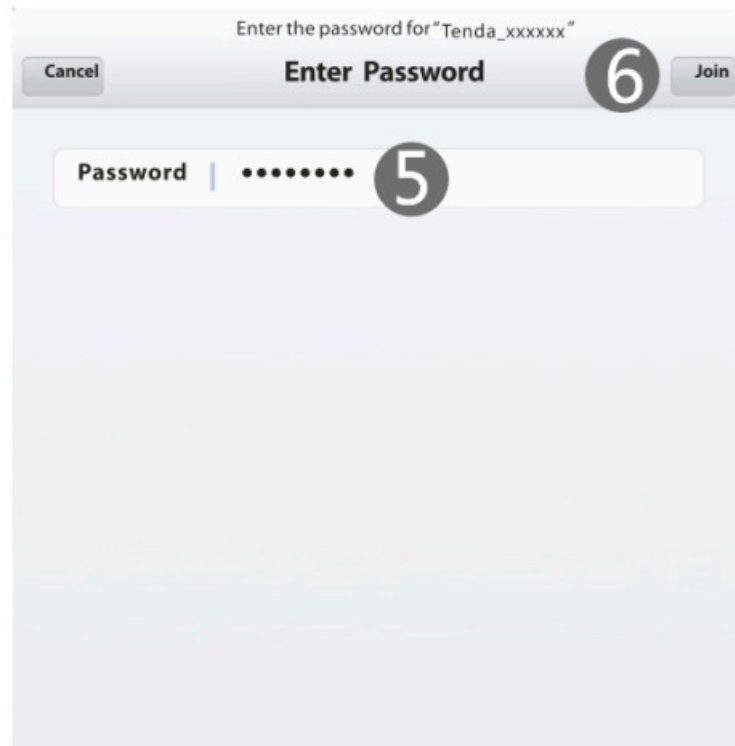



5. Enter the Wi-Fi password.
6. Click Join to join the WiFi network.




7. Connected successfully!

 Windows 8

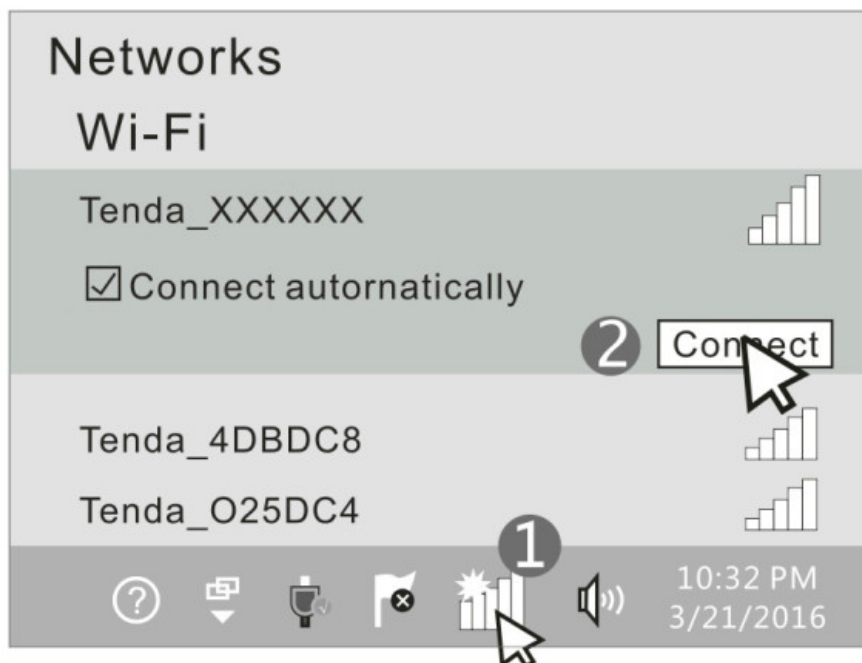

 1. Click the icon  on the bottom right corner of your desktop.
2. Select your WiFi name from the list, and click Connect.

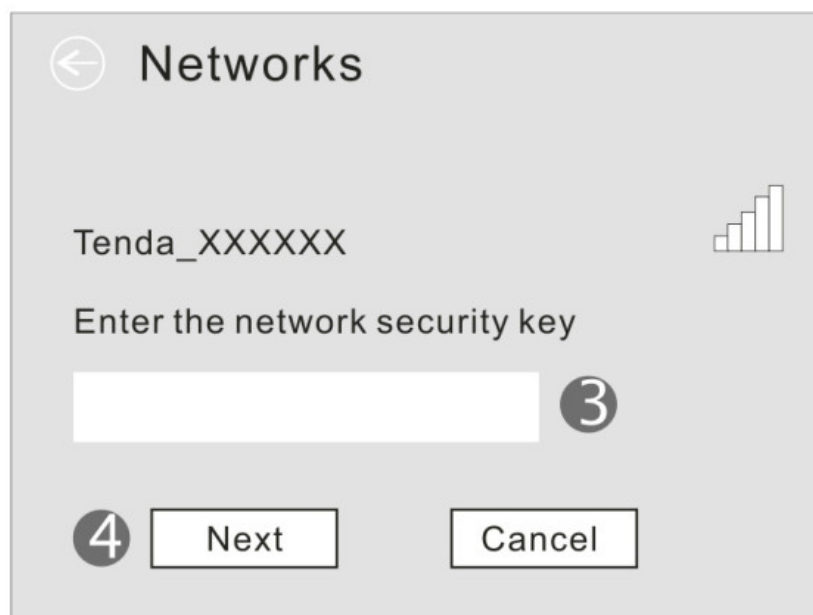

3. Enter the WiFi password (network security key) of your WiFi.
4. Click Next.

Networks

Wi-Fi

Tenda_XXXXXX

5

Connected



Tenda_4DBDC8



Tenda_O25DC4



5. Connected successfully!

LED	Status	Description
SYS	Blinking	The system is working properly.
	Off	The router is not connected to a power supply properly, or not connected to a power supply.
WiFi	Solid on	The WiFi feature is enabled.
	Blinking	The router is transmitting or receiving data wirelessly.
	Off	The WiFi feature is disabled.
1/2/3	Solid on	The LAN port is connected properly.
	Blinking	The LAN port is transmitting or receiving data.
	Off	The LAN port is not connected, or not connected properly.
WAN	Solid on	The WAN port is connected properly.
	Blinking	The WAN port is transmitting or receiving data.
	Off	The WAN port is not connected, or not connected properly.
WPS	Solid on for 5min->Off	The WPS negotiation process succeeds.
	Blinking	The router is performing WPS negotiation.
	Off	The WPS feature is enabled, but the router does not perform WPS negotiation. The WPS feature is disabled.

Button	Description
WPS/RST	Hold it down for about 8 seconds until all LED indicators blink once to restore factory settings of the router.
	Hold it down for 1~3 seconds to enable the WPS feature of the router. Within 2 minutes after the feature is enabled, enable the WPS feature of the wireless device to establish WPS connection.
WiFi	WiFi button. Press this button to turn on/off WiFi of the router.
WAN	WAN port. Connect this port to the internet using an Ethernet cable from a modem or Ethernet jack.
1/2/3	LAN ports. These ports can be connected to computers, switches, and so on.

Q1: What should I do if I cannot access the router login page at tendawifi.com or 192.168.0.1?

A1: Use the following method to troubleshoot the fault and then try accessing the page again. • Ensure that the connection between the router and your computer is correct. If you connect to the router wirelessly, ensure that the connected Wi-Fi network belongs to the router. • Set the computer to obtain an IP address automatically. • Clear the cache of your web browser. • Use another web browser or computer to try again. • Reset the router. Power on the router, hold down the WPS/RST button for about 8 seconds.

Q2: What should I do if I cannot access the internet after configuring internet settings?

A2: Try the following methods: • Verify that the router is connected properly. If you use a mobile phone to access the internet through the router, verify that your mobile phone is connected to the Wi-Fi network properly. • Set the computer to obtain an IP address automatically. • Use an Ethernet cable to connect your computer to the router, log in to the router web UI, change the Wi-Fi name and password of the router, and reconnect to the Wi-Fi network. • Clone the MAC address of your computer to your router. • Contact your ISP for help.

Q3: What should I do if I forget the Wi-Fi password?

A3: Try the following methods: • Login to the web UI of the router, and check it on Wireless Settings > Wi-Fi Name and Password page. • If you forget the login password as well, reset the router to factory default settings by holding down the WPS/RST button on the back panel of the router for 8 seconds. Then you can reset a login password and Wi-Fi password.

Q4: How to select a connection type?

A4: Follow the instructions in the table.

Internet Connection Type	Description
PPPoE	You can use a connection of this type to access the internet only after setting up a dial-up connection on the computer using a user name and password provided by your ISP, select PPPoE.
Static IP Address	You can use a connection of this type to access the internet only after setting a static IP address and other related information on your computer, select Static IP Address.
DHCP	You can use a connection of this type to access the internet without setting any parameters on your computer, select DHCP.



CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. "This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

Declaration of Conformity

Hereby, SHENZHEN TENDA TECHNOLOGY CO. LTD. declares that the radio equipment type F9 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.tendacn.com/en/service/page/ce.html>

Operate Frequency: 2412-2472MHz

EIRP Power (Max.): 19.5 dBm

Software Version: V12.01.01.34



FCC Statement

This device is restricted to be used in the indoor.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

NOTE:

1. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.
2. To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.



Caution:

Adapter Model: BN049-A05009E

Manufacture: SHENZHEN HEWEISHUN NETWORK TECHNOLOGY CO.,LTD

Input: 100-240V ac 50Hz/60Hz 0.3A

Output: 9Vdc, 600mA

 DC Voltage



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

Technical Support

Shenzhen Tenda Technology Co., Ltd.

6-8 Floor, Tower E3, NO.1001, Zhongshanyuan Road, Nanshan District, Shenzhen, China. 518052

Global Hotline: (86) 755-27657180

HongKong Hotline: 00852-81931998

E-mail: support@tenda.com.cn

Website: <http://www.tendacn.com>

Canada Hotline: 1-888-998-8966

Skype: Tendasz

Copyright

 
© 2017 Shenzhen Tenda Technology Co., Ltd. All rights reserved.

Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.

Operating Temperature: 0 °C~40 °C

Operating Humidity: (10~90) %RH, non-condensing

Documents / Resources

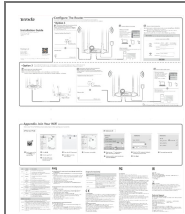

[Tenda F9 Wireless Router](#) [pdf] Installation Guide
F9 Wireless Router, F9, Wireless Router, Router

References

- [User Manual](#)