



Terncy WS06 Smart Wall Switch Instruction Manual


[Home](#) » [Terncy](#) » Terncy WS06 Smart Wall Switch Instruction Manual 



Contents

- [1 Terncy WS06 Smart Wall Switch](#)
- [2 Product introduction](#)
- [3 Indicator Light Instruction \(ZigBee Mode\)](#)
- [4 On-off Status Indicator State](#)
- [5 Physical Installation](#)
- [6 Download and Install App](#)
- [7 Add Device in Terncy App](#)
- [8 Reset to Factory Default](#)
- [9 Automation](#)
- [10 Specification](#)
- [11 Warranty Card](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)


Terncy WS06 Smart Wall Switch

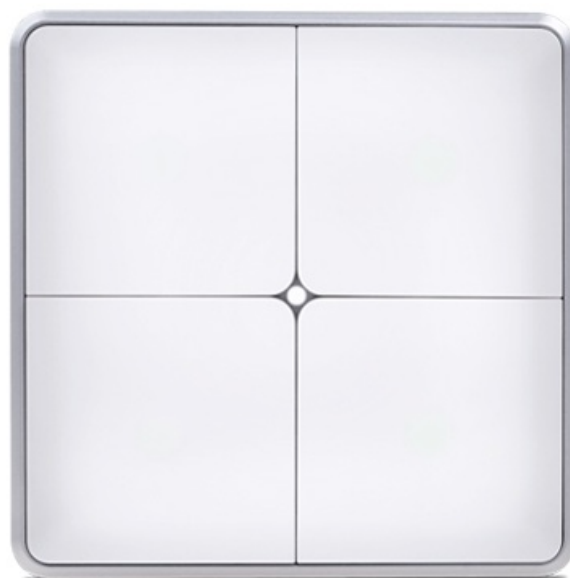


Product introduction

Silver Phoenix Pro Smart Wall Switch utilizes ZigBee wireless communication protocol and supports functions such as color temperature adjustment and brightness adjustment, enabling smart lighting control, intelligent scenes, and linked binding.

* The diagram represents a 4-gang switch.

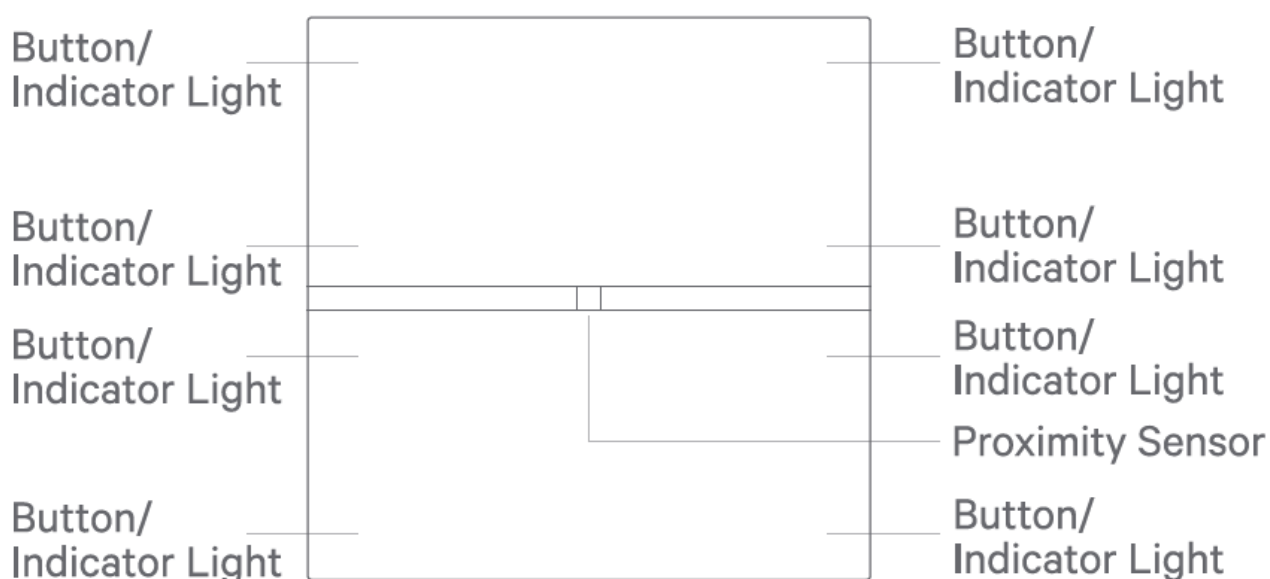


Indicator Light Instruction (ZigBee Mode)

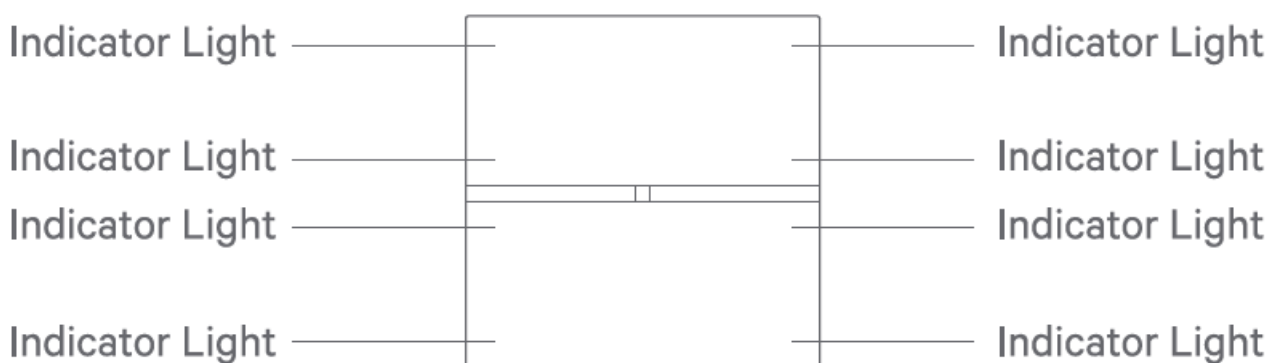

| | | |
|------------------|--|---------------------------------------|
| Indicator Status | Fast Flashing (10 flashes per second) | Connecting to Home Center nearby |
| | Slow flashing (7 flash every 2 second s) | Successfully connected to Home Center |
| | Medium flashing (4 flashes per second) | Failed to connect to Home Center |


On-off Status Indicator State

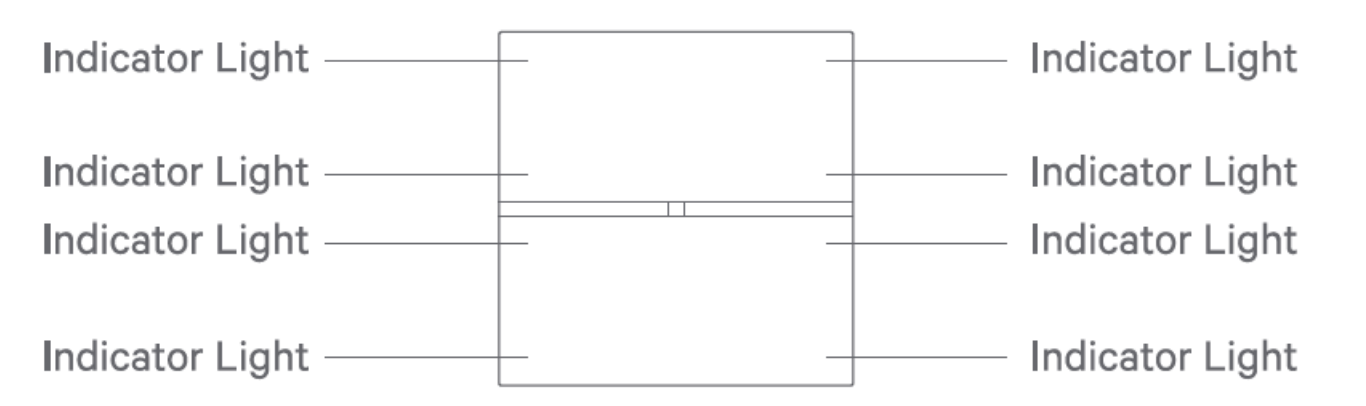

| | | |
|------------------|-----------|--|
| Indicator Status | White On | The device connected directly to it is powered on |
| | Yellow On | The device connected directly to it is powered off |

For wall switches with different numbers of gangs, there are specific differences in the functions of the indicator lights. For example, in a 4-gang wall switch, the indicator lights of the upper-left and upper-right buttons are used to indicate the switch status, while the indicator lights of the remaining buttons will flash during interaction to provide operational feedback

 Physical Installation

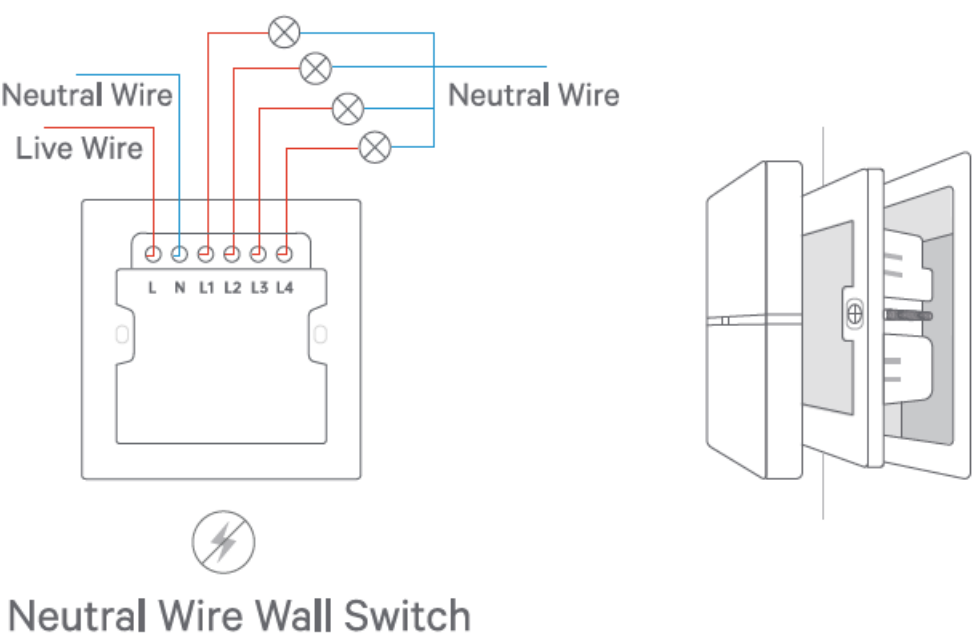

1. Before installation, make sure the power is turned off;

2. Align the rear housing holes and complete the wiring. Tighten the wiring screws: Connect the “L” hole to the live wire, “N” hole to the neutral wire, and “L1/L2/L3/L4” holes to the light wires;
3. Use screws to secure the wall switch in the wall junction box, and then reattach the front panel of the wall switch.


- Please refer to the load power on page 10 for the attached table of specifications.
- Different models of wall switches may have variations in wiring hole positions. Please refer to the actual product for accurate positioning.

Download and Install App

Download Terncy app from application markets or scan the QR code below. Follow the direction in the app to connect your accessory to Home Center.




Add Device in Terncy App

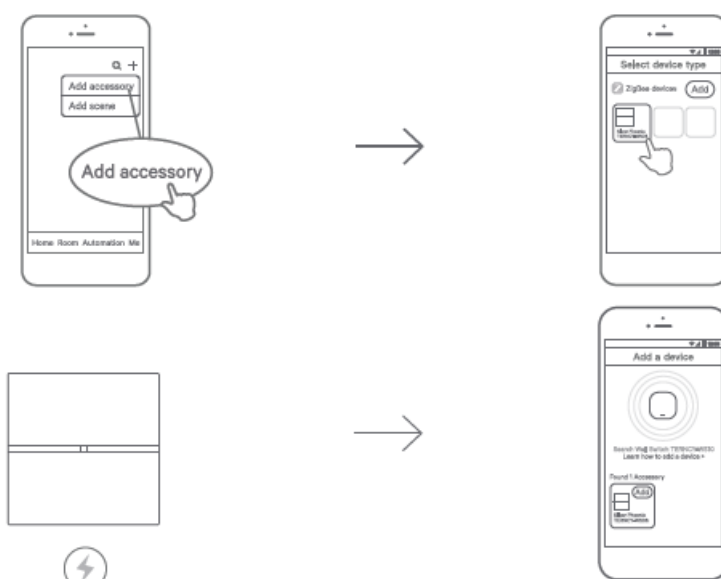

1. Launch Terncy app and log in;
2. Click on the “Add Device” page;


3. Turn on the power to the switch, and the indicator light will start flashing;
4. The app will automatically detect the accessory typically within 10 seconds

Reset to Factory Default

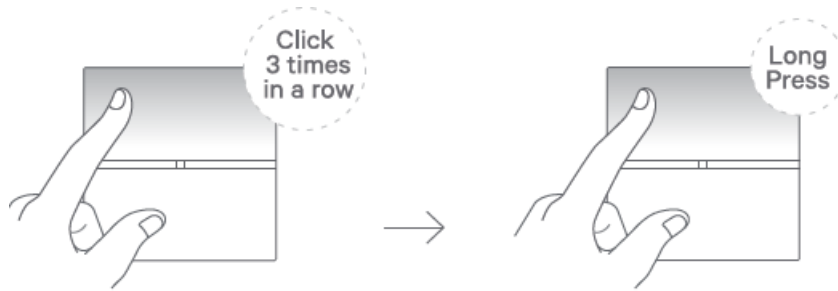

1. The switch is powered on;
2. Tap the top-left button 4 times, and on the 4th tap, press and hold until the indicator light flashes, then release;
3. The network configuration information of the switch will be cleared and can be added again.

Automation

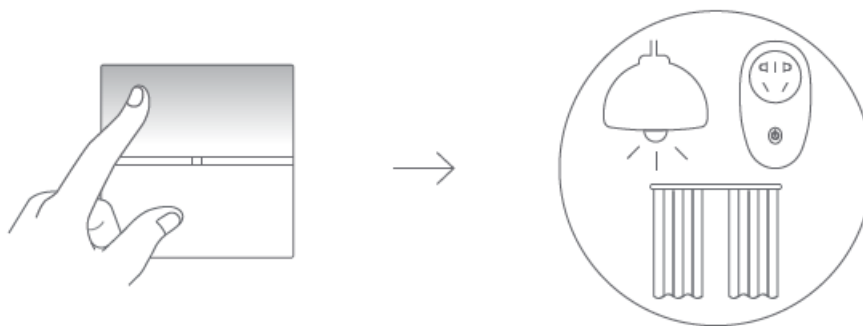

One-button control for multiple lights, sockets, and curtains.



Terncy WeChat Account

Contact Us

Online Service: <https://www.xiaoyan.io/service>

Service Call: 400-920-2823 E-mail: support@xiaoyan.io

Shanghai Xiaoyan Technology Co., Ltd.

Room 502, Building E, No.666, Shengxia Road, Shanghai, China



When approaching the switch, the indicator light will automatically illuminate.

Specification

| Product Type | Without Neutral Wire | With Neutral Wire | 2/3/4gang switch with Neutral Wire |
|---|----------------------|-------------------|------------------------------------|
| Total power of resistive load (AC220V) | 5Ws, <SOOW | 1500W | 2800W |
| Total power of capacitive load (AC220V) | SW<, <200W | s500W | s5QOW |

Load specification reference

| Load Device Type | Resistive classification |
|---|--------------------------|
| LED lighting | Capacitive |
| Energy-saving lamp/ fluorescent lamp | Capacitive |
| Incandescent lamp/ tungsten filament lamp | Resistive |
| Electric water heater | Resistive |
| Bathroom heater | Resistive |

For reference only, please refer to the markings of the original equipment manufacturer.

- **Product Name:** Silver Phoenix Pro Smart Wall Switch
- **Product Model:** TERNCY-WS06-D4
- **Product Dimension:** 86×88×36.5mm In Wall

- **Dimension:** 62.5×62.5×28mm Working
- **Temperature:** -10- 45°C
- **Humidity:** ≤80%
- **Working Voltage:** 110-220V AC 50/60HZ
- **Standards:** GB/T-26572-2011

Dos & Don'ts

- Do not submerge or clean the product;
- Please keep the product away from fire sources, high temperatures, and other extreme environments.

Note

Xiaoyan Tech Co., Ltd reserves the right to update the content in the manual. Please refer to the latest version for the most accurate information.

Warranty Card

Xiaoyan's after-sales service includes: Xiaoyan Tech shall remove any physical defects inherent in the device which are listed on the warranty card, free of charge, by replacing (at the sole discretion of Xiaoyan Tech) the defective device within the period of 15 days from the date of reception by the consumer, and by repairing the defective components of the device within the period of 24 months from the date of reception by the consumer.

* The warranties may be varied in different countries and regions.


The Warranty Applies to:

- Surface damages resulting from mishandling during transport or defects inherent in material or structure of the products;
- Failure of the buttons or indicator lights;
- Failure of wireless communication.

The Warranty Does Not Apply:

- When the warranty period expired;
- To damages resulting from repairing and introducing alterations by unauthorized persons;
- To damages caused by using accessories not recommended by the manufacturer;
- To damages resulting from other irresistible causes.

Documents / Resources

| | |
|---|---|
|  | Terncy WS06 Smart Wall Switch [pdf] Instruction Manual 400-00310, WS06, WS06 Smart Wall Switch, Smart Wall Switch, Wall Switch, Switch |
|---|---|