

TESLA
RF3900FMX
Built In
Refrigerator



TESLA RF3900FMX Built In Refrigerator User Manual

[Home](#) » [Tesla](#) » TESLA RF3900FMX Built In Refrigerator User Manual 

Contents

- 1 TESLA RF3900FMX Built In Refrigerator
- 2 Product Information
- 3 Usage Instructions
- 4 SAFETY INFORMATION
- 5 PROPER DISPOSAL
- 6 PROPER USE OF REFRIGERATOR
- 7 Changing the light
- 8 Names of components
- 9 Functions
- 10 Levelling feet
- 11 MAINTENANCE OF REFRIGERATOR
- 12 TROUBLESHOOTING
- 13 FAQ
- 14 Documents / Resources
 - 14.1 References

TESLA

TESLA RF3900FMX Built In Refrigerator



Specifications

- **Product Name:** Refrigerator RF3900FMX
- **Intended Use:** Household Use Only
- **California Proposition 65 Warnings:** Cancer and Reproductive Harm

Product Information

- The Refrigerator RF3900FMX is designed for household use and comes with safety features to ensure user protection and product longevity. The product images are for illustrative purposes only.

Usage Instructions

Safety Information

- Follow all safety instructions provided in the user manual to prevent injury or damage. Pay attention to symbols indicating different levels of risk.

Proper Disposal

- When disposing of the refrigerator, ensure refrigerants are evacuated by a licensed technician to prevent environmental damage.
- Follow local regulations for proper disposal.

Electricity Related Warnings

- Avoid placing items in the freezing chamber to prevent cracking of bottles or containers. Follow recommended guidelines for safe usage.

Energy Warnings

1. Do not set the refrigerator below the recommended temperature range for extended periods.
2. Avoid storing effervescent drinks in low-temperature compartments.
3. Adhere to food manufacturers' storage time recommendations.
4. Prevent a rise in temperature during defrosting by using proper insulation.
5. Take precautions during manual defrosting to maintain food quality.

SAFETY INFORMATION

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT

- To prevent injury to the user or other people and property damage, the instructions shown here must be followed.
- Incorrect operation due to ignoring of instructions may cause harm or damage, including death.
- The level of risk is shown by the following indications.



- This is a prohibition symbol. Any incompliance with instructions marked with this symbol may result in damage to the product or endanger the personal safety of the user.



- This is a warning symbol.
 - It is required to operate in strict observance of instructions marked with this symbol; or otherwise damage to the product or personal injury may be caused.



- This is a cautioning symbol. Instructions marked with this symbol require special caution. Insufficient caution may result in slight or moderate injury, or damage to the product.

IMPORTANT SAFETY INSTRUCTIONS



Risk Of Fire / Flammable Materials



- **WARNING** This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail

applications.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.



- **WARNING:** Keep ventilation openings, in the appliance enclosure or the built-in structure, clear of obstruction.



- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.



- **WARNING:** Do not damage the refrigerant circuit.



- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.



- **WARNING:** Please abandon the refrigerator according to local regulators for its use of flammable blowing gas and refrigerant.



- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.



- **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
 - Do not use extension cords or ungrounded two-prong adapters.



- **WARNING:** Connect to potable water supply only. (suitable for ice cube maker)



DANGER

- Risk of child entrapment. Before you throw away your old refrigerator or freezer.
- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.
- The refrigerator must be disconnected from the source of electrical supply before attempting the installation of the accessory.
- Refrigerant and cyclopentane foaming material used for the appliance are flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification, other than being disposed by combustion, to prevent damage to the environment or any other harm.




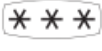



WARNING

For EU standard:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly the surfaces that can come in contact with food and the accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days. (Note 1)
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star  frozen-food compartments are suitable for storing pre-frozen food, storing or making ice cream, and making ice cubes. (Note 2)
- One-, two-, and three-star  compartments are not suitable for the freezing of fresh food. (note 3)
- For appliances without a 4-star  compartment: this refrigerating appliance is not suitable for freezing foodstuffs. (note 4)
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- **Note 1,2,3,4:** Please confirm whether it is applicable according to your product compartment type.
- For a freestanding appliance: this refrigerating appliance is not intended to be used as a built-in appliance.
- Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service

agent or similar qualified person.

- This product contains a light source of energy efficiency class (G)

SAVE THESE INSTRUCTIONS

- THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY



- **WARNING!** State of California Proposition 65 Warnings. Cancer and Reproductive Harm, www.P65Warnings.ca.gov.

PROPER DISPOSAL



WARNING Suffocation Hazard

- Before you throw away your old freezer or refrigerator.
- Remove the door or lid so that children cannot hide or get trapped inside your old appliance.
- Leave any shelves in place so that children may not easily climb inside.
- Failure to follow these instructions can result in death or brain damage.
- **IMPORTANT:** Flammable gas and refrigerant used. It is the consumer's responsibility to comply with Federal and Local regulations when disposing of this product.
- Refrigerants must be evacuated by a licensed, EPA certified refrigerant technician under established procedures.

Electricity related warnings

- Do not pull the power cord when pulling the power plug of the refrigerator. Please firmly grasp the plug and pull out from the socket.
- To ensure safe use, do not damage the power cord or use the power cord when it is damaged or worn.
- Please use a dedicated power socket; the power socket shall not be shared with other electrical appliances.
- The power cord should be firmly connected with the socket, otherwise fire may be caused.
- Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.
- Please turn off the valve of leaking gas, and then open doors and windows in case of leakage of gas and other flammable substances.
- Do not unplug the refrigerator and other electrical appliances, considering that a spark may cause a fire.
- Do not use electrical appliances on top of the appliance, unless they are of the type recommended by the manufacturer.

Warnings related to placing items

- Do not place flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damage to the product or fire accidents.

- Do not place flammable items near the refrigerator to avoid fires.
- This product is a household refrigerator and is only suitable for the storage of foods. According to national standards, a household refrigerator shall not be used for other purposes, such as storage of blood, drugs or biological products.
- Do not store beer, beverages, or other fluids contained in bottles or enclosed containers in the freezing chamber of the refrigerator, otherwise the bottles or enclosed containers may crack due to freezing and cause damage.

Warnings for use

- Do not arbitrarily disassemble or reconstruct the refrigerator, nor damage the refrigerant circuit; maintenance of the appliance must be conducted by a specialist.
- A damaged power cord must be replaced by the manufacturer, its maintenance department, or related professionals to avoid danger.
- The gaps between refrigerator doors and between doors and refrigerator body are small, do not place your hands in these areas to prevent squeezing your fingers. Please be gentle when opening the refrigerator door to avoid articles falling out.
- Do not pick up food or containers with wet hands in the freezing chamber when the refrigerator is running, especially metal containers, to avoid frostbite.
- Do not allow children to enter or climb inside the refrigerator to prevent children from being sealed in the refrigerator or injured by the falling refrigerator.
- Do not spray or wash the refrigerator; do not place the refrigerator in moist places easy to be splashed with water, so as not to affect the electrical insulation properties of the refrigerator.
- Do not place heavy objects on top of the refrigerator, considering that objects may fall when opening the door, and accidental injuries might be caused.
- Please pull out the plug in case of power failure or cleaning. Do not connect the refrigerator to the power supply within five minutes to prevent damages to the compressor due to successive starts.

Energy warnings

1. Refrigerating appliances might not operate consistently (possibility of defrosting of contents or temperature becoming too warm in the frozen food compartment) when set for an extended period below the cold end of the temperature range for which the refrigerating appliance is designed.
2. Effervescent drinks should not be stored in food freezer compartments or cabinets, or low-temperature compartments or cabinets, because some products, such as water ice should not be consumed too cold;
3. Do not exceed the storage time(s) recommended by the food manufacturers for any kind of food and particularly for commercially quick-frozen food in the food-freezer and the frozen- food storage compartments or cabinets
4. Prevent an undue rise in temperature of frozen food while defrosting the refrigerating appliance, such as wrapping the frozen food in several layers of newspaper.
5. A rise in temperature of frozen food during manual defrosting, maintenance, or cleaning can shorten the storage life.

Disposal




- Refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification, other than being disposed by combustion, to prevent damage to the environment or any other harm.



- When the refrigerator is scrapped, disassemble the doors, and remove the gasket of the door and shelves; put the doors and shelves in a proper place, to prevent trapping of any child.

Correct Disposal of this product:

 


-  This marking indicates that this product should not be disposed of with other household waste.
- To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.
- To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.
- They take this product in for environmental safe recycling.

PROPER USE OF REFRIGERATOR

Placement

- Before use, remove all packing materials, including bottom pads, foam pads and tapes inside of the refrigerator; tear off the protective film on the doors and the refrigerator body.
- Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or wet places to prevent rust or reduction of the insulating effect.
- Do not spray or wash the refrigerator; do not put the refrigerator in moist places, easy to be splashed with water, so as not to affect the electrical insulation properties of the refrigerator.
- The space on top of the refrigerator shall be greater than 10cm, and the refrigerator should be placed against a wall with a distance of more than 10cm to facilitate heat dissipation.
- Spare enough space for convenient opening of the doors and drawers or statement by the distributor.

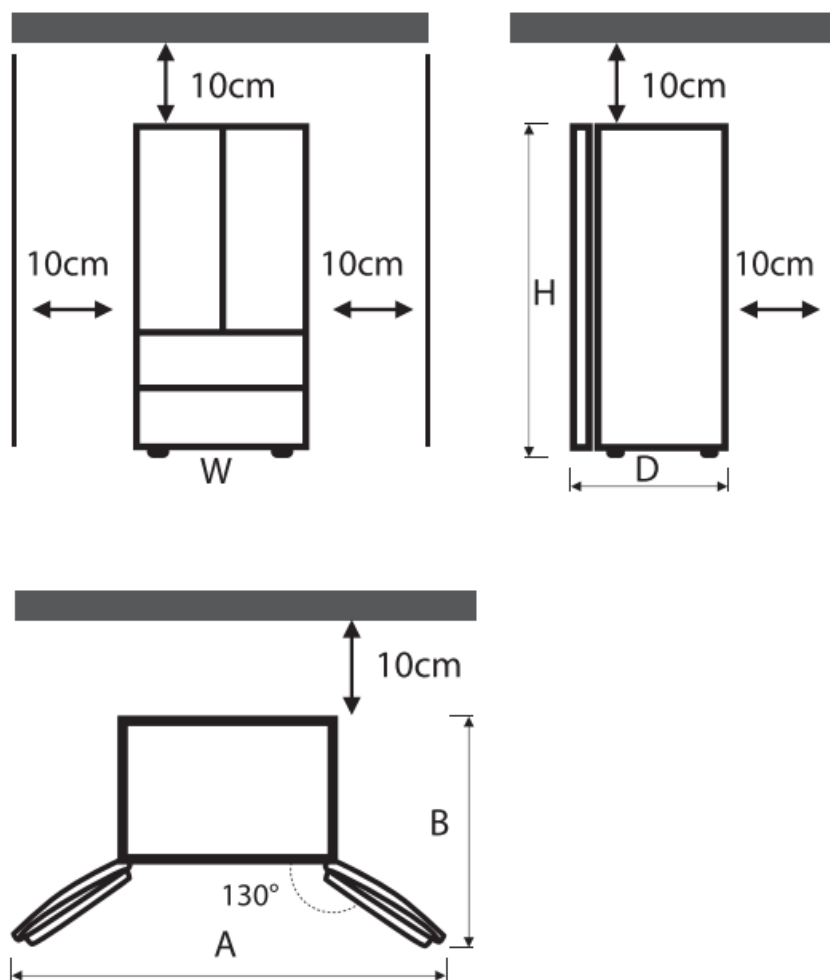

Width “w”	703
Depth “D” (without handle)	686
Height “H”	1780
A	1170
B	940

(unit: mm)

- The measurements in the above table may differ, depending on the measuring method.
- **NOTE** This refrigerator needs to be installed independently and cannot be used as a built-in. Otherwise, it will cause problems such as failure to install into the cabinet, the performance and life of the product are reduced.
- And the manufacturer does not provide a basic product warranty.

Energy saving tips

 
- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool down to room temperature before placing them in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down




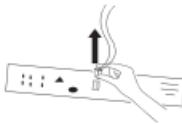
on frost build-up inside the appliance.

- Appliance storage bins should not be lined with tin foil, wax paper, or paper towels. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible
- Light source in this product is replaceable only by qualified engineers.

Changing the light

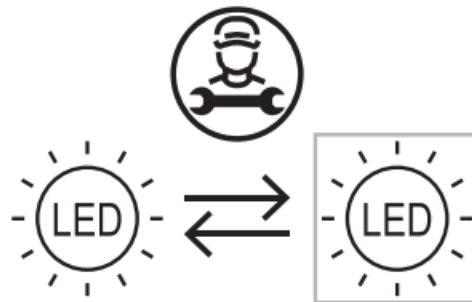- Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.
- Light source in this product is replaceable only by qualified engineers.




	1. Please take out the plug before removal.
	2. Remove the lampshade with a screwdriver.
	3. Take down the lamp panel.
	4. Remove the connection terminal.

Start to use

- Before initial start, keep the refrigerator still for two hours before connecting it to the power supply.
- Before placing any fresh or frozen foods, the refrigerator should have run for 2 – 3 hours, or for more than 4 hours in summer when the ambient temperature is high.
- **NOTE:** This product is not recommended for use with sockets or main switch with the A/ GFCI function, otherwise it may cause false tripping.
 1. It doesn't pose a safety risk when tripped.
 2. If tripping persists, it is recommended to replace the sockets or main switch without A/GFCI function.

 Names of components

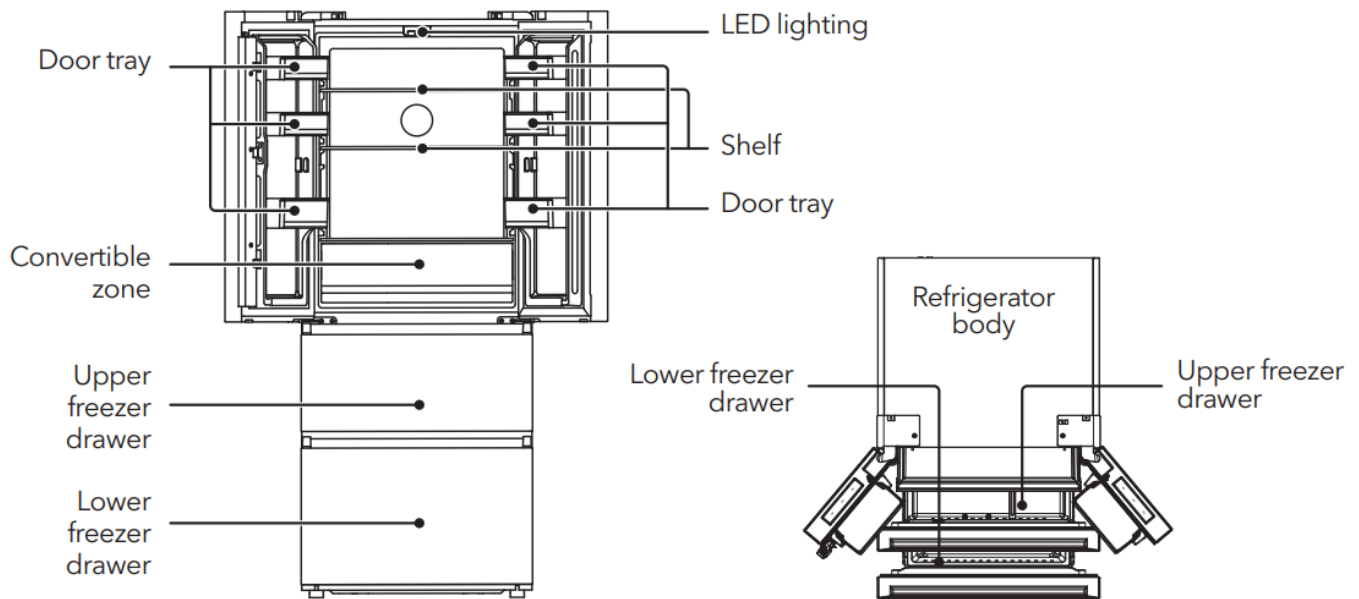

- The picture above is only for reference.
- The actual configuration will depend on the physical product or statement by the distributor.

 
Refrigerating chamber

- The Refrigerating Chamber is suitable for storage of a variety of fruits, vegetables, beverages, and other food consumed in the short term, with a suggested storage time of 3 days to 5 days.
- Cooked foods shall not be put in the refrigerating chamber until cooled to room temperature.
- Foods are recommended to be sealed up before putting them into the refrigerator.
- The glass shelves can be adjusted up or down for a reasonable amount of storage space and easy use.

Freezing chamber

- The low temperature freezing chamber may keep food fresh for a long time, and it is mainly used to store frozen foods and make ice.
- The freezing chamber is suitable for storage of meat, fish, rice balls, and other foods not to be consumed in the short term.
- Chunks of meat are preferably to be divided into small pieces. Please note food shall be consumed within the shelf life.
- Drawers, food boxes, shelves, etc. placed according to the position in the picture above are the most energy efficient.
- **NOTE** Storage of too much food during operation after the initial connection to power may adversely affect the freezing effect of the refrigerator.
- Foods stored shall not block the air outlet; or otherwise, the freezing effect will also be adversely affected.

Functions

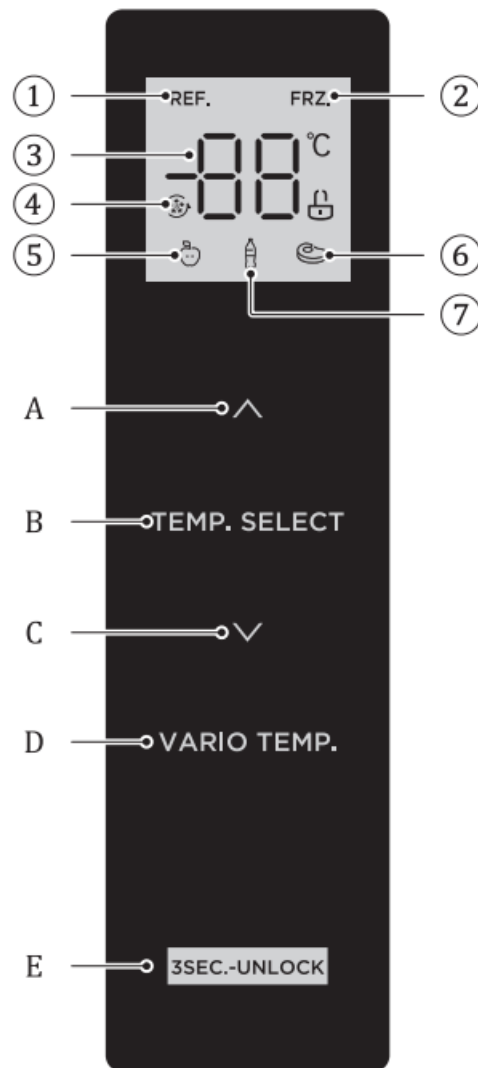


1. Refrigerating icon
 2. Freezing icon
 3. Temperature display icon
 4. Super cool/freezing icon
 5. Fruit/vegetable icon
 6. Meat icon
 7. Drink icon
- **A.** Temperature up button
 - **B.** Temperature zone selection button
 - **C.** Temperature down button
 - **D.** Variable temperature button
 - **E.** Lock/Unlock button

Operation instructions





Display

- When electrifying the refrigerator, the display screen will total display for 3 seconds. Meanwhile, the starting bell rings and then the screen enters the normal display of the operation.
- The first time for using the refrigerator, the default set temperature of the refrigerating chamber and the freezing



chamber is 4° C/-18 °C respectively.

- When the error occurs, the display shows the error code (see next page); during normal running, the display shows the set temperature of the refrigerating chamber or freezing chamber.
- Under normal circumstances, if there is no operation on the display panel or door opening action within 30s, then the display is locked, and the state  goes out.



Lock /unlock

- In the unlocked state, long press the lock button  for 3 seconds, enter the lock state.
- The logo  goes out, and the buzzer sounds, it means the display panel is locked, at this time, button operation cannot be implemented;
- In the locked state, long press the lock button  for 3 seconds, enter the unlocked state.
- The logo  lights up and the buzzer sounds, it means the display panel is unlocked, at this time, button operation can be implemented.

Temperature setting of refrigerating chamber

- Press temperature zone selection button to choose the setting temperature zone of refrigerating chamber, and then press or  to  adjust the setting temperature of refrigerating chamber.
- The temperature setting range for refrigerating chamber is 2°C ~ 8°C.



Temperature setting of the freezing chamber



- Press the temperature zone selection button to choose the setting temperature zone of the freezing chamber, and then press  or  to adjust the setting temperature of the freezing chamber.
- The temperature setting range for refrigerating chamber is -24°C ~ -16°C.

Temperature setting of the variable temperature chamber


- Press the Variable temperature button to adjust the setting temperature of the chamber, the adjusting range is Fruit/vegetable, drink, and meat.

Mode setting

- **Set the Super cooling mode:** after the temperature of the refrigeration room is adjusted to 2°C, press the temperature down button “  ” to enter the super cooling mode.
- In the super cooling mode, the temperature of the refrigerating chamber is automatically set to 2°C.
- Exit the Super cooling mode: press the temperature up button “  ” to exit the super cooling mode or automatically exit the super cooling mode after 6h.
- After exiting the super cooling mode, the temperature of the refrigerator will automatically return to the temperature set before the super cooling mode.

- Set the super freezing mode: after the temperature of the freezing chamber is adjusted to -24°C, press the temperature down button “” to enter the super freezing mode.
- In the super freezing mode, the temperature of the freezing chamber is automatically set to -24°C
- Exit the super freezing mode: press the temperature up button “” to exit the super freezing mode or automatically exit the super freezing mode after 32h.
- After exiting the super freezing mode, the freezing chamber temperature will automatically return to the temperature set before the super freezing mode
- According to IEC62552:2007, the test condition is as follows: Start the super freezer mode in advance, and wait when the fridge enters automatic defrosting after 18 hours, and then apply the freezer load.
- The maximum defrosting time is 72 hours and the minimum is 12 hours at 32°C. Recommended setting: refrigerated chamber 4°C, freezing chamber -18°C.
- **NOTE** The quick-freezing function is designed to maintain the nutritional value of the food in the freezer. It can freeze the food in the shortest time.
- If a large amount of food is frozen at one time, it is recommended that the user turn on the quick-freezing function and put the food in.
- At this time, the freezing speed of the freezer compartment is increased, which can quickly freeze the food, effectively lock the nutrition of the food, and facilitate storage.

Sabbath mode

- Unlock the fridge, and then press the “” and the lock button at the same time for 4 seconds, to enter the Sabbath mode.

Press any key to exit. In this mode, the fridge status:

- **a.** Display control board and lights remain off, and no alarm.
- **b.** The refrigerator cools normally.
- **c.** Within five minutes of the door opening, the compressor, fan motor status does not change.

Storage upon power failure

- In case of power failure, the instant working state will be locked and maintained till re-electrification.


Fault indication

- The following warnings appearing on the display indicate corresponding faults of the refrigerator.
- Though the refrigerator may still have cold storage function with the following faults, the user shall contact a maintenance specialist for maintenance, to ensure optimized operation of the appliance.

Fault code	Fault description
E1	Temperature sensor failure of refrigerating chamber
E2	Temperature sensor failure of freezing chamber
E3	Temperature sensor failure of the variable temperature chamber
E4	Failure of defrosting sensor in refrigerating chamber

Fault code	Fault description
E5	Freezing defrost sensor detection circuit error
E6	Communication error
E7	Circulation of temperature detection circuit error
EH	Moisture sensor error

 Levelling feet

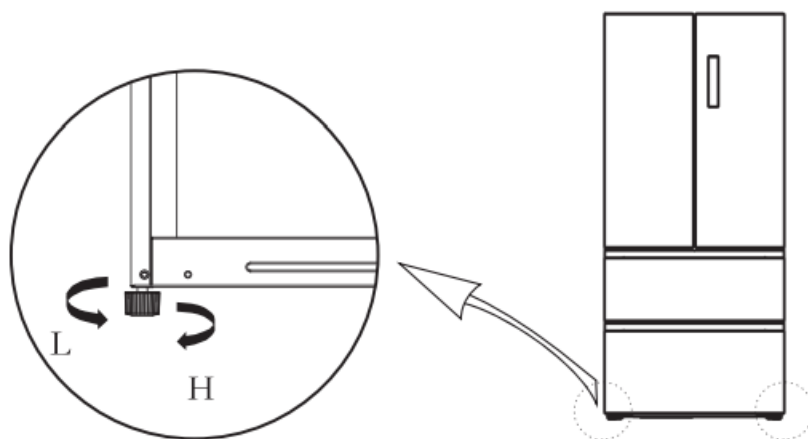


- Schematic diagram of the levelling feet.

Adjusting procedures:

- **a.** Turn the feet clockwise to raise the refrigerator;
- **b.** Turn the feet counterclockwise to lower the refrigerator;
- **c.** Adjust the right and left feet based on the procedures above to a horizontal level.
- The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor

 Levelling door

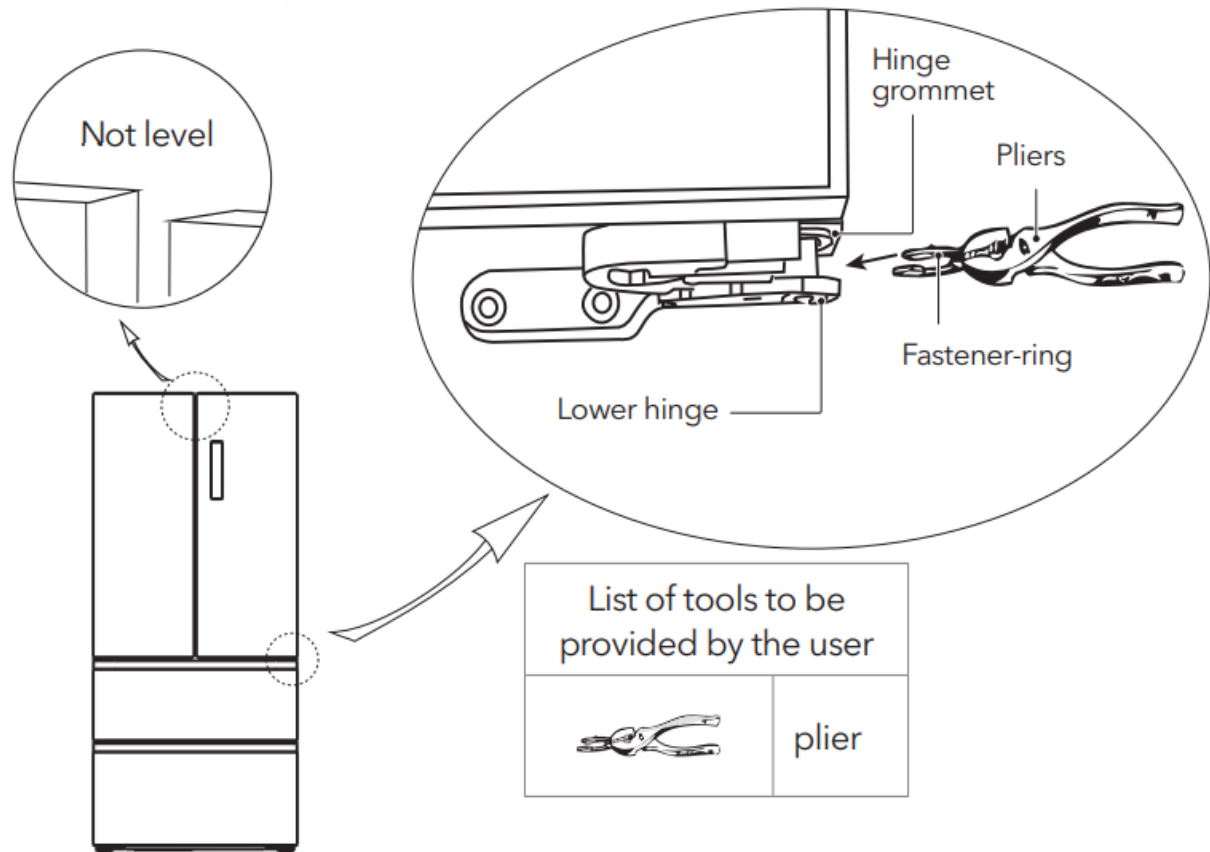

- Raise the lower door to the level of the higher door.
- Insert the supplied fastener-ring by using pliers in the gap between the hinge-grommet and the lower hinge.
The number of fasten-rings you will need to insert depends on the gap.
- The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor

MAINTENANCE OF REFRIGERATOR

Overall cleaning

- Dust behind the refrigerator and on the floor must be cleaned to improve the cooling effect and energy saving.
- Check the door gasket regularly to make sure there is no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- The interior of the refrigerator should be cleaned regularly to avoid odors.
- Please turn off the power before cleaning the interior, remove all foods, drinks, shelves, drawers, etc.
- Use a soft cloth or sponge to clean the inside of the refrigerator, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.
- For areas that are difficult to clean inside the refrigerator (such as narrow places, gaps or corners), we recommend to wipe them regularly with a soft rag, soft brush, etc. and when necessary, with some tools (such as thin sticks) to ensure no contaminants or bacterial accumulation in these areas.
- Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odors inside the refrigerator or contaminate food.
- Clean the door tray, shelves and drawers with a soft cloth dampened with soapy water or diluted detergent. Dry

with a soft cloth or dry naturally.

- Wipe the outer surface of the refrigerator with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.
- Do not use hard brushes, scouring pads, wire brushes, abrasives (such as toothpaste), organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, which may damage the fridge surface and interior.
- Boiling water and organic solvents such as benzene may deform or damage plastic parts..
- Do not rinse directly with water or other liquids during cleaning to avoid short circuit or affect electrical insulation after immersion.
- Please unplug the refrigerator for defrost and cleaning.

Defrosting

 
- The refrigerator is made based on the air-cooling principle and thus has an automatic defrosting function.
- Frost formed due to a change of season or temperature may also be manually removed by disconnection of the appliance from the power supply or by wiping with a dry towel.

Out of operation

- **Power failure:** In case of power failure, even if it is in summer, foods inside the appliance can be kept for several hours; during the power failure, the times of door opening shall be reduced, and no more fresh food shall be put into the appliance.
- **Long-time nonuse:** The appliance shall be unplugged and then cleaned; then the doors are left open to prevent odor.
- **Moving:** Before the refrigerator is moved, take all objects inside out, fix the glass partitions, vegetable holder, freezing chamber drawers, etc. with tape, and tighten the leveling feet; close the doors and seal them with tape.
- During moving, the appliance shall not be laid upside down or horizontally, or be vibrated; the inclination during movement shall be no more than 45°.
- The appliance shall run continuously once it is started. Generally, the operation of the appliance shall not be interrupted; otherwise, the service life may be impaired


Cleaning of door tray

- According to the direction arrow in the figure below, use both hands to squeeze the tray, and push it upward, then you can take it out.
- After washing the tray, having been taken out, you can adjust its installation height per your requirement.
- Soft towels or sponge dipped in water and non-corrosive neutral detergents are suggested for cleaning. The freezer shall be finally cleaned with clean water and dry cloth. Open the door for natural drying before the power is turned on.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives, such as toothpastes, organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, clean the refrigerator considering that this may damage the fridge surface and interior.

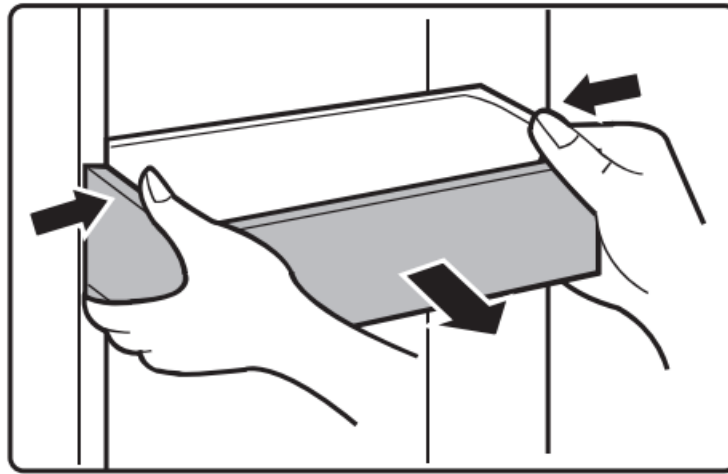

Cleaning of the Glass shelf

 - As the innermost part of the refrigerator liner where it contacts the shelves, has a backstop, you shall raise the shelves upward, then you can take it out.
- Adjust or clean the shelves according to your requirement.
- Soft towels or sponge dipped in water and non-corrosive neutral detergents are suggested for cleaning. The freezer shall be finally cleaned with clean water and a dry cloth. Open the door for natural drying before the power is turned on.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives, such as toothpastes, organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, clean the refrigerator considering that this may damage the fridge surface and interior.

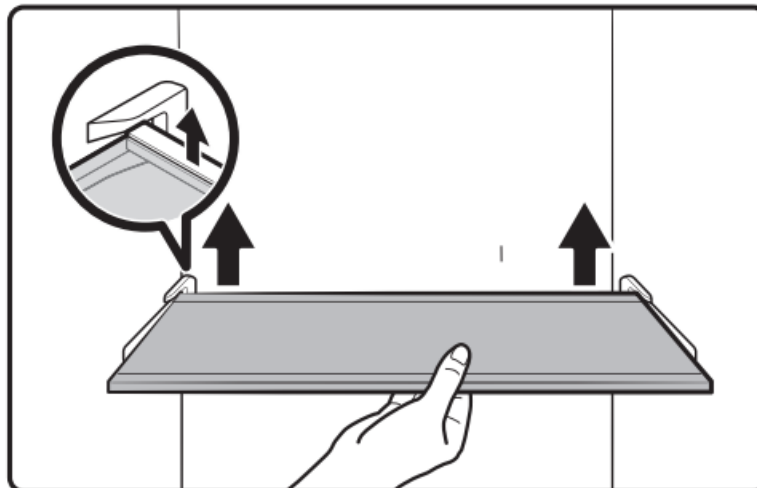



- The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor

Cleaning of freezer drawer

- Removal of the freezer drawer.
- Please remove the packaging, tape, etc. on the drawer or tray before use, so as not to affect the normal use of the refrigerator.
- After the freezer door is drawn to the maximum stroke, first take out the tray, then lift it in the direction of the arrow, and then pull out the door and drawer together to take out the drawer.
- **Removal of the freezer upper drawer partition:** After the freezer door is drawn to the maximum stroke, as

shown by the arrow, press the inner side of the upper drawer of the freezer by hand to slightly deform the drawer.

  - Lift the drawer partition to remove the partition.

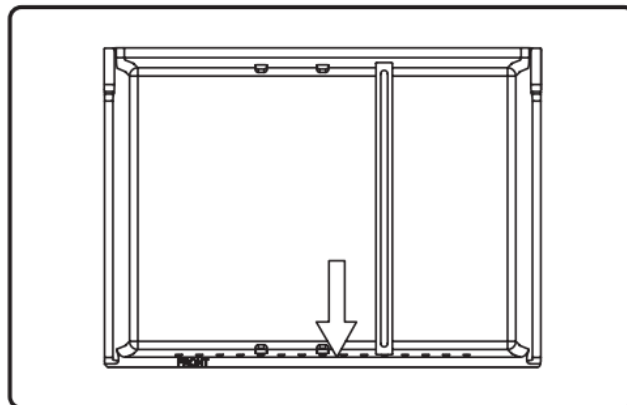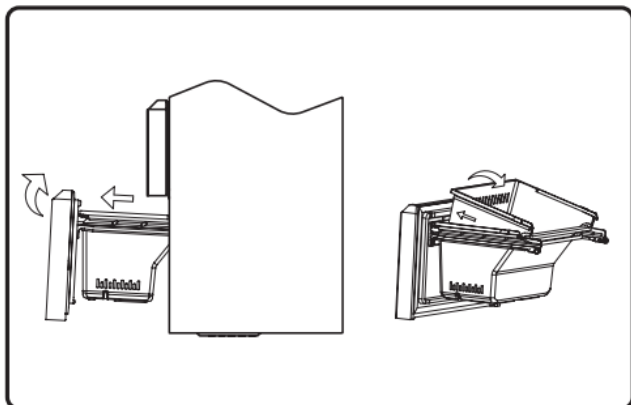

TROUBLESHOOTING


The following simple issues can be handled by the user. Please call the after-sales service department if the issues are not solved.

Failed operation	<p>Check whether the appliance is connected to power or whether the plug is in good contact.</p> <p>Check whether the voltage is too low.</p> <p>Check whether there is a power failure or partial circuits have tripped.</p>
Odor	<p>Odorous foods shall be tightly wrapped. Check whether there is any rotten food. Clean the inside of the refrigerator.</p>
Long-time operation of the compressor	<p>Long operation of the refrigerator is normal in summer.</p> <p>When the ambient temperature is high, it is not advisable to have too much food in the appliance at the same time.</p> <p>Food shall get cool before being put into the appliance. The doors are opened too frequently.</p>
Light fails to get lit	<p>Check whether the refrigerator is connected to the power supply and whether the illuminating light is damaged.</p> <p>Have the light replaced by a specialist.</p>
Doors cannot be properly closed	<p>The door is stuck by food packages. Too much food is placed. The refrigerator is tilted.</p>
Loud noises	<p>Check whether the floor is level and whether the refrigerator is placed stably.</p> <p>Check whether accessories are placed at proper locations.</p>
There are drops of water in the refrigerator	<p>The refrigeration door is not closed properly. Close the refrigeration door.</p>
The refrigerator beam or vertical beam is hot	<p>There are anti-condensation tubes around the tank to reduce the heat generated during operation. It is normal.</p>



FAQ

- **Q: Can I store effervescent drinks in the freezer compartment?**
 - **A:** Effervescent drinks should not be stored in low-temperature compartments to avoid consuming them too cold.
- **Q: How should I dispose of the refrigerator?**
 - **A:** When disposing of the refrigerator, ensure refrigerants are evacuated by a licensed technician and follow local regulations for proper disposal.

Documents / Resources

	<p>TESLA RF3900FMX Built In Refrigerator [pdf] User Manual RF3900FMX Built In Refrigerator, RF3900FMX, Built In Refrigerator, Refrigerator</p>
---	--

References

-  [Tesla.info | Technology for all](https://tesla.info)
-  [P65Warnings.ca.gov](https://p65warnings.ca.gov)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.