

TESLA WF101593M Front Loading Washing Machines User Manual

Home » Tesla » TESLA WF101593M Front Loading Washing Machines User Manual



C F Product images are for illustrative purposes only and may differ from the actual product.

Contents

- **1 SAFETY INSTRUCTIONS**
- **2 INSTALLATION**
- **3 OPERATIONS**
- **4 Control Panel**
- 5 Option
- **6 MAINTENANCES**
- 7 Troubleshooting
- **8 Error Codes**
- 9 Customer service
- 10 Transport
- 11 Technical Specifications
- 12 Packaging/Old appliance
- 13 Product Information Sheet
- 14 EU DECLARATION OF
- **CONFORMITY**
- 15 Documents / Resources

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.



This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.



CAUTION!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.



NOTE

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.



WARNING!

The electric shock!

- If the supply cord is damaged, it must be replaced by the manufacturer its service agent or similarly qualified persons in order to avoid a hazard.
- If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons. Risk of electric shock!
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised that they do not play with the appliance.
- Children 3 years and under shall be kept away from the appliance or continuously supervised.
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

Installation location and surrounding

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- Do not install the machine on a carpet floor. The obstruction of the openings by a carpet can damage the machine.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the washing machine.
- Do not operate the machine in rooms with a temperature of below 5°C. This can cause damages to parts of it. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see "Maintenance Cleaning of drain pump filter") to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.

Installation

- Remove all packaging material and transport bolts before using the appliance. Otherwise, serious damage
 may result.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- Mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
- Before using the washing machine, the product shall be calibrated.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Max. Inlet water pressure 1 MPa. Min. inlet water pressure 0.05 MPa.

Electrical connection

- Make sure the supply cable is not trapped by the machine, it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the values in the "Technical specifications" table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.
- Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.

WARNING!

- Don't use multiple plugs or extension cords.
- The appliance must not have an external switching device such as a timer or connected to a circuit that is
 regularly switched on and off.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out power plug with wet hands.
- Always pull at the plug, not at the cable.
- Always unplug the appliance if it is not being used.

Water connections

- Check the connections of the water inlet tubes, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak close the water tap and get it repaired. Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating.
- The water inlet and outlet hoses have to be safely installed and remain undamaged. Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

Operation and maintenance

- Never use any flammable, explosive or toxic solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones
 etc. may cause serious damages to this machine.
- Remove all objects from pockets such as lighters and matches before use the appliance.
- Thoroughly rinse items that have been washed by hand.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot
 removers, turpentine, wax and wax removers should be washed in hot with an extra amount of detergent
 before being dried in the appliance.
- Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine
- Fabric softeners or similar products should be used as recommended in their instructions.
- Never try to open the door forcefully. The door will unlock shortly after the end of a cycle.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.
- Always unplug the appliance and close the water tap before cleaningand maintenance and after each use.
- Never pour water over the appliance for cleaning purpose. Risk of electric shock!
- Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. The producer will not be responsible for damages caused by the intervention of not authorized persons.

Transport

- Before Transport:
 - Bolts shall be reinstalled to the machine by a specialized person
 - Accumulated water shall be drained out of the machine
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting.
 The machine door cannot be used as a handle.


INTENDED USE

The product is intended only for home use and for textiles in household amounts suitable for machine washing and drying. This appliance is for indoor use only and not intended for built in use. Only use according to these instructions. The appliance is not intended for commercial use. Any other use is considered as improper use. The producer is not responsible for any damage or injuries that may result of it.

- This appliance is intended to be used in household and similar applications such as:
 - -Staff kitchen areas in shops, offices and other working environments;
 - -Farm houses:
 - -By clients in hotels, motels and other residential type environments;
 - -Bed and breakfast type environments;
 - -Areas for communal use in blocks of flats or in launderettes.

INSTALLATION

Product Description

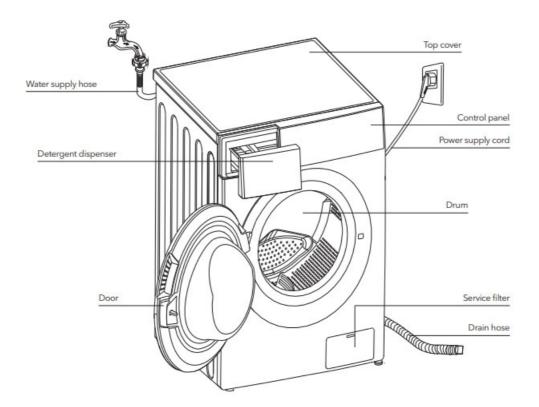



The product line chart is for reference only, please refer to real product as standard.


Accessories




Installation area



- Stability is important to prevent the product from wandering! Make sure the machine standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture

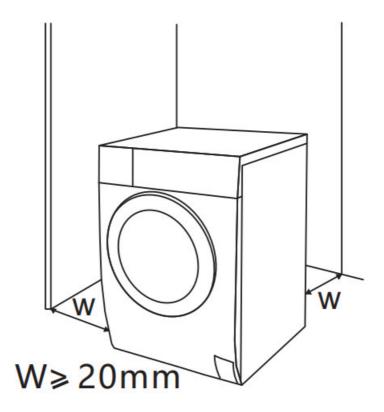

Before installing the machine, the location characterized as follows shall be selected:

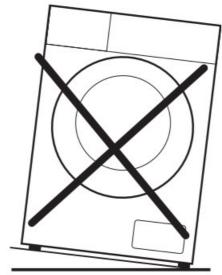


- 1. Rigid, dry, and level surface
- 2. Avoid direct sunlight
- 3. Sufficient ventilation
- 4. Room temperature is above 0°C
- 5. Keep far away from the heat sources such as coal or gas burning appliances.

Unpacking the washing machine



- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation! Keep all packaging well away from children.

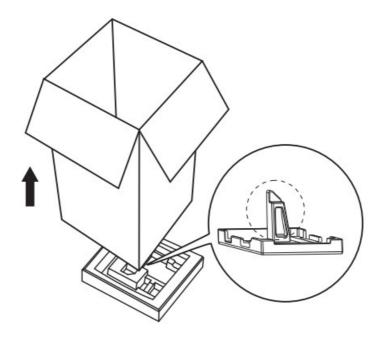


- 1. Remove the cardboard box and styrofoam packing.
- 2. Lift the washing machine and remove the base packing. Make sure the small triangle foam is removed with the bottom one together. If not, lay the unit down with side surface, then remove the small foam from the unit bottom manually.
- 3. Remove the tape securing the power supply cord and drain hose.
- 4. Remove the inlet hose from the drum.

Remove transport bolts


WARNING! You must remove the transport bolts from the backside before using the product.



Loosen the 4 transport bolts with a spanner

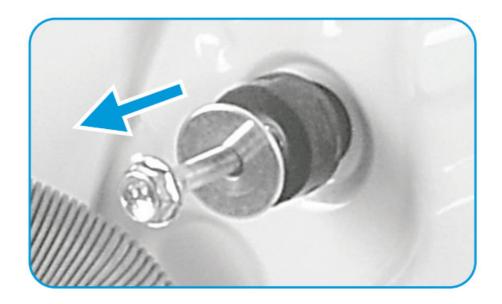


Remove the bolts including the rubber parts and keep them for future use.

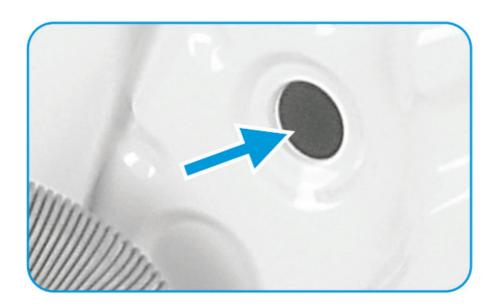

Close the holes using transport hole plugs **Levelling the washing machine**

 $\stackrel{\text{\@colored}}{}$ **WARNING!** The lock nuts on all four feet must be screwed tightly against the housing.

1.

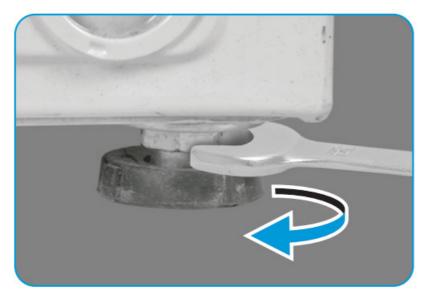


Loosen the lock nut.

- 2. Turn the foot until it reaches the floor.
- 3. Adjust the legs and lock the nuts with a spanner. Make sure the machine is level and steady.

Connect Water Supply Hose



- To prevent leakage or water damage, follow the instructions in this chapter!
- Do not kink, crush, modify or sever water inlet hose.

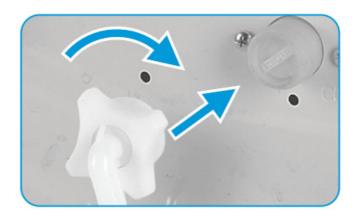

Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.





Connect manually, do not use tools. Check if the connections are tight.


Drain Hose




- Do not kink or protract the drain hose.
- Position drain hose properly ,otherwise damage might result of water leakage.

There are two ways to place the end of drain hose:

1. Put it into the water trough.

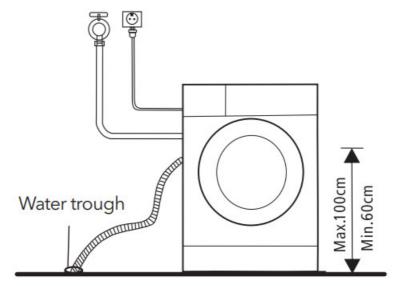

2. Connect it to the branch drain pipe of the trough.

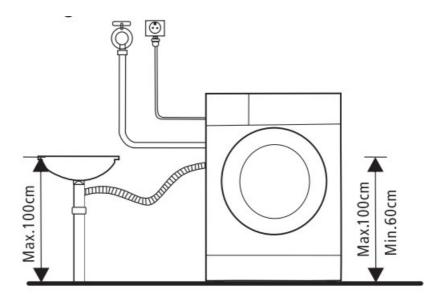

OPERATIONS

Quick Start



Before washing, please make sure it's installed properly.
 Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, start the Cotton program at 90°C without laundry and detergent.


CALIBRATION

It's recommended to calibrate the washing machine, so that provide the best performance.

The appliance is able to detect the amount of laundry loaded. This function is optimizing the product performance by minimizing energy and water consumption, saving you money and time. For this reason it's recommended to calibrate the appliance for best use.


- 1. Remove all accessories from the drum and close the door;
- 2. Insert the mains plug to the socket;
- 3. Switch on the washing machine and press "Delay" and "Temp." simultaneously for 10 seconds until "t19" is displayed;
- 4. Press start the appliance and wait till "****" is displayed.

Before Washing

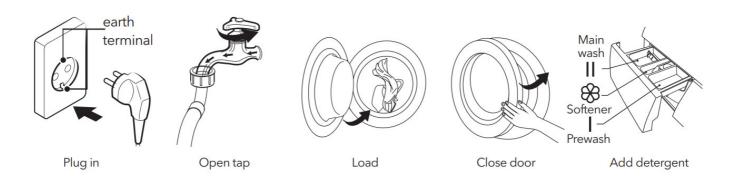




Detergent need to be added in compartment I if the pre-wash function is selected. **Washing**

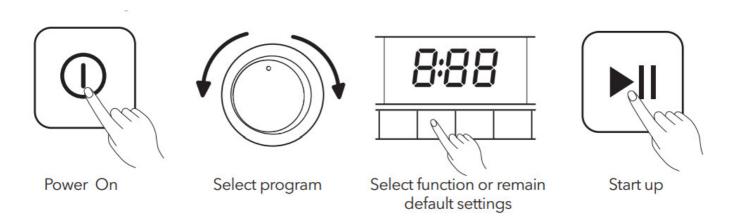

After Washing Buzzer beep or "End" on display. Before Each Washing

- The ambient temperature of the washing machine should be 5-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine washing properly.

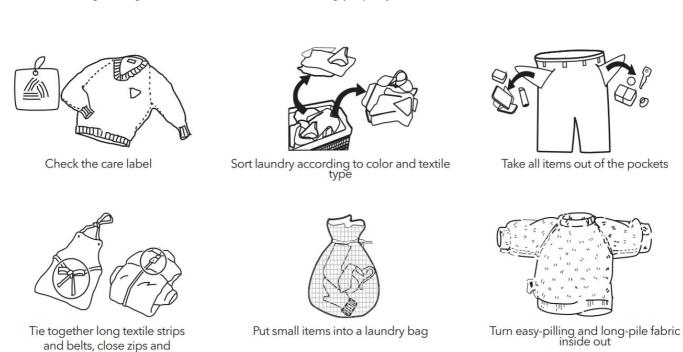

⚠ WARNING!

button

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances like wax, oil, paint, gasoline, alcohol, kerosene, and other flammable materials.
- Washing single clothes items may easily create big eccentricity and cause alarm due to unbalance. Therefore it


is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.

Detergent Dispenser

I II	Prewash detergent
	Main wash detergent
88	Softener
8	Release button to pull out the dispenser

(CAUTION!

Detergent only need to be added in "compartment I "afterselecting pre-wash function.

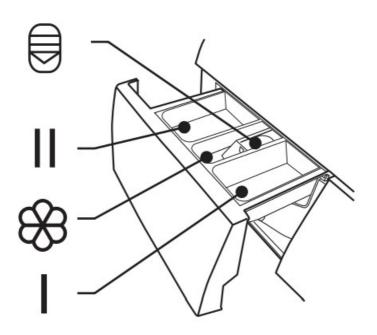

Program	I	II	₩
Cotton	0	•	0
Synthetic	0		0
Baby Care	0		0
Jeans	0		0
Mix	0	•	0
20°C			0
Rinse & Spin			0
Spin Only			0
Program	I	П	
Intensive		•	0
ECO 40-60		•	0
Delicate			0
Wool		•	0
Sport Wear		•	0
Rapid 45'		•	0
Quick 15'		•	0

	Means	must
0	Means	optional

Detergent Recommendation

Recommended washing deter gent	Wash cycles	Washing temp.	Type of laundry and textile
Heavy-duty detergent with bleaching agents and optical br ighteners	Cotton ECO 40-6 0 Mix, Jeans,Intensive	20/30/40/60	White laundry made from boil-proof co tton or linen
Colour detergent without bleac hing agent and optical brighten ers	Cotton, EC040- 6 0, Mix, Jeans, Intensive	Cold/20/30/40	Coloured laundry made from cotton or linen
Color or mild detergent without optical brighteners	Synthetic	Cold/20/30/40	Coloured laundry made from easy car e fibres or synetheic materials
Mild washing detergent	Synthetic	20/30	Delicate textiles, silk, viscose
Special wool detergent	Wool	20/30	Wool



- Agglomerating or ropy detergent or additive can be diluted in some water before pouring it into the detergent dispenser, to avoid its inlet to get blocked and thus cause a water overflow.
- Please choose the suitable type of detergent to get a maximum of washing performance and a minimum of water and energy consumption
- To achieve the best cleaning result a proper detergent dosing is important.
- Use a reduced detergent amount if the drum is not filled completely.
- Always adjust the amount of detergent to the water hardness, if your tap water is soft, use less detergent.
- Dose according to how dirty your laundry is, less dirty clothes require less detergent.
- · Highly concentrated (compact detergent) requires particularly accurate dosing.


Following symptoms are a sign of detergent overdosing:

- heavy foam formation
- poor washing and rinsing result

Following symptoms are a sign of detergent underdosing:

- laundry turns grey
- built-up of limescale deposits on the drum, the heating element and/or the laundry

Control Panel

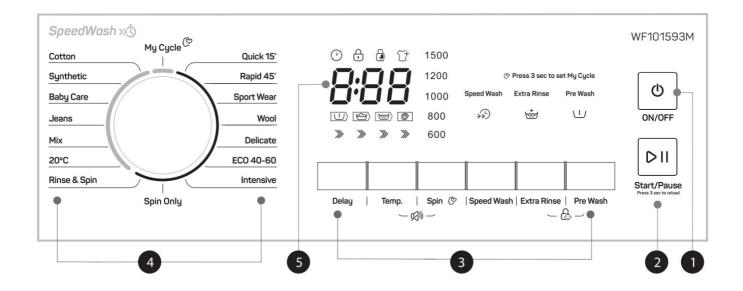

1. Power

Product is on/off.

2. Start/Pause

Press the button to start or pause the washingcycle.

3. Option


This allows you to select an additional functionand will light when selected.

4. Programmes

Available according to the laundry type.

5. Display

The display shows the settings, estimated time remaining, options, and status messages for your washer. The display will remain on through the cycle.

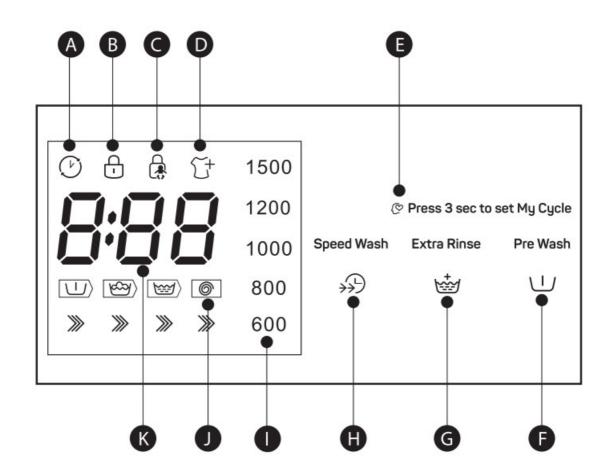

A Display

B Door Lock

C Child Lock

D Reload

E My Cycle

F Pre Wash

G Extra Rinse

H Speed Wash

I Spin Speed

J Rate Of Progress(Pre wash- Wash-RinseSpin)

K Wash Time Delay Time Error End

Programs

Program	Load (kg)	Default Time
Cotton	10	3:39
Synthetic	5	3:17
Baby Care	10	1:42
Jeans	10	1:35
Mix	10	1:20
20°C	10	1:01
Rinse&Spin	10	0:20
Spin Only	10	0:12
Intensive	10	3:48
ECO 40-60	10	3:53
Delicate	10	0:50
Wool	2	1:07
Sport Wear	10	0:45
Rapid 45'	2.5	0:45
Quick 15'	2.5	0:15



The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

Cycle	Nominal cap acity in kg	Cycle durati on in hours and m inutes	Energy consumption in kWh/oper ating cycle	Water consu mption in lite r/operating c ycle	Highest was hing temperature °C	Residual mo isture in % / Spin speed
20°C	5.0	1:01	0.25	60	20	65%/ 1000
Cotton 60°C	10.0	3:44	2.	80	60	53%/ 1500
Intensive	10.0	3:48	1.	80	40	70%/ 800
MIX	10.0	1:20	0.85	80	40	70%/ 800
Quick 15'	2.0	0:15	0.030	40	Cold	75%/ 800
	10.0	3:59	1.	73	38	53%/1500
ECO 40-60	5.0	3:00	0.672	53	38	53%/1500
	3.	3:00	0.235	38	23	53%/1500

- The above data is for reference only, and the data may change due to different actual use conditions.
- The valves given for programmes other than the ECO 40-60 programme are indicative only.
- Concerning to Regulation(EU) 2019/2023,

The EU energy efficiency class is: B

• Energy test program: ECO 40-60. Other as the default.

Half load for 10.0Kg machine:5.0Kg.

Quarter load for 10.0Kg machine:2.5Kg.

Programs

Programs are available according to the laundry type.

Cotton	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
Synthetic	Wash synthetic articles, for example: shirts, coats, blending. While washin g the knitting textiles, detergent quantity shall be reduced due to its loose s tring construction and easily forming bubbles.
Baby Care	Washing the baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.
Jeans	Specially for jeans.
Mix	Mixed load consisting of textiles made of cotton and synthetics.
Rinse&Spin	Extra rinse with spin.
Spin Only	Extra spin with selectable spin speed.
Intensive	To increase the washing effects, washing time is increased.
ECO 40-60	This program is specially designed for washing duvet coats Default 40°C, not selectable, suitabale for laundry washing at about 40°C-60°C.
Delicate	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics.
Wool	Hand or machine-washable wool or richwool textiles. Especially gentle was h programme to prevent shrinkage, longer programme pauses (textiles res t in wash liquor).
Sport Wear	Washing the activewear.
Rapid 45'	This programme is suitable for washing not very dirty clothes, save more e nergy and washing.
Quick 15'	Extra short programme approx, suitable for lightly soiled washing as a small amounts of laundry.

- 1) The highest temperature reached by the laundry in the wash cycle for at least 5 minutes.
- 2) Residual moisture after the wash cycle in water content percent and the spin speed at which this was achieved.
- 3) The ECO 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. This programme is used to assess the compliance with the regulation (EU) 2019/2014, (EU) 2019/2023, (EU)2021/340, (EU) 2021/341 The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.

Loading the household washer up to the capacity indicated for the respective programmes will contribute to energy and water savings.

Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.



If there is any break in the power supply while the machine is operating, a special memory stores the selected programme. The machine will continue the programme when the power supply is re-established.

Option

Cycle	Default Temp. (°C)	Default spin speed in r pm	Additional Functions
Wash cycles		1500	
Quick 15'	Cold	800	0
Rapid 45'	40	800	0
Sport Wear	20	800	©, ₩, U ©, ₩ ©, ₩
Wool	40	600	Ů, 🍲
Delicate	30	600	©, 🕁
ECO 40-60	_	1500	()
Intensive	40	800	()
Spin Only	_	1000	()
Rinse & Spin	_	1000	©, *
20°C	20	1000	C, , , , 🖶
Mix	40	800	७,०,७,७,७
Jeans	30	1000	७,₷,७,७
Baby Care	60	800	७,ॐ,♚,∪
Synthetic	40	1200	७,ॐ,♚,∪
Cotton	40	1500	ⓒ,ᅠ쫘, 嵖, ঙ

■ NOTE

- For the maximum spin speed, program time, and other details of the ECO 40-60 program, please refer to the content on the Product Fiche page.
- If an adjustment is not possible for a cycle, the table shows which cycle offers which options for adjustment.

Delay

Set the Delay function:

- 1. Select a program
- 2. Press the Delay button to choose the time(the delaying time is 0-24 H.)
- 3. Press [Start/Pause] to start the delay operation




To cancel the Delay function, press the "Delay" button before starting the program until the display shows 0 h. If the program has already started, switch the appliance off and afterwards on and select a new programme.

	Pre Wash Extra washing function before the main washing cycle starts to increase the washing performance. Note: Detergent needs to be added to the compartment I.
	Extra Rinse The laundry will undergo an extra rinse after selecting this funct ion.
	Soil Level The washing time will increase or decrease after you select it.
→ > -	Speed Wash The function can decrease the washing time.
	My Cycle To memory the frequently used programme. After choosing the programme and setting the options, press [S pin] 3 sec. before start to wash. The default setting course is Co tton.
	Steam Care Steam Care function can be selected by choose "Cotton", "Mix"" Bed Linen" and "Baby Care". The customers can see the steam in the drum when operate St eam Care function.
2>	Night Wash If selected spinspeed is more than 800rpm, then change to 80 0rpm,meanwhile cancel the button sound.

ि Child Lock

This function is meant to keep children from misusing the controls.

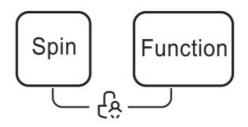

Press [Spin] and [Function] simultaneously for 3 sec until the buzzer beep. The child lock indicator switches on.



When the Child Lock is activated, the display will alternately show "CL" and the remaining time. Pressing any other button will cause the Child Lock indicator to flash for 3 sec. When the program ends, "CL" and "END" will alternate on the display for 10 sec, then the indicator will flash for 3 sec. The Child Lock deactivates the function of all buttons except the On/Off button and the Child lock button! Only the simultaneous pressing of the two buttons [Spin] and [Function] can deactivate the Child Lock! Please deactivate the Child Lock before selecting a new program!



Mute the buzzer



Choose the Programme



Press the [Temp.] button for 3sec., the buzzer is mute.

To act the buzzer function, press the button again for 3 seconds. The setting will be kept until the next reset.

(CAUTION!

After Muting the buzzer function, the sounds will not be activated any more.




[⊔] Reload

This operation can be executed during the washing progress. When the drum is still rolling and there is large amount of water with high temperature in the drum.

The state is unsafe and the door cannot be opened forcefully. To press [Start/Pause] for 3 sec. to reload, and start the clothes adding in the midway function. Please follow the steps as bellow:

- 1. Wait until the drum stops rotation.
- 2. The door lock is unlocked.
- 3. Close the door when the clothes are reloaded and press the [] button.

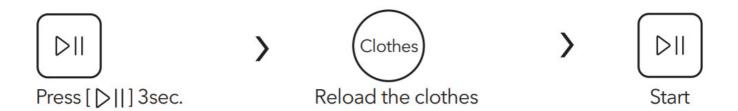

(!) CAUTION!

Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.

MAINTENANCES

Cleaning And Care


Always unplug the appliance and close the water tap before cleaning and WARNING!

maintenance.

Cleaning The Cabinet

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a cloth to wipe it off immediately.

Never use sharp items to clean the appliance.

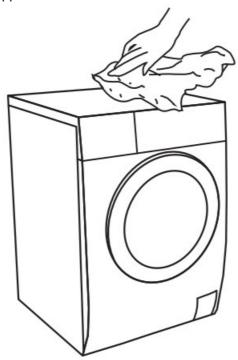

Never use abrasive or caustic agents. formic acids or its diluted solvents or similar substances, like alcohol or chemical products.



CAUTION!

Cleaning The Drum


Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!



Keep any laundry away from the machine while cleaning the drum.

Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages. Remove any coins, buttons and other objects from the seal after each wash. Clean the Door Seal and Glass every month to ensure the normal operation of the appliance.

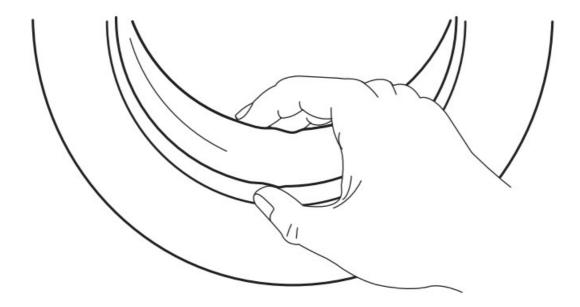


Cleaning The Inlet Filter




Diminishing water flow is a sign that the filter need to be cleaned.

- 1. Close the tap and remove the water supply hose from it.
- 2. Clean the filter with a brush.

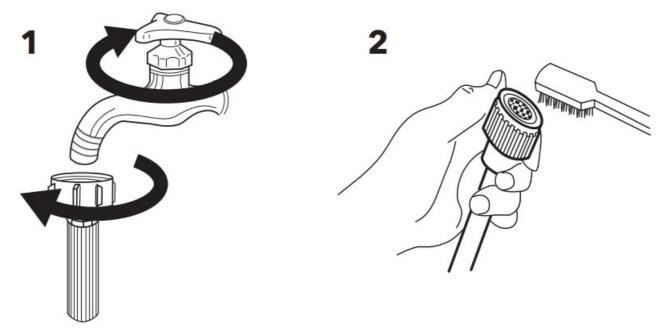


- 3. Unscrew the water supply hose from the backside of the machine. Pull out the filter with long nose pliers.
- 4. Use a brush to clean the filter.

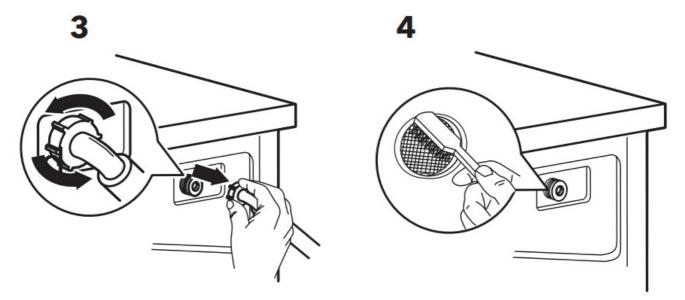


- 5. Reinstall the filter to the water inlet and reconnect the water supply hose.
- 6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.

Clean The Detergent Dispenser


- 1. Press down the release [on the softener cover and pull the dispenser drawer out of the recess. Clean the inside of the recess with a brush.
- 2. Lift the softener cover off the dispenser drawer and wash both items with water.
- 3. Restore the softener cover and push the drawer back into the recess.

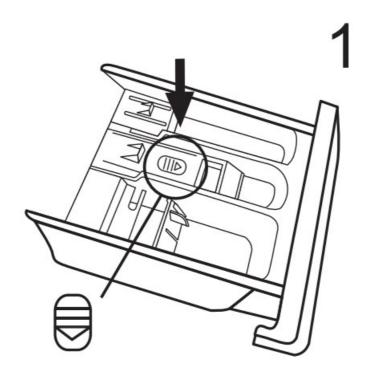


Press the release and remove the dispenser drawer

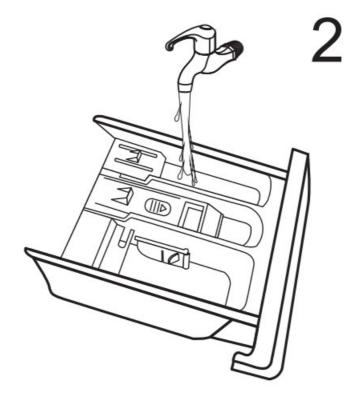

Clean the dispenser drawer and the softener cover under water

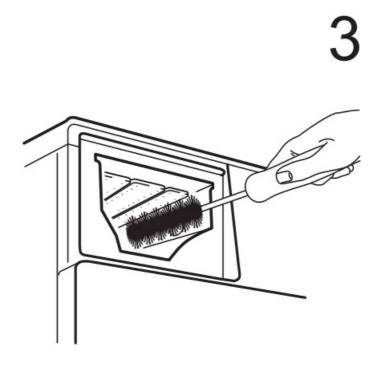

Clean the recess with an soft brush

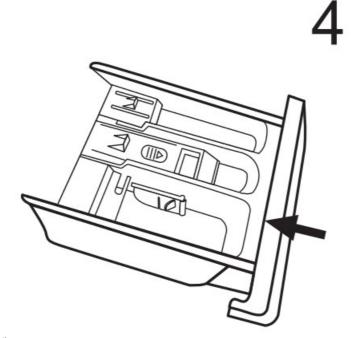

Insert the dispenser drawer




- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.


Cleaning The Drain Pump Filter




- Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Allow the water to cool down. Risk of scalding!
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.

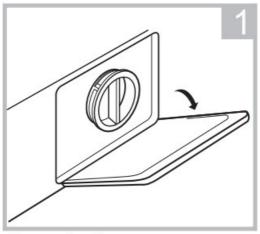


Open the lower cover cap

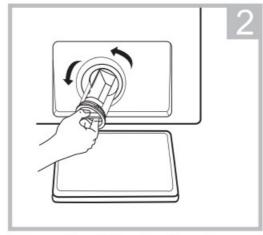

Open the filter by turning to the counter clockwise

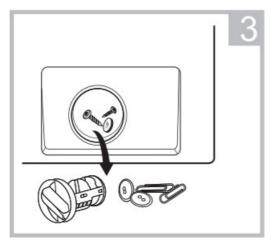

Remove extraneous matter

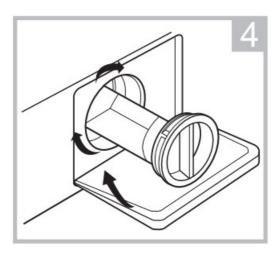

Close the lower cover cap

(!) CAUTION!

When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.

Troubleshooting

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

Description	Possible cause	Solution	
Appliance does not start	Door is not closed properly Clothes are stuck.	Close the door properly and restart. Ch eck the laundry.	
Door can't be opened	Safety protection is activated.	Disconnect the power, restart the product	
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.	
Detergent residues in the deterg ent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.	
Indicator or display does not wor k	PC board or harness have connecti on problems.	Switch off the power and check if the mains plug is connected properly.	
Abnormal noise	Fixing bolts still in place. Floor is not solid or level.	Check if the fixing bolts have been rem oved Make sure the appliance is install ed on a solid and level floor.	

Error Codes

Description	Reason	Solution
E30	is not closed properly	Close the door properly and restart.
EIO	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
E21	Overtime water draining	Check the drain hose for blockage.
E12	Water overflow	Restart the appliance.
EXX	Others	Restart the appliance. If problem persists, please contact the cust omer service

Customer service

Spare part for your appliance are available for a minimum of 10 years. In case of questions please contact our customer service at:




- Never try repair an appliance which is defective of presumed to be defective.
 You may put your own and future users' lives in danger. Only authorised specialists are allowed to carry out this repair work.
- Improper repair will void the warranty and subsequent damages can't be recogniced!

Transport

IMPORTANT STEPS WHEN MOVING THE APPLIANCE

- Unplug the appliance and close the water inlet tap.
- Check, if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Maintenance Cleaning the drain pump filter")
- Important: Re-install the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

Technical Specifications

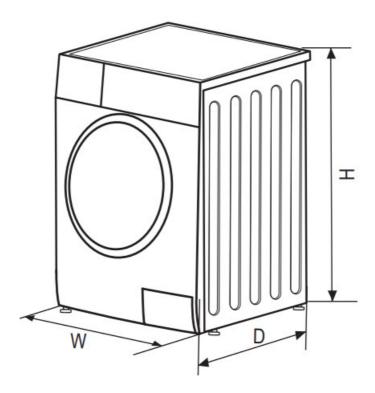

MAX. Current	10A
Standard Water Pressure	0.05MPa~1MPa
Power Supply	220-240V~,50Hz
Washing Capacity	10.0kg
Dimension (WxDxH)	595x565x850
Weight	72kg
Rated Power	1950W

Packaging/Old appliance



EU.To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2014 with regard to energy labelling of household washing machines and household washer-dryers

Supplier's name or trade mark: Tesla

Supplier's address: Tesla Electronics, Litijska 47, 1000 Ljubljana, SI

Model identifier: WF101593M General product parameters:

Parameter	Value		Parameter	Value	
				Height	85
Rated capacity ^(a) (kg)	10,0		Dimensions in cm	Width	60
				Depth	57
Energy Efficiency In dex ^(a) (EEI _W)	60,0		Energy efficiency class ^(a)	В	
Washing efficiency ind ex ^(a)	1,031		Rinsing effectiveness (g/kg) ^(a)	5,0	
Energy consump- tion in kWh per cycle, based on the eco 40-6 0 pro- gramme at a co m- bination of full and partial loads. Actu- al energy consump- tion will depend on how the appliance is used.	0,593		Water consumption in litre per cycle, based on the eco 40-60 programme at a combination of full and partial lo ads. Actu- al water consumption will de- pend on how the appliance is us ed and on the hardness of the water.	52	
Maximum temper- atur e inside the treated te xtile ^(a) (°C)	Rated capacity	38	Weighted remaining moisture content ^(a) (%)	53,9	
	Half	38			
	Quarter	33			
Spin speed ^(a) (rpm)	Rated capacity	1 500		В	
	Half	1 500	Spin-drying efficiency class ^(a)		
	Quarter	1 500			
Programme dura- tion ⁽ ^{a)} (h:min)	Rated capacity	3:59	Туре	Free-standing	
	Half	3:00			
	Quarter	3:00			
Airborne acousti- cal n oise emissions in the spinning phase ^(a) (dB(A) re 1pW)	80		Airborne acoustical noise emis- sion class ^(a) (spinning phase)	С	

Off-mode (W) (if applicable)	0,50	Standby mode (W) (if applica- ble)		
Delay start (W) (if applicable)	N/A	Networked standby (W)	(if ap- plicable)	N/A
Minimum duration of the guarantee offered by the supplier: 24 months				
This product has been designed to release s ilver ions during the washing cycle			NO	
Additional information:				
Weblink to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU) 2 019/2023 is found: tesla.info				

(a) for the eco 40-60 programme.

Link to the EU EPREL database

The QR code on the energy label supplied with the appliance provides a web link to the registration of this appliance in the EU EPREL database.

Keep the energy label for reference together with the user manual and all other documents provided with this appliance.

It is possible to find information related to the performance of the product in the EU EPREL database using the link https://eprel.ec.europa.eu and the model name and

product number that you can find on the rating plate of the appliance. For more detailed information about the energy label, visit www.theenergylabel.eu.



Comtrade Distribution d.o.o. Beograd Maass. Bulevar Zorana Dindiea 125i 11000 Belgrade, Serbia Phone' .381 11 201 55 SS

Email :<u>distributionrs@orntrade.com</u> <u>www.comtrariethstrityution.com</u>

EU DECLARATION OF CONFORMITY

Manufacturer business name: TESLA/COMTRADE DISTRIBUTION D.O.O. BEOGRAD Manufacturer address: BULEVAR ZORANA @INDICA 125i, 11000 BEOGRAD WE, MANUFACTURER OF BELOW DESCRIBED PRODUCTS, HEREBY DECLARE UNDER OUR SOLE RESPONSIBILITY, THAT THE PRODUCTS TO WHICH THIS DECLARATION RELATES: **Product description:**

Brand	Model	Type of products
TESLA	WF101593M	Washing machine

ARE IN CONFORMITY WITH THE FOLLOWING STANDARDS AND LEGISLATIVE ACTS:

Harmonised standard	Legislative act
EN55014-1:2017 EN55014-2:2015 EN61000-3-2:2019 EN61000-3-3:2013+A1:2019	Electromagnetic Compatibility (EMC) 2014/30/EU
EN62233:2008 EN600335- 1:2012+A11:2014+A13:2017+A1:2019 +A14:2019+A2:2019 EN60335-2- 7:2010+A1:2013+A11:2013+A2:2019	Low Voltage Directive (LVD) 2014/35/EU
EN62321-1:2013 EN62321-2:2014 EN462321-3-1:2014	Restriction of Hazardous Substances (R oHS) 2011/65/EN 2015/863/EU

EN62321-4:2014 EN62321-5:2014 EN62321-6:2015 EN62321-7-1:2015 EN62321-7-2:2017 EN62321-8:2017	
EU60456/2016/FprAA:2020	Eco-design of Energy related Products (ErP) 2009/125/EC EU 2019/2014 EU 2019/2023 EU 2021/340 EU 2021/341

Place and date of issue: Belgrade, 20.03.2023.



Name of authorised person: Function of authorised person; Nebojša Lozo General manager

P1B: 100000104 MatiZni broj: 17172140 Sifra delatnosti: 2620 TEKUdI RAeUNI: UniCredit Bank RSD 170-300346515-65; Vojvodanska banka ad. Novi Sad RSD 325-9500600009876-07 OTP Banka Srbija ad. Beograd RSD 275.0000220006014-70; Kornercijalna banks RSD 205-147443.79



Documents / Resources



<u>TESLA WF101593M Front Loading Washing Machines</u> [pdf] User Manual WF101593M Front Loading Washing Machines, WF101593M, Front Loading Washing Machines, Loading Washing Machines, Washing Machines

Manuals+,