

TESLA
WF61030T
Front Loading
Washing
Machines



TESLA WF61030T Front Loading Washing Machines User Manual

[Home](#) » [Tesla](#) » TESLA WF61030T Front Loading Washing Machines User Manual 

Contents

- 1 TESLA WF61030T Front Loading Washing Machines
- 2 Product Usage Instructions
- 3 FAQ
- 4 SAFETY PRECAUTION
- 5 OVERVIEW OF WASHING MACHINE
- 6 INSTALL WASHING MACHINE
- 7 OPERATE WASHING MACHINE
- 8 Washing steps
- 9 Control panel
- 10 Introduction of Other Functions
- 11 MAINTENANCE
- 12 TROUBLESHOOTING
- 13 APPENDIX
- 14 Electrical Warning
- 15 Products Specification
- 16 Documents / Resources
 - 16.1 References

TESLA

TESLA WF61030T Front Loading Washing Machines



Specifications:

- Model: WF61030T
- Languages: ENG, ALB, GR, HU, MK, RO, SRB
- Usage: Household

Product Information:

The WF61030T washing machine is designed for household use and comes with various components including a drawer handle, control panel assembly, door assembly, leg assembly (4EA), drain hose clips, pump case cover, inlet valves (Cold and Hot for double inlet machines), power cord, drain hose transit bolts (4EA), back cover, and power plug.

Safety Precautions:

Follow basic precautions to reduce the risk of fire, electric shock, or injury. Ensure proper installation and usage of

the appliance.

Important Hints:

Refer to the user manual for detailed instructions on using the washing machine effectively and safely.

Product Usage Instructions

1. Install Washing Machine:

- **Unpacking:** Check for any damage during transportation and ensure all components are received.
- **Inlet Hoses:** Connect to cold and hot water supplies (if applicable).
- **Remove Transit Bolts:** Loosen and remove the transit bolts from the backside of the machine.
- **Leveling:** Adjust the base foot structure to ensure stability and proper placement of the machine.

2. Level the Washing Machine:

- **Base Foot Structure:** Check the factory status and lock all four feet before adjusting the level.
- **Supporting Feet Adjustment:** Use the provided spanner to adjust the supporting feet to the appropriate height for stability.

FAQ

Q: Can I install the washing machine by myself?

A: It is recommended to have a qualified technician install the washer. However, if you choose to do it yourself, carefully follow the installation instructions provided in the manual.

SAFETY PRECAUTION

WARNING

To reduce the risk of fire,electric shock,or injury to persons when using your appliance, follow basic precautions,including the following

- If the power cord is damaged,it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid the hazard.
- The new hose-sets supplied with the washer are to be used and that old hose-sets should not be reused.
- This appliance is not intended for use by persons(including children)with reduced physical.sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.Children should be supervised to ensure that they do not play with the appliance.(This warning is not for EUROPEAN market)
- This appliance can be used by children aged from 8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.Children shall not play with the appliance.Cleaning and user maintenance shall not be made by

children without SU pervision.(This warning is for EUROPEAN market)

- Carpet does not obstruct the opening for the washing machine with ventilation openings in the base.
- Children of less than 3 years should be keep away unless continuously supervised.
- This appliance is inteded to be used in household and similar applications such as:
 - staff kitchen areas in shops,offices and other working environments;
 - farmhouses
 - by clients in hotels. motels and other residential-type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or launderettes.
- Take care that power voltage and frequency shall be identical to those of washing machine.
- To ensure your safety,power cord plug must be inserted into an earthed socket.Check carefully and make sure that your socket is proper and earthed reliably.
- Do not use any socket with rated current less than that of washing machine.
- Do not operate your washer when parts are missed or broken.
- Never pull out power plug with wet hands.
- Replace immediately worn power cord,loose plugs/power sockets.
- Unplug your washer before cleaning or making any repair. Please check whether the water inside the drum has been drained before opening the door.Please do not open the door if there is any water visible.
- Glass door may be very hot duing the operation.Keep kids and pets far away from the washer during the operation.
- Make sure that the water and electrical device must be connected by a qualified technician in accordance with the manufacturer's instruction and local safety regulations.
- Before operating this machine,all packages and transit bolts must be removed. Otherwise,the washing machine may be seriously damaged while washing the clothes.
- Flammable and explosive or toxic sovents are forbidden.Gasoline and alcohol etc. Shall not be used as detergents.Please only select the detergents suitable for machine washing.
- Be careful of scald while the washer drainning hot washing water.
- Never unplug your washer by pulling on the supply cord.Always grasp the plug firmly and pull straight out from the outlet.
- If your old appliance is not being used anymore,we recommend that you remove the door and cut off the supply cord.
- Packing materials may be dangerous to the kids.Please keep all packing materials(plastic bags,foams etc) far away from the kids.
- Do not climb up and sit on top cover of the machine.
- Pets and kids may climb into the machine. Check the machine before every operation.
- Do not lean against the door of the washer.


IMPORTANT HINTS


- The household washing machine isn't intended to be built-in.
- This washing machine is for indoor use only.
- Make sure that all pockets are empty.Sharp and rigid items such as coin, brooches, nails,screw or stones etc. May cause serious damages to the washer.
- Please remember to disconnect the water and power supply immediately after the clothes are washed.

- The washing machine shall not be installed in bath room or very wet rooms as well as in the rooms with explosive or caustic gases.
- Before washing the clothes at first time,the washing machine shall be operaed in one round of the whole procedures without the clothes inside.
- Do not repair or replace any part of the washer unless you have been specifically recommended in the user-repair instructions and you have the knowledge and skills to make it.
- It is forbidden to wash carpets and bras inset with steel wire.
- Never refill water by hand during washing.
- After the program is completed,please wait for two minutes to open the door.
- When handing the machine.the accumulated water shall be drained out of the machine firstly.Handle the machine carefully. Never hold each protruded part on the machine while lifting.Machine door can not be used as the handle during the conveyance.
- The washing machine with single inlet valve only can be connected to the cold water supply.The washing machine with double inlet valves can be connected to the hot water and cold water supply.

OVERVIEW OF WASHING MACHINE

SAVE THESE INSTRUCTIONS THE MACHINE IS HOUSEHOLD USE ONLY

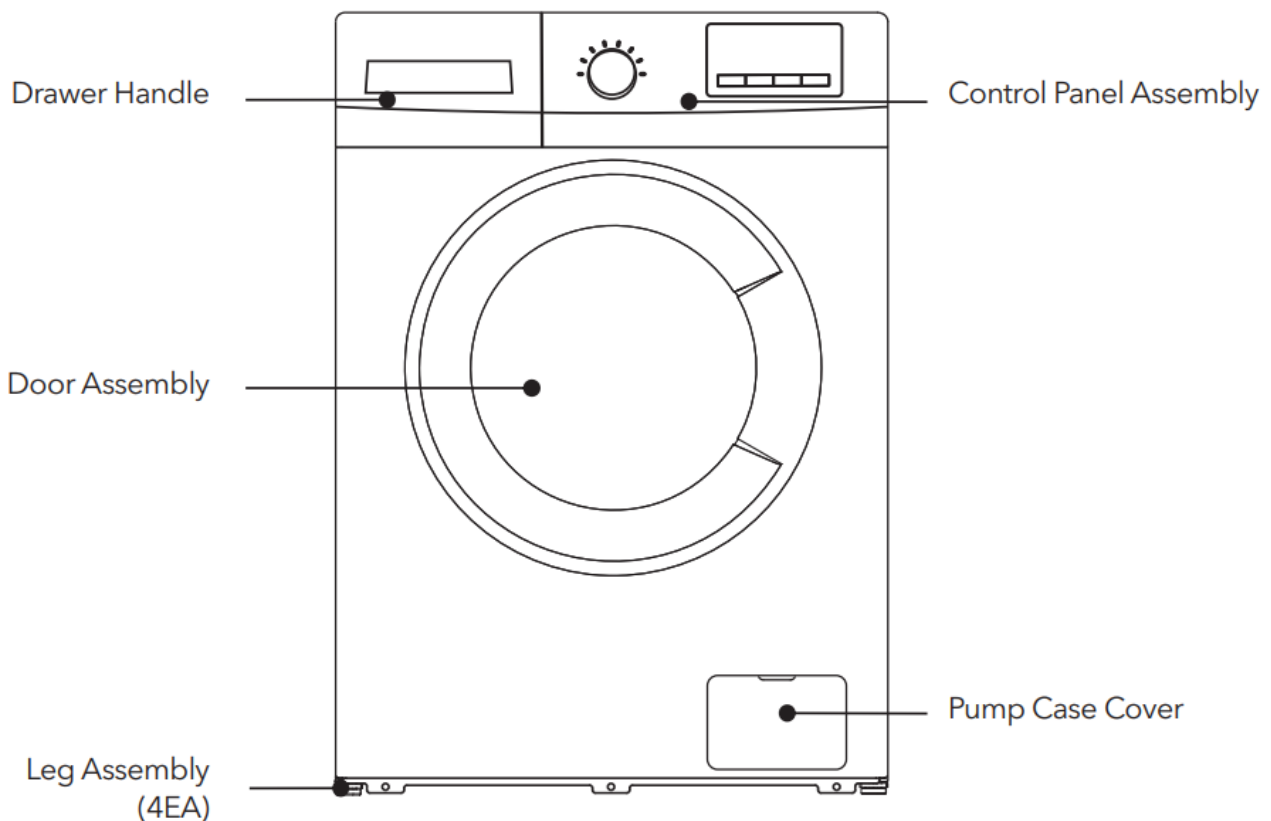

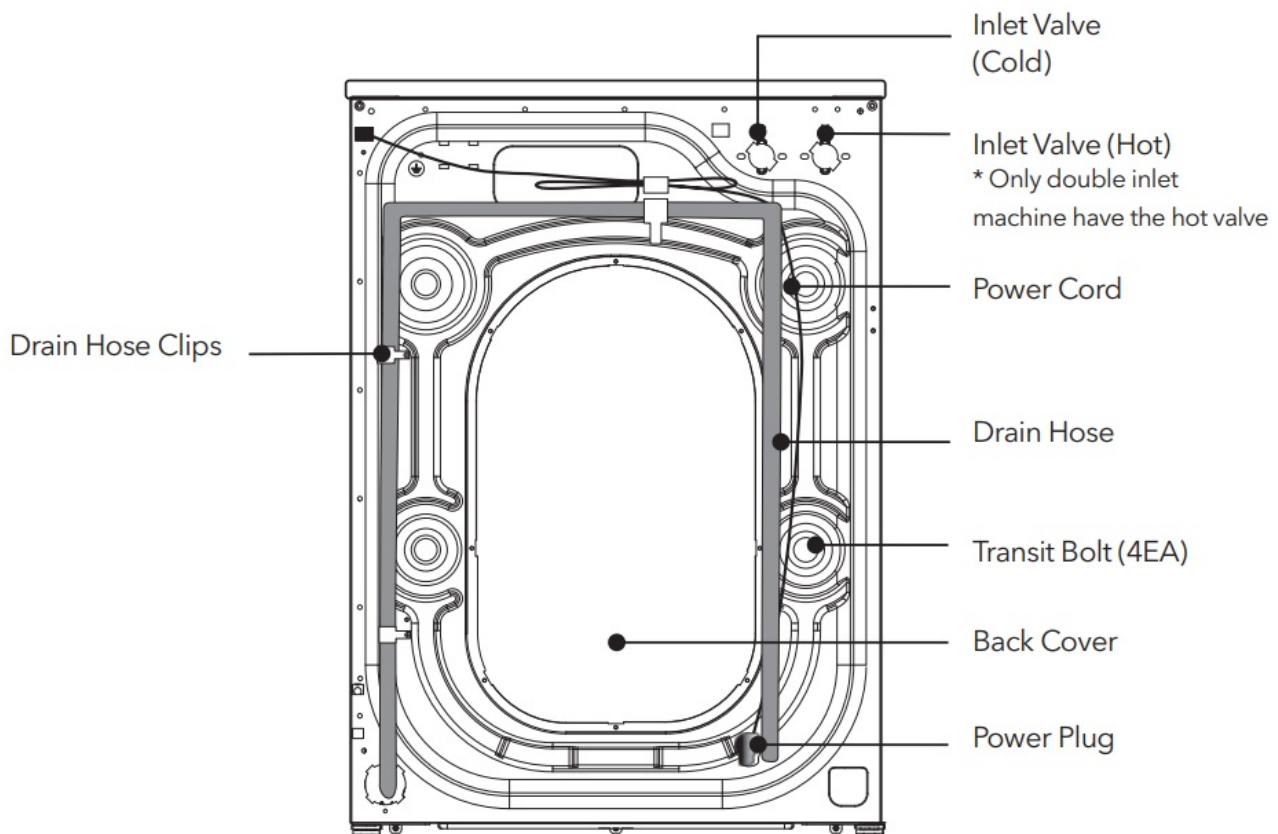

INSTALL WASHING MACHINE

We recommend that your new washer should to installed by a qualified appliance technician.If you feel that you have the skills to install the washer, please read the installation instructions carefully before installing.

Tools needed




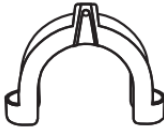

You may need to have the following tools to help you in the installation of your washer:

- Scissors
- Pliers
- Standard Screwdriver
- Gloves
- Spanner

Unpacking the washing machine

Unpacking your washing machine and check if is there any damage during the transportation.Also make sure that all the the items(as shown below) in the attached bag are received. If there is any damage to the washing machine during the transportation,or any item is missing or damaged,please contact the local dealer immediately.

- If washing machine is not double inlet, the machine does not have the hot inlet hose

Inlet Hose (Connect to cold water supply)	Hot Inlet Hose (Connect to Hot water supply)	Hole Cover (4EA) (Used to plug transit bolt holes)	Drain Hose Support Bracket (Used to loop the end of drain hose)	Spanner (1.Used to adjust the bottom of the machine, 2.Remove the transport bolt on the back of the machine)
				

Select the location

Before installing the washer,the location characterized as follows shall be selected:


- Rigid,dry,and level surface(if not level,please make it level with reference to the following figure “Adjustable Leg”).
- Avoid direct sun light.
- Sufficient ventilation.
- The ambient temperature shall be between 0-40°C.
- The ambient humidity shall be below 95% (When the temperature is 25°C).
- Keep far away from the heat resources such as coal or gas.Make sure that the washer will not stand on power cord. Do not install the washer on the carpet floor.

Remove transit bolts


Before using this washing machine,transit bolts must be removed from the backside of this machine.Please take the following steps to remove the bolts

Note


Keep the transit bolts properly for futher use.

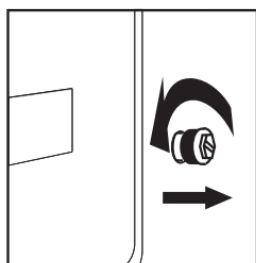

1. Loosen the four transit bolts with a spanner

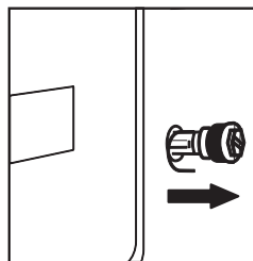


2. Take each bolt head and pull it through the wide part of the hole.Repeat for each bolt.

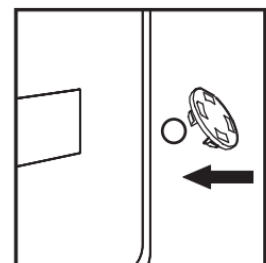

3. Fill the holes with the supplied plastic covers.

Level the washing machine

Install or place the washing machine under the environmental temperature of not less than 0 C but not outdoors, for it may damage the programming controller

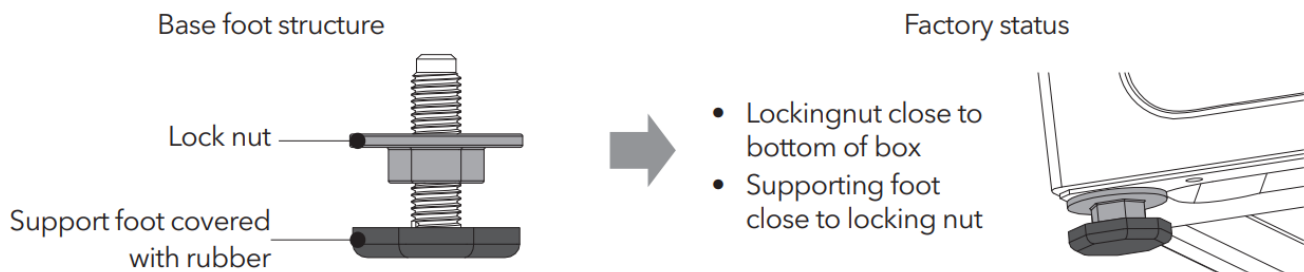


NOTE

In order to facilitate installation, the factory status of the foot may not be all locked, please be sure to lock all four feet before adjusting the level

1. When placing the machine, check whether the bottom foot is in the factory state. If not, please restore the bottom foot to the factory state: the locking nut is locked tightly on bottom of the box, and the support foot is locked lightly on the locking nut
2. After the machine is placed, press the opposite corner of the top cover plate of the washing machine with both hands in turn and shake it vertically downward to check whether the supporting foot is close to the ground and whether the machine is shaken



3. To ensure that the machine is placed in the right state, loosen the locking nut according to the direction shown in the diagram with the attached spanner to the appropriate height until the supporting foot is close to the ground and the machine is free from shaking
4. Finally, use the spanner to turn the lock nut back to the bottom of the box to lock it (you can also slightly fix the support foot by hand to avoid the support foot moving again).

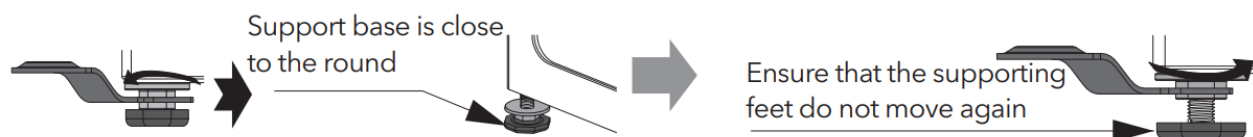

CAUTION

1. The machine must be perfectly leveled and stabilized when the four supporting feet are close to the ground. Lower the feet as much as possible on the basis that the machine is leveled.
2. Improper leveling adjustment may cause loud noise, machine vibrating, machine displacement and other abnormal phenomena.
3. Air-vent is designed on the bottom of the machine (prevent blockage). Install the washing machine on solid, smooth and skid-proof ground. Do not place the washing machine on soft blanket or wooden floor, or various desktops and stands, in case of unnecessary injury.


Connect the inlet hose

Connecting to a threaded water tap


1. Connect the water hose to the water tap, and then turn the connector clockwise as shown.



2. Connect the other end of the water hose to the inlet valve on the back of the washing machine. Turn the hose clockwise to tighten.

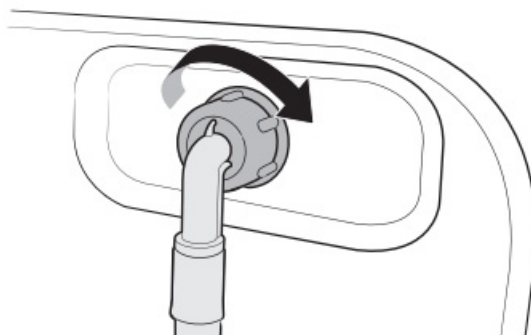


3. Open the water tap and check if there are any leaks around the connection areas. If there are water leaks, repeat the steps above

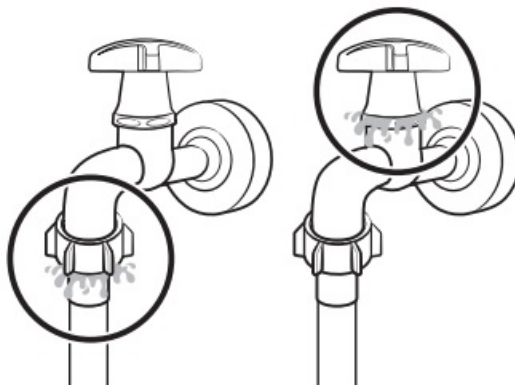


Connecting to a non-threaded water tap

1. Remove the adaptor (A) from the water hose (B).
2. Use a Phillips screwdriver to loosen four screws on the adaptor.
3. Hold the adaptor and turn part (C) in the arrow direction to loosen it by 5mm (*).

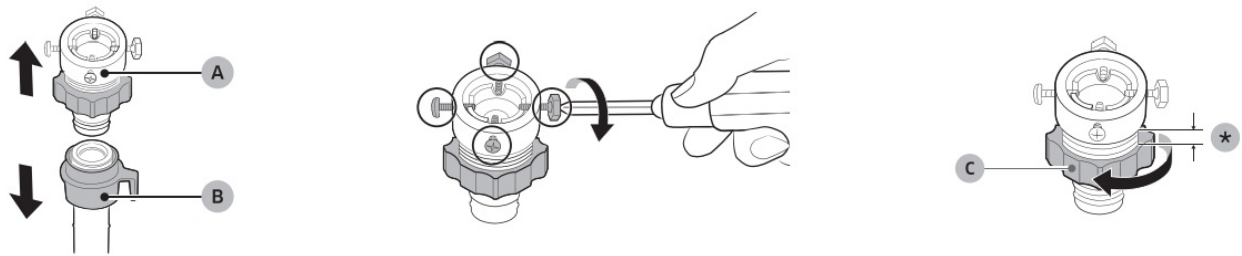

4. Insert the adaptor onto the water tap and then lighten the screws while lifting the adaptor.
5. Turn part (C) in the arrow direction to lighten it.
6. While pulling down part (D) on the water hose, connect the water hose to the adaptor. Then, release part (D).
The hose fits into the adaptor with a clicking sound.
7. To complete connecting the water hose, see 2 and 3 on the "Connecting to a threaded water tap" section.

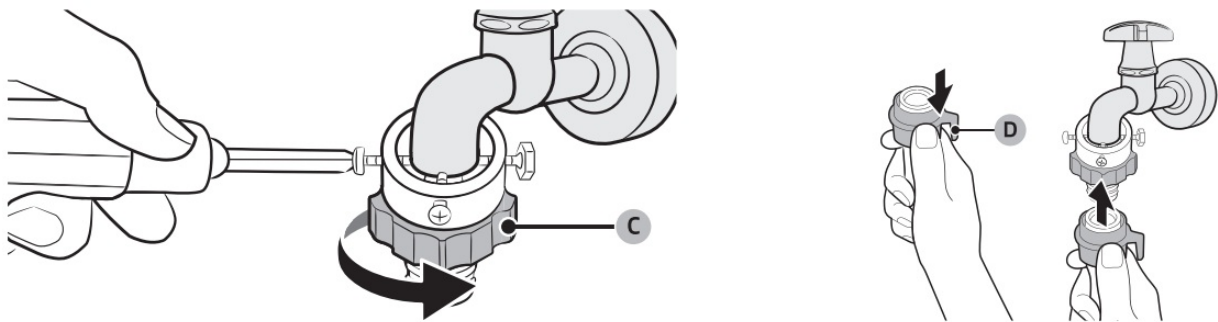


NOTE

- If there is any leakage with hose after the connection, then repeat the steps to connect inlet hose.
- Do not bend the hose.
- Check for inlet hose connection carefully before using the washer each time.


Connect the drain hose

- The drain hose shall be placed at a height of 65-100cm above the floor, otherwise, it can cause poor drainage.
- You can use the supplied drain hose support bracket to loop the drain hose down into the wall, standpipe or laundry tub.
- Take care to ensure all hose connections are tight.

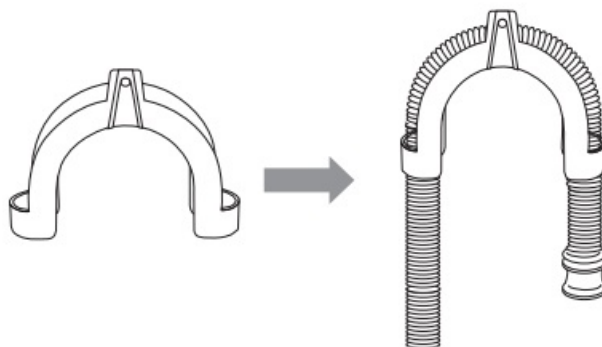

NOTE

The end of the drain hose cannot be immersed in water for the washer to work properly

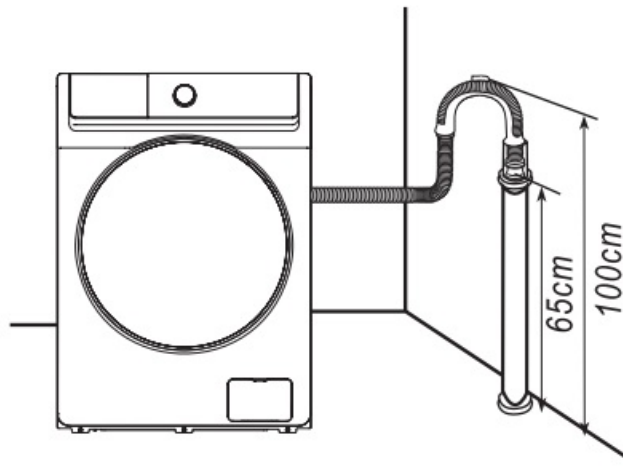

Connect the power

- As the maximum current through the unit is 10A when you are using its heating function, please make sure the power supply system (current, power voltage and wire) at your home can meet the normal loading requirements of the electrical appliances.
- Please connect the power to a socket which is correctly installed and properly earthed.
- Make sure the power voltage at your place is same to that in the machine's rated voltage.
- Power plug must match the socket.
- Do not use a multi-purpose plug or socket as extension cord.
- Do not connect and pull out plug with wet hands.

WARNING

1. This machine must be earthed properly. If there is any short circuit, earthing can reduce the danger of electrical shock.
2. The washing machine shall be operated in a circuit separate from other electrical appliances. Otherwise, power protector may be tripped or fuse may be burned out.

OPERATE WASHING MACHINE

NOTE

Ensure your machine is installed properly before use.

Before washing clothes for the first time, you must run a complete cycle without clothes.

To do this:

1. Connect power source and water.
2. Put a little detergent (about 10g) into the drawer and close it.
3. Press the On/Off button.
4. Turn the knob to be "Cotton" program.
5. Press the Start/Pause button.

This will remove any water from the manufacturer's test run remaining in the machine.

Sort clothes


Please read this recommendation carefully to avoid the troubles of washing machine and damages of clothes.


1. Do not put clothes over load the rated capacity.
2. Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.
3. Make sure all the pockets are empty, Foreign objects (e.g. nails, coins, paper clips, etc.) can cause damage to garments and components in the machine
4. Close any zips, fasten hooks etc. before washing.
5. For clothes to be washed, they should be sorted according to color. Dark clothes should not be washed with light clothes especially.
6. Badly soiled areas, stains etc. should be pretreated with liquid detergent, stain removers etc.
7. Turn over the clothes which pill easily and is with woolen surface before putting them into the machine.

NOTE

Make sure that no clothes is caught between the door and the seal.

Put detergent

- Pull out the detergent drawer.
- Add detergent for main wash into compartment II. (option1 :detergent that is solid; option2:detergent that is liquid.)
- Add fabric softener into compartment .
- Please choose suitable type of detergent for the various washing temperatures to get the best washing effect with less water and energy consumption.
- The amount of detergent/softener used should be added only once at a time. Please refer to the manufacturer's instructions for the dosage of detergent/softener.
- Excessive detergent will produce a lot of foam, easy to overflow.and will affect its dissolution, resulting in rinsing difficulties.

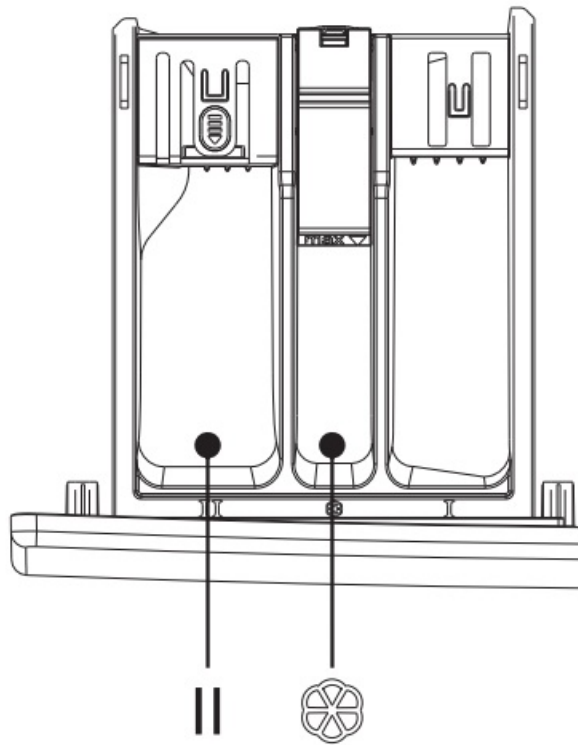


NOTE

1. At the first time using liquid detergent, please operate "Quick Wash" program to washing tube and drum.
2. It is normal that a few liquid detergent flow into down-water box when pulling liquid detergent box. Please avoid pull the box frequently to decrease the cost of liquid detergent.
3. The quantity of softener please refer to the manual. Overloading softener would destroy artificial fiber.
4. Liquid level do not over the MAX of Distributor box.
5. Please dilute the thick softener or bleach first and then release in distributor box.

Washing steps

1. Connect inlet hose and turn on the tap
2. Insert power plug
3. Place drain hose
4. Open the door, put in clothes and shut it down; put detergent in detergent case and close the case.

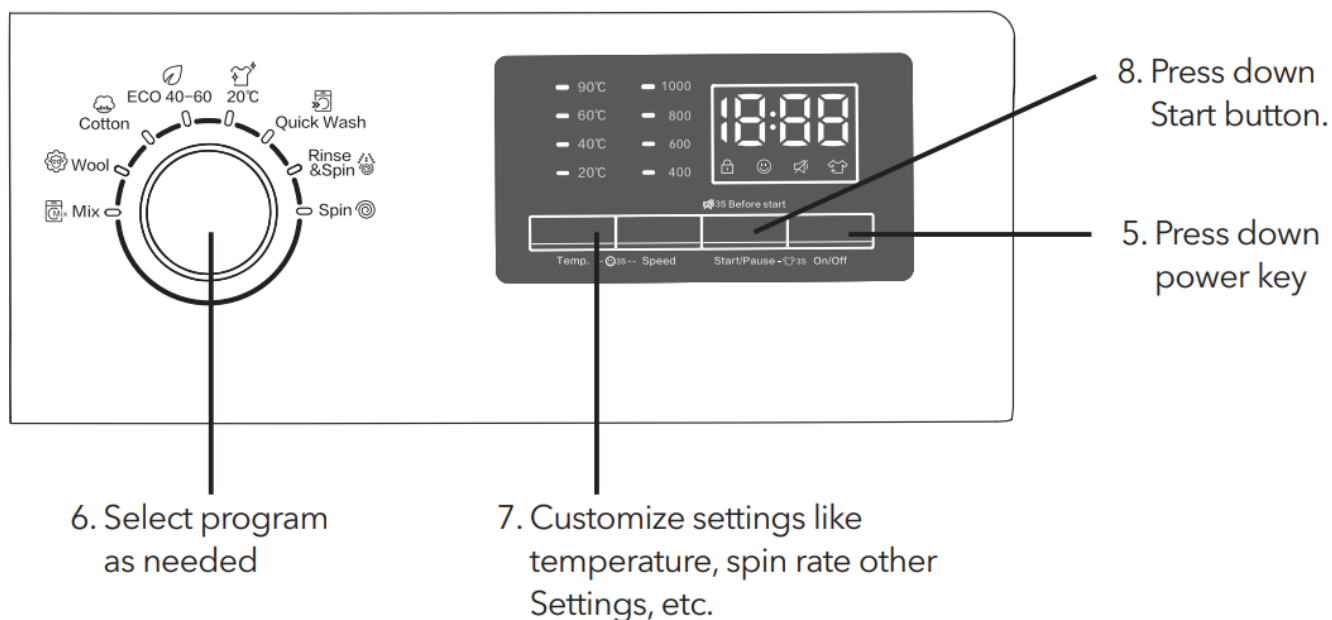


- Press Power On/Off to turn on the washing machine.
- Turn the Cycle Selector to select a cycle.
- Change the cycle settings (Temperature and Spin, etc.) as necessary.
- Set Time Delay if you want to finish the wash cycle at the desired time.
- Press Start/Pause.

To change the cycle during operation

- Press Start/Pause to stop operation.
- Select a different cycle.
- Press Start/Pause again to start the new cycle.

Control panel

The following illustration is a simple example of the model control panel. The illustration is for reference only. Please refer to the actual product

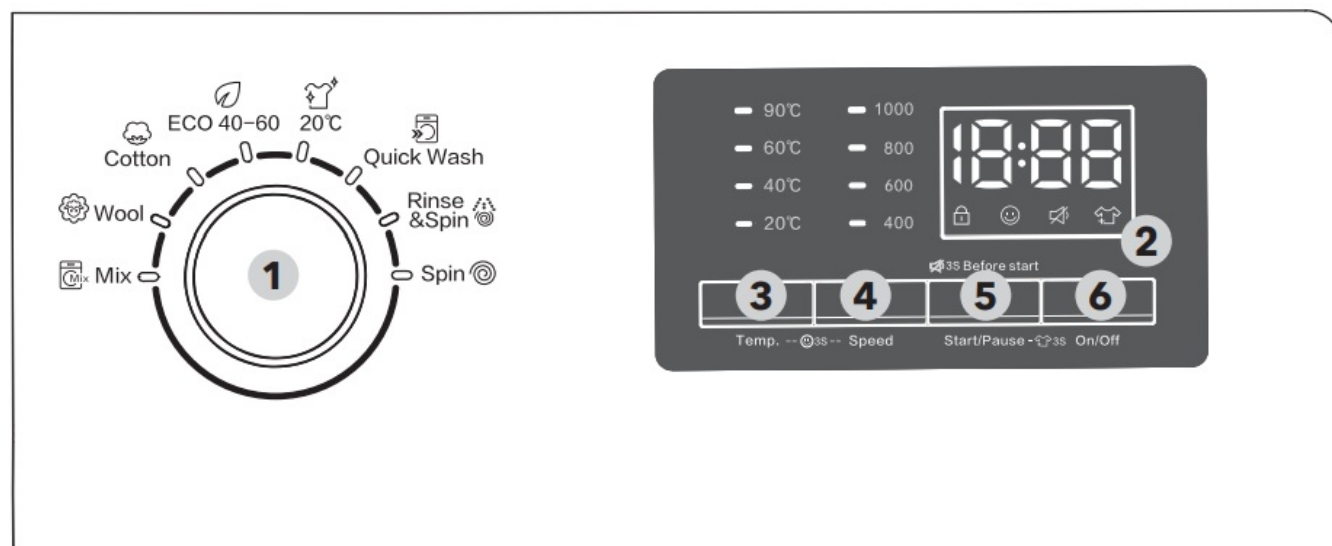

1. Cycle Selector	Turn the dial to select a cycle.
2. Display	The display shows current cycle information and estimated time remaining, or an information code when a problem occurs
3. Temp.	Press to change the water temperature for the current cycle. Available temperature range depends on the cycle.
4. Speed	Press to change the spinning speed for the current cycle. Available spin speed depends on the cycle
5. Start/Pause	Press to Start / Pause operation. Press the button once to start a cycle To pause operation, press the button again. You may change the cycle settings and options. To resume paused operation, press the button again.
6. On/Off	Press to turn On / Off the washing machine. If you turn on the washing machine and do not use it for 10 minutes, it will turn off automatically.

Door Lock


When the door is not closed or locked normally, the icon is not bright; Lock the door correctly, the icon is always bright.

Child Lock

To prevent accidents by children, Child Lock locks all buttons except for Power(On / Off). To activate or deactivate the Child Lock function, press and hold Temp. and Speed simultaneously for 3 seconds. When Child Lock is


activated, the indicator  lights up.

Alarm Off

You can turn on or off the sound of the cycle selector and all buttons. Before the program starts To turn on or off the sound, press and hold Start/Pause for 3 seconds. When the sound is off, the  indicator lights up.

Reload

Long press the Start/Pause button for 3 seconds. After the lock is unlocked, the function of adding clothes in the

middle can be started. When adding clothes in the middle is activated, the indicator  lights up.

Programme

- Mix: For mixed load consisting of cotton and synthetic.
- Wool: The wool course features gentle cradling and soaking to protect the wool fibres from shrinkage/distortion.
- A neutral detergent is recommended.
- Cotton: For cottons, bed linens, table linens, underwear, towels, or shirts. The washing time and the rinse count are automatically adjusted according to the load.
- ECO 40-60: For cleaning normally soiled cotton items which are declared to be washable at 40°C or 60°C, together in the same cycle. This cycle is used to assess the compliance with the EU Ecodesign legislation.

This cycle is set as a default.

- 20°C: New European standard special procedures, used for washing some gentle clothes, the temperature can only choose 20°C, protective clothing.
- Quick Wash: For lightly soiled garments in less than 2.0 kg that you want to wash quickly.
- Rinse&Spin: Featuring an additional rinse process after applying fabric softener to the laundry.
- Spin: Featuring an additional spin process to effectively remove moisture from laundry.


Table of Washing Procedures

- Washing efficiency and performance is determined by used detergent quality. Use only machine wash-approved detergent.
- If need use specific detergent, e.g. for synthetic and woolen fabric. Mind always detergent manufacturer recommendations.
- Do not use dry cleaning agents such as trichloroethylene and similar products. Choose the best detergent.

Program	Max Load (kg)	Kind of detergent		
	6	Universal	Special	Softener
Mix	3	L/P	–	O
Wool	1.5	–	L/P	–
Cotton	6	L/P	–	O
ECO 40-60	6	L/P	–	O
20°C	3	L/P	–	O
Quick Wash	2	L/P	–	O
Rinse&Spin	6	–	–	O
Spin	6	–	–	–

- L = gel-/liquid detergent
- P = Powder detergent
- O = optional
- – = no

If using liquid detergent, it is not recommended to activate the time delay. We recommend by using: Laundry powder 20°C to 90°C; Wool detergent 20°C to 40°C; *Choose 90°C wash temperature only for special hygienic requirements

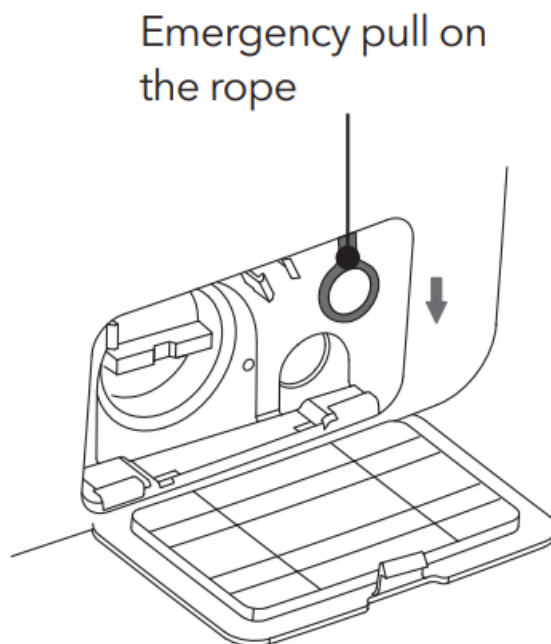

Introduction of Other Functions

Unlock of emergency door (not applicable in some models)

- If you want to take out the clothes when there is a long-time power cut, make sure the water level in the drum is below the safe level, the temperature is under 40 C, and the inner drum is does not rotate, then detach the

- drain hose and lower it, replace the hose after water runs out;
- Open the drain pump cover at the bottom right of the front side, pull down the rod lightly, when hearing a light sound then open the door and take out or put in the clothes;
 - Replace drain pump cover;
 - This method can only be used in emergency.

Resume Function

- This machine has the resume function in case of power-down. If there is a power failure or plug loose in the process of machine, the machine can remember the working status and resume work when the power is restored.

Memory Function (not applicable in some models)

- This machine can remember the latest working process automatically. When you turn on the machine again, the machine remembers the washing process and the settings you made last time (it means the whole working process of the latest washing will be selected by default when the machine starts)

Cloth Weigh Awareness

- In the beginning of the washing, the machine will estimate the weight of the clothes and dispense the detergent automatically (on condition that there is enough detergent in the case), then decide the amount of the water accordingly to achieve the goal of saving water.

Unbalance Protection

- When the machine is ready to spin, The washer may take a few time to balance clothes due to great unbalance.
- If clothes is still unbalance in the drum after that, the spinning speed can be slow down to avoid great vibration.
- If clothes in drum is too less, the machine may not to spin due to the unbalance protection, then you should add more clothes in the machine to make it to spin.

Sprinkling (not applicable in some models)

- This machine adopts detergent auto-dispensing technology; water will flow out from the detergent case to delivery detergent into inner drum. It will also spray water on the glass of observation window, which has better effect of cleaning the foam and stains on the clothed and window. This will make washing process cleaner and construct a high efficient, water-saved and clean washing environment!

Drum lamp (not applicable in some models)

- At the beginning of the program, at the end of the program and at the pause of the washing state, the lamp of the washing machine cylinder will be lit. You can observe the situation of the clothes in the washing machine and feel the fun of smart laundry.

NOTE

Due to the product model upgrade, the function configuration may be different from this description, please take the actual model function as the standard!

MAINTENANCE

Proper maintenance on the washing machine can extend its work life.

WARNING!

Before your maintenance starts, please do pull out the power plug or disconnect power and close the tap.


Clean internal drum

The rusts left inside the drum by the metal articles shall be removed immediately with chlorine-free detergents. Never use steel wool.

Clean surface

1. If there is any water overflow, use the dry cloth to wipe it off immediately. No sharp items are allowed to strike the washer.
2. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary

Clean the drain pump

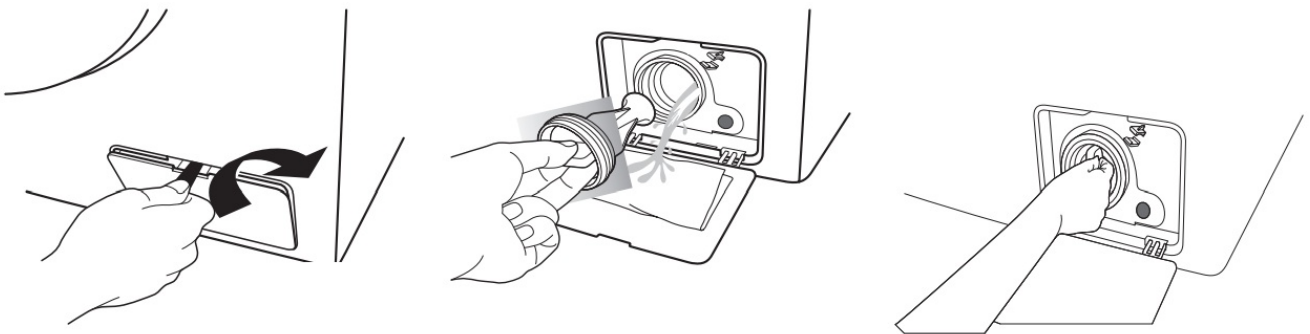


- Open the filter cover with tools such as coins according to the direction of the graphic;
- Unscrew the filter and pay attention to the remaining water, taking out any foreign material from the drain pump filter
- Reinstall the filter.

Clean Inlet valve filter

The inlet filter shall be cleaned if there is not any or insufficient water in when the tap is opened.


1. Lower the water pressure:
 - a. Close the tap.
 - b. Select any procedure except “Spin” procedure.
 - c. Press the button “Start/Pause” and keep the procedure running for about 40 seconds.

- d. Pull out the power plug.
2. Remove the inlet hose from the tap.
 3. Use water to wash the filter.
 4. Reconnect the inlet hose.

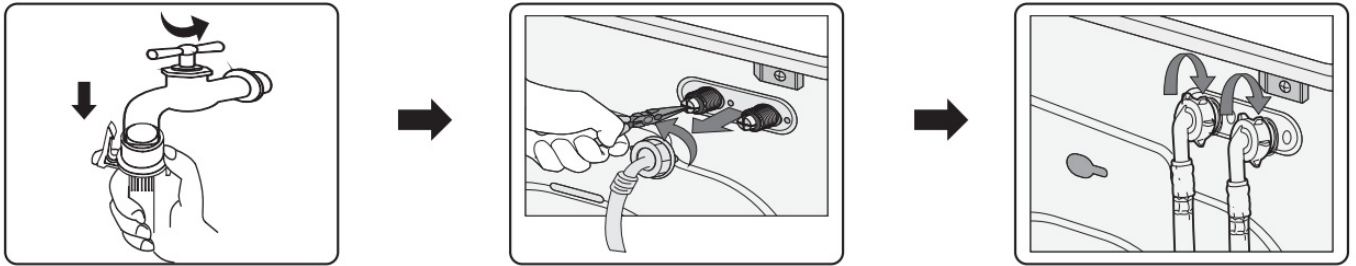

Clean detergent drawer

The structure of detergent case varies from different machine models; please follow steps and methods shown in below figure to clean the detergent case:

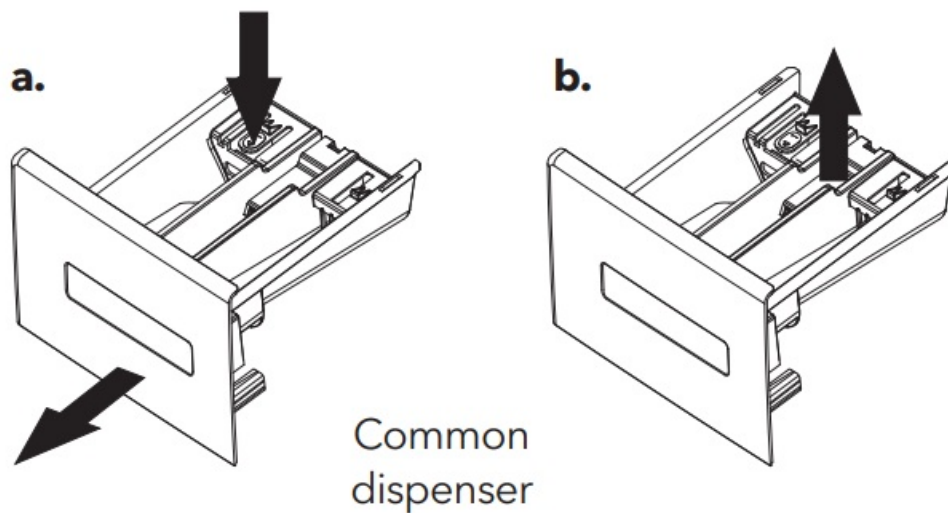

- If there is detergent or softener residue in the case:
 - As fig. a shows, pull the case and press down the limit rod; pull the whole drawer out;
 - As fig. b shows, open the case (pick it up slowly) and take out syphon plate (lift it up);
 - Use tap water or brush to wash detergent case and syphon pipe;
 - Restore case cover and syphon pipe, and push the drawer in.
- A little detergent will flow into water box when drawing the case, this is normal. Try not repeatedly opening and closing the case of detergent loss;
- Pay attention to the spillover of detergent that may cause inconvenience when adjusting (like tilting and moving, etc.) the machine (draw out the case before adjusting).

Recovery from freezing

The washing machine may freeze when it drops below 0°C.

1. Turn off the washing machine, and unplug the power cord.

2. Pour warm water over the water tap to loosen the water hose.
3. Disconnect the water hose, and soak it in warm water.
4. Pour warm water into the drum and leave it for about 10 minutes.
5. Reconnect the water hose to the water tap.

NOTE

1. When the washing machine is reused, make sure the ambient temperature is above 0°C.
2. If your washing machine is located in the room where it can get frozen easily, please drain the remaining water inside drain hose and inlet hose thoroughly.
3. Please contact a technician if your washer is frozen

TROUBLESHOOTING

Problem	Solution
There is some remaining water in the machine	This is normal and is the result of water tests performed at the factory.
The washer does not run	Check if the power plug is inserted well. Check if the tap is opened. Check if the button "Power" is pressed. Check if the button "Start/Pause" is pressed. Check if the delay feature is activated.
Water leakage	Check and fasten inlet hose. Clean up drain hose and ask a specialized person to repair it when necessary.
Abnormal noise and great vibration	Check if the transit bolts has been removed. Check if the adjustable legs are adjusted level. Check if the washer is installed on the solid and level floor. Check if there are any barrettes or metal articles inside.
Washing efficiency is not satisfied	Select a proper procedure. Add the proper detergent quantity according to the instructions in detergent package.
The machine take no answer after press buttons	Check if the "Child-lock" feature has been activated. Press button "Start/Pause" first then press other buttons.
Actually running time of procedures is not corresponded to the display time	Check if clothes in the drum is dispersive enough. Check if the water is drain out or inflow well.
The washer fills while draining	Check if the max height of the drain hose is lower than 65cm. Check if the drain hose is immersed.





























Display	Means	Solution
E 1	The washer fills over time	Check if the tap is opened. Check if the water pressure is too low. Check if the inlet hose is blocked.
E 2	Water drainage over time	Check if the drain pump is blocked. Contact a technician if necessary.
E 3	Door lock is breakdown	Close the door well again. Check if the clothes is caught between the door and seal. Contact a technician if necessary.
E 4	Water is overflowed	Water automatically until the water level is suitable for wash procedure. Contact a technician if necessary.
E 5	The electrical motor is break down	Please contact a technician.
E 6	The heater does not work	Please contact a technician.
E 7	There is a temperature sensor fault	Please contact a technician.
E 8	Unmatched software/ hardware on mainboard and frequency inverting plate	Please contact a technician.
E 9	Communication failures	Please contact a technician.
E 10	Inverter failures	Please contact a technician.
EP	The procedure running is not corresponded to the cycle that the knob points.	Turn the cycle selector to the cycle corresponded to the procedure working on.

NOTE

Please refer to the actually purchased model for fault display here. Different models have different fault displays.

APPENDIX

Fabric Care Label

	Resistant material		Can be ironed at 100°C max
	Delicate fabric		Do not iron
 	Item may be washed at 90°C		Can be dry cleaned using any solvent
 	Item may be washed at 60°C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
 	Item may be washed at 40°C		Dry clean with aviation fuel, pure alcohol or R113 only
 	Item may be washed at 30°C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200°C max		Tumble dry, reduced heat
	Can be ironed at 150°C max		Do not tumble dry

Electrical Warning

To avoid fire, electrical shock and other accidents, please remember the following reminding:

- Only the voltage indicated in power label can be used. If you are not clear of the voltage at home, please contact the local power bureau.
- When you are using the heating function, the maximum current through the washing machine will reach 10A. Therefore, please make sure the power supply units (current, voltage and cable) can meet the normal load requirements for the machine.
- Protect the power cord properly. Power cord shall be fixed well so that it will not trip the people or other things and be damaged. Special attention shall be paid to the plug location.
- Do not make the wall-mounted socket overloaded or cable extended. Over loading of the wiring may cause fire or electrical shock. Do not pull out power plug with wet hand.
- To ensure your safety, power plug shall be inserted into an earthed socket. Carefully check and ensure that your socket is properly and reliably earthed.

Protecting the environment

- The washer is manufactured by recyclable materials. If you decide to dispose of this washer, please observe the local waste disposal regulations. Cut off the power cord so that the washer cannot be connected to power. Remove the door so that small animals and children cannot get trapped inside the washer.
- Do not exceed the detergent quantities recommended in the detergent manufacturers' instructions.

- Use stain removal products and blesches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

Correct Disposal of this Product

This marking indicates that this product should not be disposed with other household wastes throughout the E U.To prevent possible harm to the environment or human health from uncontrolled waste disposal,recycle it responsibly to promote the sustainable reuse of material resources.To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.They can take this product for environmental safe recycling.

NOTE:

1. The energy efficiency rating was tested under “ECO 40-60” procedure.
2. Scan the QR code shown on the energy label for further product information.
3. When the washing machine gives error codes, make sure you contact our after-sales team to repair. We shall not be responsible for any issue caused by unauthorized repair.
4. In case you need to order the accessories, we can send out within 15 working days after the request.
5. For the purpose of improving the performance of the whole washing machine, the appearance and specifications shall be changed without addtional notice.
6. The display panel shall show “END” for 10 m inutes after the cycle finish.

Products Specification

Parameter/Capacity	Universal Motor Series
	6kg
Model	WF61030T
Voltage	220-240V~/50Hz
Rated Power	1950W
Water Pressure	0.05-0.BMPa
Outer Dimension (W*D*H)mm	595*470*850

NOTE:

All the pictures in the manual are used for schematic only.It may be different from the machine you buy.

- tesla.info

Documents / Resources



[TESLA WF61030T Front Loading Washing Machines](#) [pdf] User Manual
WF61030T Front Loading Washing Machines, WF61030T, Front Loading Washing Machines, Loading Washing Machines, Washing Machines, Machines

References

- [📄 Tesla.info | Technology for all](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.