

Teslaunch X Key Key Protector



Teslaunch X Key Key Protector Owner's Manual

[Home](#) » [Teslaunch](#) » Teslaunch X Key Key Protector Owner's Manual 

Contents

- [1 Teslaunch X Key Key Protector](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQs](#)
- [5 What's in the Box](#)
- [6 Different Wearing Styles](#)
- [7 Assembling X Key](#)
- [8 How to Unlock & Lock](#)
- [9 Power Up Your Tesla](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

Teslaunch

Teslaunch X Key Key Protector



Product Information

- **Specifications:**
 - **Brand:** Teslaunch
 - **Model:** X Key
 - **Compatibility:** 2017-2024 Model 3, 2020-2024 Model Y, 2021-2024 Model S/X, 2024 Cybertruck
 - **Waterproof Rating:** IP68

 
Product Usage Instructions

- **Different Wearing Styles:**
 - **XBand:** Wear it on the wrist like a watch. It is IP68 waterproof and suitable for swimming.
 - **XPendant:** Hang it as a decoration on your bags like a pendant.
 - **XBrooch:** Attach it to garments, perfect for activities like running.
 - **XBuckle:** Snap it onto your keychain for convenient commuting.
 - **XKeyfob:** Attach it anywhere you want, such as a keychain, backpack, or trousers.
- **Assembling X Key:**
 - **XCore:** Insert the white side facing up and the metal side down into the corresponding hollow part of XBand/XPendant/XBuckle/XKeyfob.
 - How to Pair X Key with Your Tesla?
 - Follow the specific instructions based on your Tesla model:
 - How to Unlock & Lock:
 - Instructions for using the key card to unlock or lock Model 3/Y:

FAQs

- **Q: Is the X Key compatible with all Tesla models?**
 - **A:** The X Key is compatible with specific Tesla models. Please refer to the compatibility list provided in the manual.
- **Q: Can the X Key be used for multiple vehicles simultaneously?**
 - **A:** The X Key can be paired with one vehicle at a time. To use it with another vehicle, you may need to unpair and re-pair it.

What's in the Box

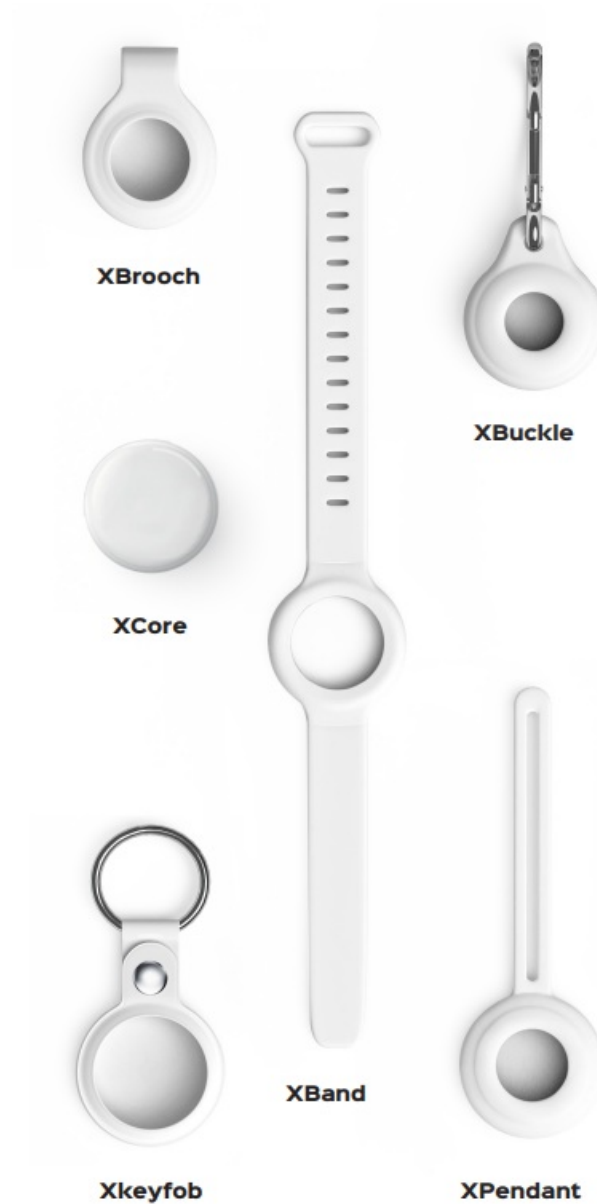

Different Wearing Styles

- **XBand**

- It can be worn on the wrist like a watch. This key is IP68 waterproof. You can wear it even swimming.



- **XPenda**

- The design is similar to the usual pendant. You can hang this key as decoration on any of your bags.



- **XBrooch**

- It is designed to be attached to garments. It's convenient to put it on your clothes and go for a run.



- **XBuckle**

- It can be used to snap onto your keychain. This is perfect to wear while commuting.



- **XKeyfob**

- It can be attached anywhere you want, like a keychain, backpack and trousers.



Assembling X Key

XCore




white side



metal side down


XBand / XPendant /

Put XCore directly into the round hollow part in the XBand. (White on the top and silver on the bottom.)

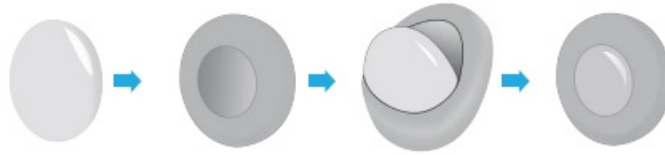

XBuckle / XKeyfob

Place XCore into the round hollow part. (White on the top and silver on the bottom.)

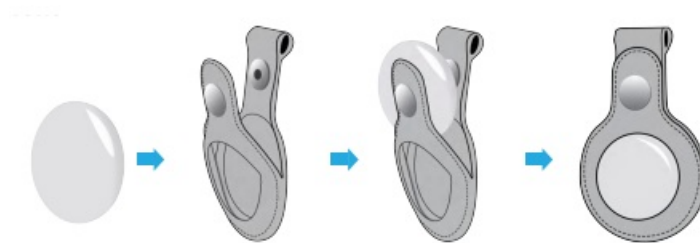

Compatible Model




How to Pair X Key with Your Tesla?

Adding X Key from the Touchscreen: If you have a key card or key fob that is already paired with your vehicle, you can pair it using the touchscreen.

1. Model 3 (2017-2023) / Y (2020-2024)

1. On the touchscreen, touch Controls > Locks > Keys > Add Key.
2. Scan your X Key on the card reader located behind the cup holders on the top of the centre console. After the X Key is recognized, remove it from the card reader.
3. Scan a key card or key fob that has already been paired to the vehicle to confirm X Key pairing.
4. When complete, the key list includes the new device. Touch the associated pencil icon to customize the name of the key.

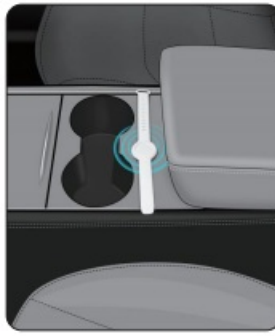

2. 2024+ Model 3 Highland

1. On the touchscreen, touch Controls › Locks › Keys › Add Key.
2. Scan X Key on the card reader located on either wireless phone charger. When you hear a chime, then X Key is recognized.
3. Scan a key card that has already been paired to the vehicle to confirm X Key pairing.
4. When complete, the key list includes the new key. Touch the associated pencil icon to customize the name of the key.




3. Model S/X (2021-2024)

1. On the touchscreen, touch Controls › Locks › Keys › Add Key.
2. Scan your X Key or key fob on the card reader located on the wireless phone charger. When you hear a chime and the new key is recognized, remove it from the card reader.
3. Scan a key card that has already been paired to the vehicle to confirm X Key pairing.
4. When complete, the key list includes the new key. Touch the associated pencil icon to customize the name of the key.



4. Cybertruck (2024)


1. On the touchscreen, touch Controls › Locks › Keys › Add Key.
2. Scan your X Key or key fob on the card reader located on the wireless phone charger. When you hear a chime and the new key is recognized, remove it from the card reader.
3. Scan a key card that has already been paired to the vehicle to confirm X Key pairing.
4. When complete, the key list includes the new key. Touch the associated pencil icon to customize the name of the key.

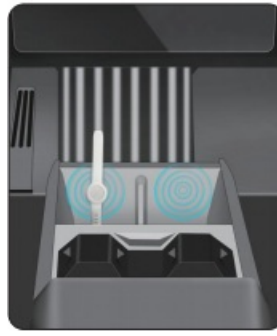


How to Unlock & Lock

1. Model 3 (2017-2023) / Y (2020-2024)

- To use a key card to unlock or lock Model 3/Y, position the card as shown and tap it against the card reader located just below the Autopilot camera on the driver's side door pillar.
- When Model 3/Y detects the key card, the exterior lights flash, the mirrors unfold or fold (if Fold Mirrors is on), the horn sounds (if Lock Confirmation Sound is on), and the doors unlock or lock.
- **Note:**
 1. You may need to physically touch the driver's side door pillar with the X Key, and you may need to hold it against the transmitter for one or two seconds.
 2. For Model 3, the X Key should be placed below the camera about 1.97 inches (5 cm).
 3. For Model Y, the X Key should be placed below the camera about 7.5 inches (19 cm).

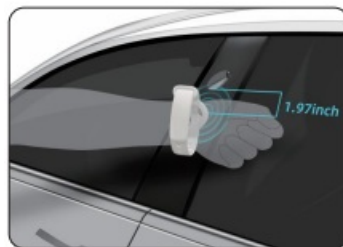

Model 3 (2017-2023)

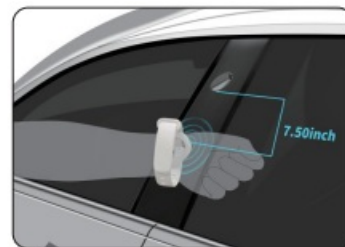


Model Y (2020-2024)

2. Model S/X (2021-2024) / 2024+ Model 3

- To use a key card to unlock or lock Model S/X/Highland Model 3/Cybertruck, position the card as shown and tap it against the card reader located approximately one-third the way up the driver's side door pillar. When Model S/X/Highland Model 3/Cybertruck detects the key card, the exterior lights flash, the mirrors unfold or fold (if Fold Mirrors is on), the horn sounds (if Lock Confirmation Sound is on), and the doors unlock or lock.
- **Note:** You may need to physically touch the driver's side door pillar with the X Key, and you may need to hold it against the transmitter for one or two seconds.




Model S (2021-2024)

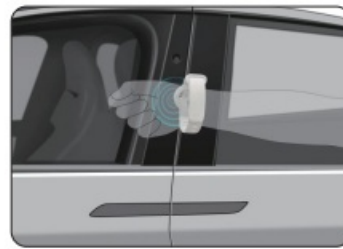

Model X (2021-2024)



2024+ Model 3 Highland

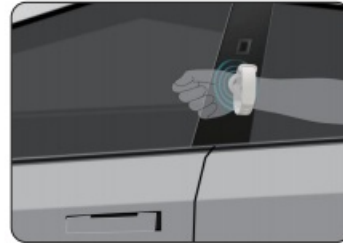

Cybertruck (2024)


3. What Can I Do If It Cannot Unlock?

- If the lock does not respond, pull the door then use the X Core to unlock again.

Power Up Your Tesla

1. Model 3 (2017-2023)/ Y (2020-2024)

- Once inside, power up Model 3/Y by pressing the brake pedal within two minutes of scanning X Key. If you wait longer than two minutes, you must re-authenticate by placing the X Key near the card reader located in the wireless phone charger on the centre console. When your X Key is detected, your two-minute authentication period restarts.

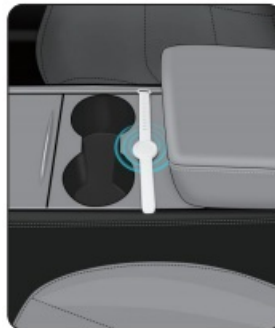

2. 2024+ Model 3 Highland/ Model S/X (2021-2024)

- Once inside, power up Model 3 Highland/S/X by pressing the brake pedal within two minutes of scanning X Key. If you wait longer than two minutes, you must re-authenticate by placing the X Key near the card reader located in the wireless phone charger on the centre console. When your X Key is detected, your two-minute authentication period restarts.



3. Cybertruck (2024)

- Once inside, power up Cybertruck by pressing the brake pedal within two minutes of scanning X Key. If

you wait longer than two minutes, you must re-authenticate by placing the X Key near the card reader located in the wireless phone charger on the centre console. When your X Key is detected, your two-minute authentication period restarts.



Important Things

1. If the wristband causes any skin irritation or other discomforts, please discontinue using it and consult your doctor.
2. If your XBand gets wet after sweating or showering, dry it thoroughly before putting it back on your wrist.
3. Waterproof: Not suitable for diving, swimming in the sea, or sauna. But it is suitable for swimming in the swimming pool or shower (cool water) and shallow beach.
4. We provide a one-year warranty for the XCore chip (excluding physical factors). If XCore requires replacement for any reason, please feel free to contact us.

- Email: support@teslaunch.net.

Documents / Resources

<p>X Key</p> <p>Designed by Teslaunch</p>	<p>Teslaunch X Key Key Protector [pdf] Owner's Manual Model 3, Model Y, Model S, Model X, Cybertruck, X Key Key Protector, X Key, Key Protector, Protector</p>
--	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.