



TESmart HDK0402A1U KVM Switch Dual Monitor User Guide

[Home](#) » [TESmart](#) » TESmart HDK0402A1U KVM Switch Dual Monitor User Guide 

TESmart

HDK0402A1U KVM Switch Dual Monitor
User Guide



Contents

- 1 Troubleshooting
- 2 Hotkey Switching Issues
- 3 Troubleshooting / FAQ
- 4 Keyboard/Mouse Issues
- 5 Video Signal Issues
- 6 Audio Issues
- 7 Refresh Rates/ Resolution Issues
- 8 Documents / Resources
 - 8.1 References

Troubleshooting

Generic troubleshooting tips and steps for common AV problems.

Technical Support

Thank you for choosing Tesmer.

We are here to help you set up your product.

Please make sure you: -Visit <https://support.tesmart.com> for knowledge base and troubleshooting or scan the QR code directly with apps like Twitter.



<https://support.tesmart.com/hc/en-us>

-Consult support@tesmart.com for technical support.

-Usually, you can resolve most issues with the troubleshooting below.

Hotkey Switching Issues

Hotkeys not working | Hotkey Issues | No Scroll Lock on keyboard | Loud Beep

1.1 Hotkeys for Dual Monitor KVM


hotkey commands | hotkey setup | hotkey commands don't work | my keyboard have no Scroll Lock button | Passthrough Mode

Applicable product models for hotkeys


HDK0402A1U

Basic info


Keyboard must be plugged into dedicated Keyboard/Mouse port for hotkeys to be recognized.

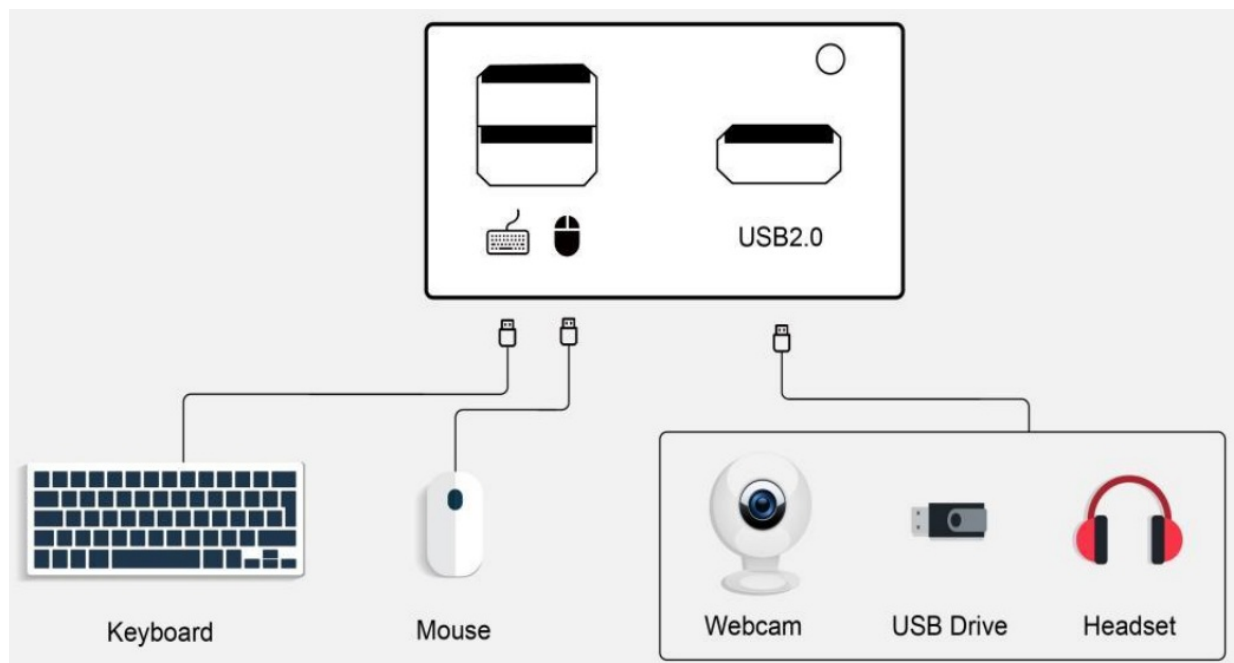


KVM Mode 1: Extended Desktop

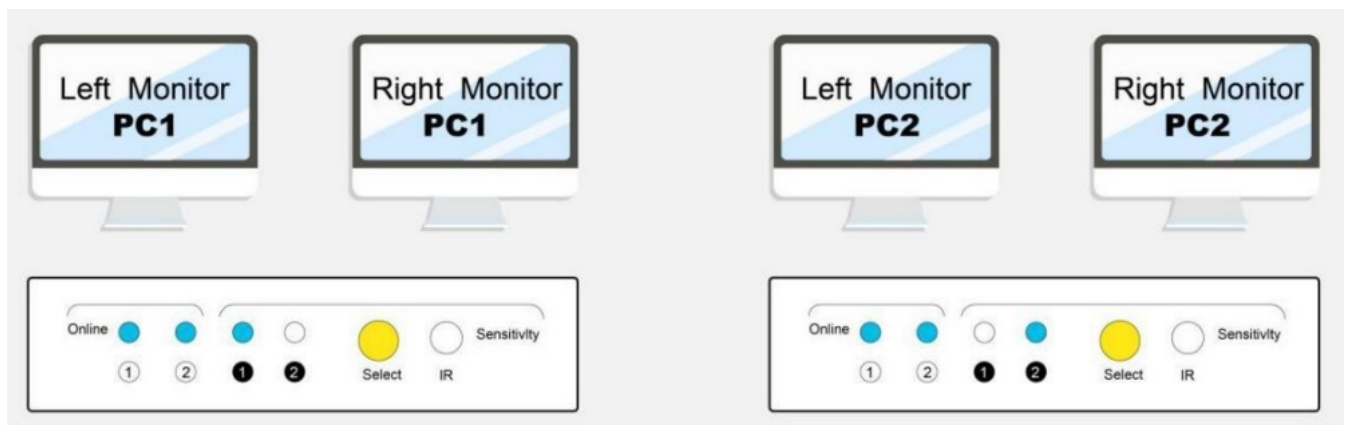


KVM Mode 2: Split Desktop

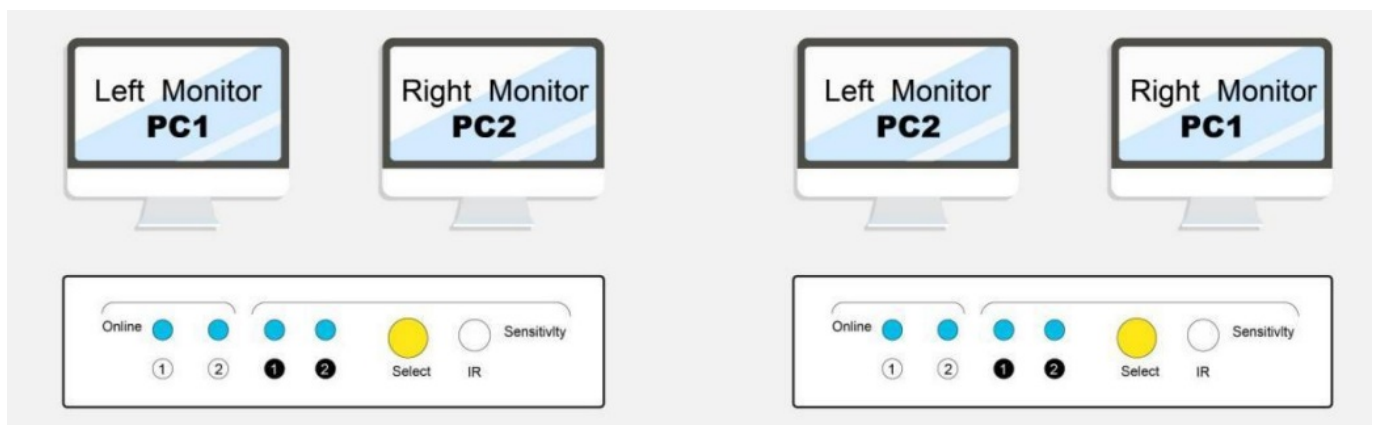


Hotkey commands

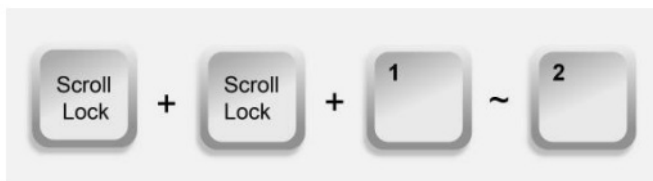


Switch inputs (mode 1)

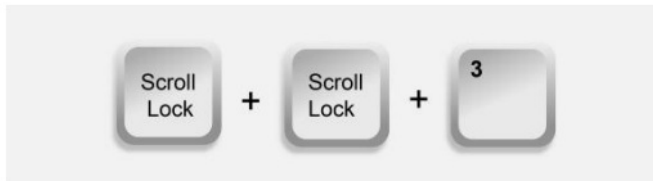


PC1 left monitor, PC2 right monitor (Mode 2)

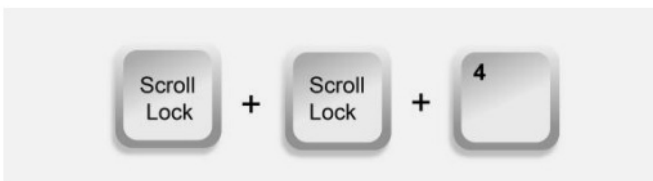


PC2 left monitor, PC1 right monitor (Mode 2)

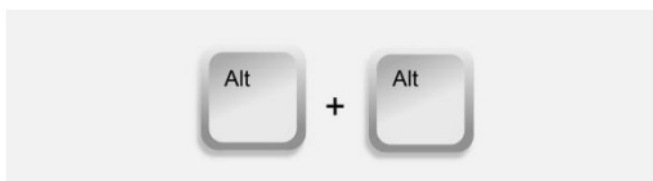


Change PC that controls Mouse/Keyboard

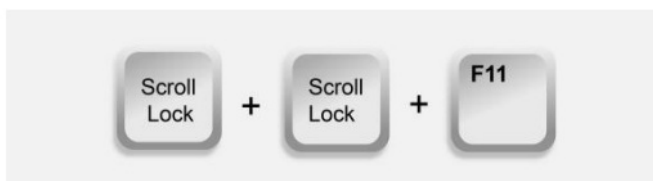


Enable or disable beep (Silent mode)

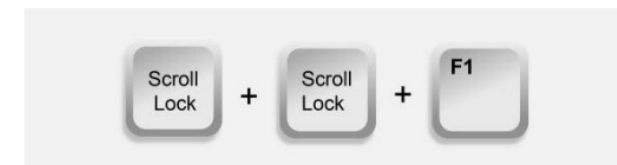

Change hotkey trigger between Scroll Lock to Right-Ctrl

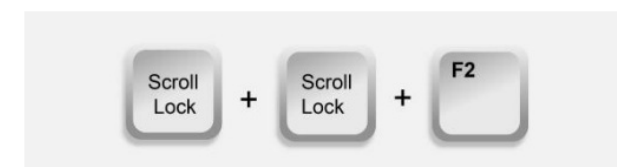

Enable/Disable Passthrough Mode

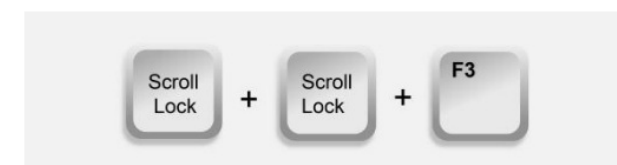

Confirm Passthrough Mode on (1 beep off , 2 beep on)

Troubleshooting / FAQ

My hotkey commands don't work or stopped working

Make sure keyboard is plugged into dedicated mouse/keyboard ports Try using Scroll Lock as hotkey trigger, if not, then Right-Ctrl.

My keyboard does not have a Scroll Lock button

Use Right-Ctrl, Right-Ctrl, 1 or 2 to confirm trigger isn't already set to Scroll Lock . Press and hold yellow switch button for 15 seconds . If KVM beeps, turn off and back on. Hotkey trigger will now be set to Right-Ctrl.

I accidentally turned Passthrough Mode off and keyboard no longer functions


Use a basic 104-key keyboard to turn Passthrough Mode back on. We recommend keeping Passthrough Mode on at all times unless using Linux

Keyboard/Mouse Issues

Jumpy mouse | erratic behavior | repeating keys | multimedia keys not working | No mouse | No keyboard

2.1 My Mouse & Keyboard Are Not Working?

First of all make sure you have the USB connection established

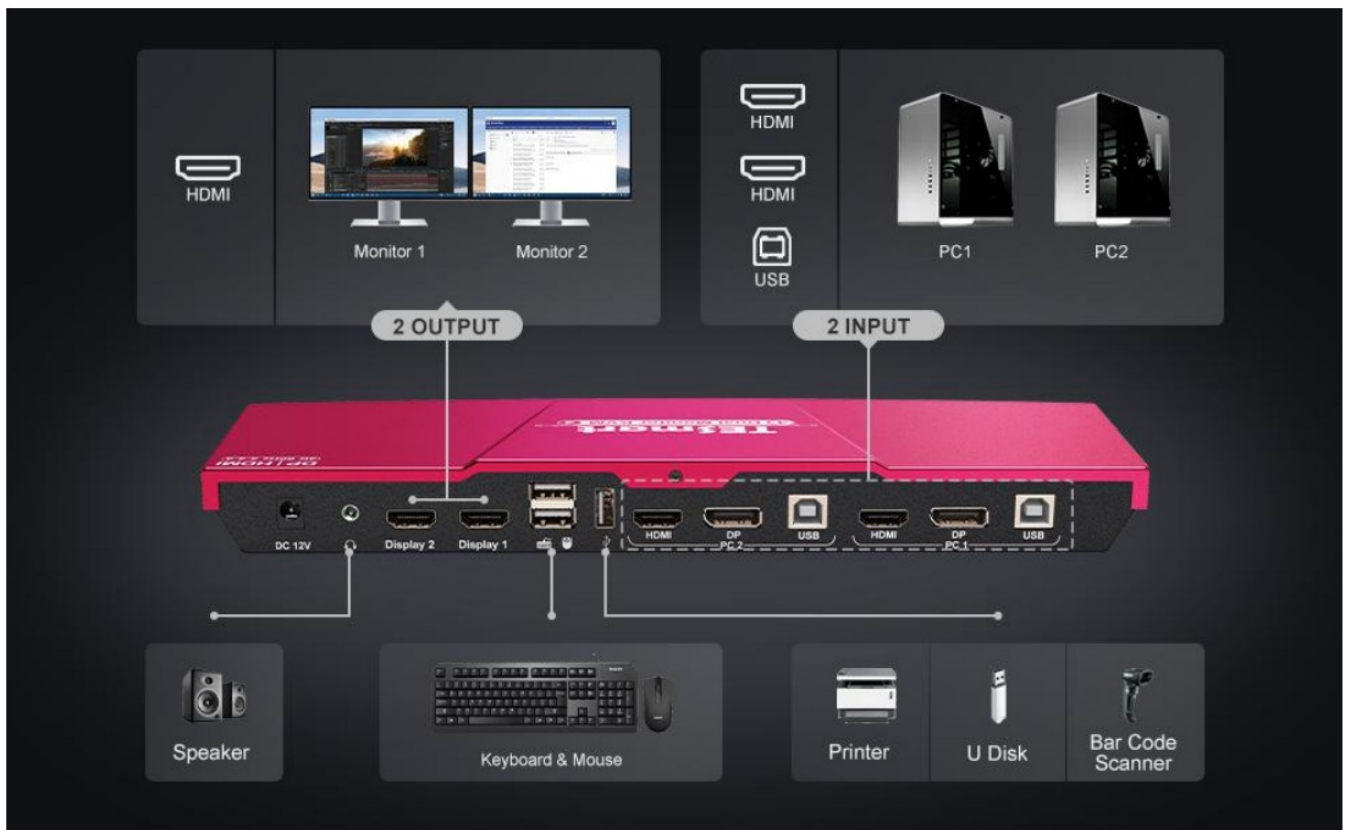

If you're having erratic mouse behavior, dropouts, or repeating keys when connected to the dedicated mouse/keyboard ports, this could be because the dedicated mouse and keyboard ports have EDID programming. This emulation is what allows the switch to receive hotkeys and mouse gestures but conflicts with gaming peripherals and select mouse/keyboard brands.

- **Solution 1:** We see issues occur sometimes when there is Logitech or keyboard/mouse software (corsair,razer or etc.) installed into the computer. You can search your "Apps & Features" and uninstall this software. This should stop the confliction between the hotkey software and keyboard/mouse software.
- **Solution 2:** Another possible cause could be IR interference if you're using wireless keyboard/mouse, since the USB port is in the back of the KVM there could be interference due to distance and the cables. Using a USB extender to bring the USB dongle closer to the devices will strengthen the connection.

If that still doesn't work we recommend using the USB 2.0 port with a powered USB hub as a workaround.

Because the USB port does not have EDID emulation, keyboard hotkeys and mouse gesture switching are not available to devices that use the USB input.

Video Signal Issues

Blank Screen | No video | Monitor not working | Flashing/Blinking | Only one computer displays | Port # not working |

3.1 Only One Display Is Working

Only One display is working | Display not working | One monitor working only

3.1.1 If you have at least 1 video connection from each computer then using the Mode 2 feature (each computer on each monitor) you can test the KVMs output to the monitors. Both displays should work when Mode 2 is active. This confirms the KVM output is working fine.


3.1.2 If you have only one monitor working, it is likely either you're missing the second video connection or the dock/adaptor you're using is incompatible.

Even if the adapter works when not connecting it to the KVM, it is possible that the adapter does not work well in the KVM environment.

3.1.3 Some Suggestions for Troubleshooting

All input devices need to plug 2 video cables into KVM. All "Display 1" and "Display 2" means the screen printing of KVM.

- STEP1—Keep the cables and KVM connection ports unchanged, and then exchange the monitor connect to Display 1 with that to Display 2, and check the working status of them after the exchange.

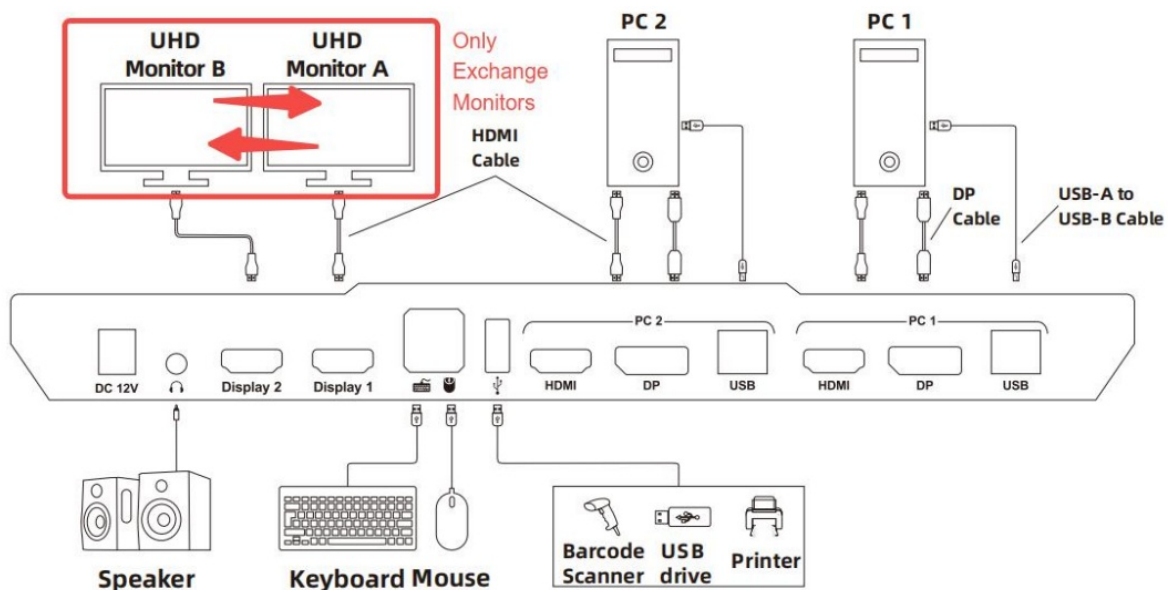

1) The monitor that work properly before —> still works properly


The monitor that cannot work before —> still cannot work.

That means this monitor is malfunctioning.

2) The monitor that works properly before —> cannot work anymore.

Go to STEP 2.

STEP2—Maintain the connection state completed in STEP 1 and do not change the position of the monitors and the ports. Exchange the connection cables(which connect the monitors and KVM), and observe the working status of the monitors now.

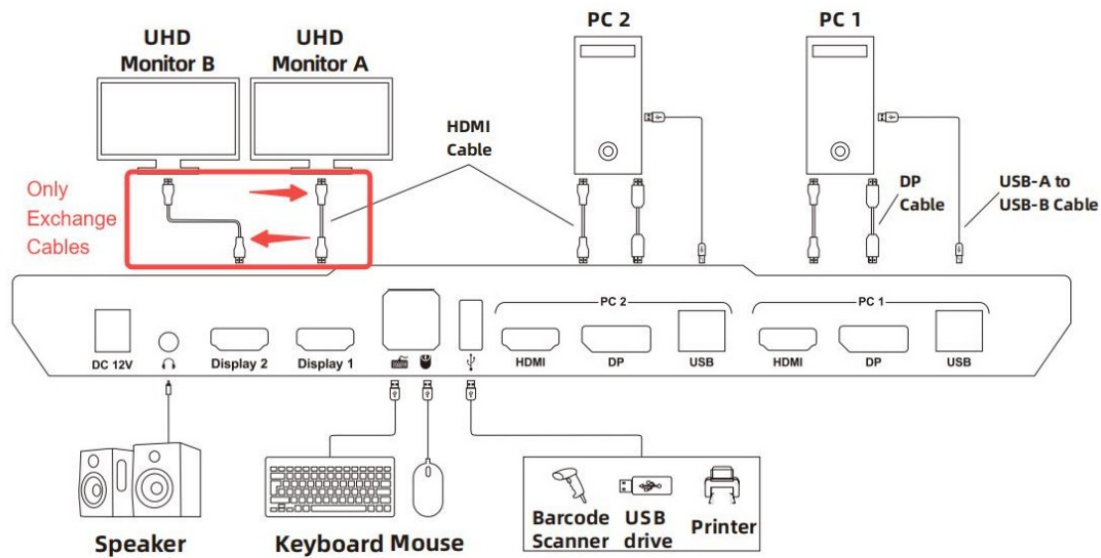

- 1) The monitor that cannot work before —> work properly
The monitor that works properly before —> cannot work anymore
That means the cable of this monitor is malfunctioning.
 - 2) The monitor that works properly before —> still works properly
The monitor that cannot work before —> still cannot work
That means the KVM is malfunctioning.
- Any other questions, please feel free to contact us.

3.2 Flashing Monitors/No Display

Flashing Monitor | Snow screen | Blank Monitor|

The following are some common reasons that cause this situation

- Bad Cable- Its pretty rare but sometimes the video connection could fail. Try testing this connection directly to a monitor to confirm the connection works outside of the KVM.
- Bad Port- Either on the KVM or computer side. On the computer side, swap it with another computer if available. On the KVM test the failing port with another computer that is known to be working with the KVM. If the issue is USB(keyboard/mouse) failure, make sure you have the Online Light on, this indicates that the USB connection is active.
- Generic Adapter/Converters- If you are using adapters/converters in the connection stream this is often a point of failure.
- Non-standard Resolution than the Other Working Monitor- Try to change resolution for the problematic monitor to the same as the other working monitor. Its possible that the selected resolution is not supported by the KVM therefore this will result in a blank screen or flickering.
- Docking Station Issues-Its pretty rare to have incompatible docks but it does happen with some older docking stations for example the HP Ultralock Dock 2013
- Monitor-Make sure the monitor is set to the right input source.

3.3 Dual Monitor Display Troubleshooting

Only One display is working | Display not working | One monitor working only

1. If you have at least 1 video connection from each computer then using the Mode 2 feature (each computer on each monitor) you can test the KVMs output to the monitors. Both displays should work when Mode 2 is active. This confirms the KVM output is working fine.
2. If you have only one monitor working, its likely either you're missing the second video connection or the

dock/adaptor you're using is incompatible. Even if the adaptor works when not connecting it on the KVM, it is possible that the adaptor does not work well in KVM environment.

3. If PC 1 works good with both monitors but PC 2 does not then you can swap PC 1 over PC 2 Inputs. If PC 1 works fine on both inputs this confirms the KVM is working fine and the issue is related to PC 2. Could be the port, adaptor or dock being used.

Audio Issues

My audio isn't working | speakers are not working | no audio

4.1 How Do I Get the Audio to Work?

Your computer will transmit audio via the video connections, such as HDMI cables.

1. Please confirm what output interface is the computer equipped with? (DVI? HDMI?)
If your computer is equipped with DVI output, normally that the DVI output does not carry audio signals, so the audio signal cannot be output to the speaker.
2. If you have an external device plugged into the audio mini-jack, the switch duplicates the audio signal from the HDMI input to the monitor and mini-jack out. After you connect the headset, you need to switch to the computer with the audio device turned on. Only the computer that controls the audio playback will output audio. Generally we just try all of the outputs one of them is correct.
3. If audio is not working, please go to your sound settings and choose the correct output device. This is typically listed as the monitor that is connected to the KVM because the audio is transmitting via the video connections. (Right- click the speaker, open the sound settings, select the correct HDMI output device, and set it as default.)

Refresh Rates/ Resolution Issues

Refresh Rate issues | Resolution is incorrect | Bad resolution


We see refresh rate/resolution issues all the time when using adapters to connect to the KVM. Its important to remember the connection flows FROM the computer TO the KVM. For example if you need to convert a USB C connection, it would be USB C to HDMI Adapter. we are aware that not all adapters work well in a KVM environment.

A common issue we hear about is monitors not displaying the correct high refresh rate.

This can be checked on the manual of your monitor it will demonstrate what refresh rates are supported via HDMI or Display port.

The logo for TESmart, with 'TE' in orange and 'Smart' in black.

Documents / Resources

	<p>TESmart HDK0402A1U KVM Switch Dual Monitor [pdf] User Guide</p> <p>HDK0402A1U, HDK0402A1U KVM Switch Dual Monitor, KVM Switch Dual Monitor, Switch Dual Monitor, Dual Monitor, Monitor</p>
-----------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)