

The Home Depot BCAA8AE9 Picnic Table Instruction Manual

Home » THE HOME DEPOT » The Home Depot BCAA8AE9 Picnic Table Instruction Manual ™



Contents

- 1 The Home Depot BCAA8AE9 Picnic **Table**
- 2 Operation
- 3 Use
- 4 Cleaning
- **5 Safety precautions**
- 6 Documents / Resources
 - **6.1 References**
- **7 Related Posts**



The Home Depot BCAA8AE9 Picnic Table



Operation

- Open the bench by lifting the seat area and pulling upwards on the top of the bench, guiding it forward and upwards. Hold the top of the bench to ensure a smooth and controlled motion.
- Ensure the bench is not positioned on a slippery surface, as it may slide during the process.
- · Keep children away from the area while opening and closing the bench
- For safety it is recommended to have two people to open and close the bench.
- To close, pull upwards on the tabletop and lift on bench until it slides shut.

Use

- Place picnic table on a flat, stable surface.
- Do not stand on the table surface or use it for purposes other than intended
- Ensure children are supervised while using the picnic table/bench to prevent accidents.

Cleaning

- Regularly clean the table surface with mild soap and water to remove dirt, debris, and spills.
- Avoid using harsh chemicals or abrasive cleaners, as they may damage the tables finish.
- Wipe dry with a clean cloth after cleaning to prevent water damage and maintain the tables appearance.

Maintenance

Check the table periodically for loose screws, bolts, or other hardware. Tighten as needed to ensure stability. Inspect the table for signs of damage. Repair or replace any damaged components promptly.

Safety precautions

- Always use caution when moving or using the picnic table bench to prevent injury.
- Keep small children and pets should be supervised around table/bench to prevent accidents.

Documents / Resources



The Home Depot BCAA8AE9 Picnic Table [pdf] Instruction Manual BCAA8AE9, BCAA8AE9 Picnic Table, Picnic Table, Table

References

User Manual

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.