

The Home Depot MSG-TN-1204 Trampoline with Enclosure Net **User Manual**

Home » THE HOME DEPOT » The Home Depot MSG-TN-1204 Trampoline with Enclosure Net User Manual



THE HOME DEPOT TRAMPOLINE MSG-TN-1204


Contents


- 1 INSTALLATION WARNING
- **2 USE WARNING**
- **3 ADDITIONAL SAFETY WARNIN**
- **4 LADDER PART LIST**
- **5 LADDER ASSEMBLY**
- **6 WARNING GENERAL SAFETY**


ADVICE

- 7 Care & Use
- 8 Care & Maintenance of Your Trampoline
- 9 Documents / Resources
 - 9.1 References

INSTALLATION WARNING

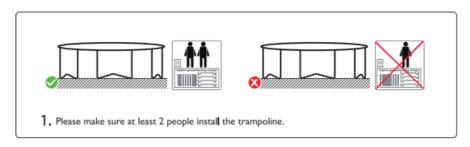

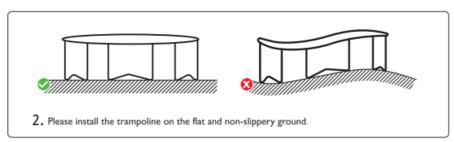

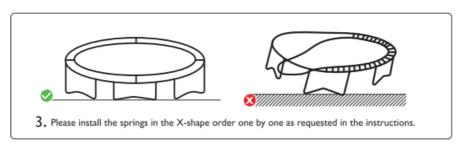



USE WARNING



Do not somersault or flip.



Do not dunk and hold onto the ring.



Do not jump onto the trampoline from a height.



Do not intentionally hit the safety enclosure net.



Do not use the trampoline in stormy weather but disassemble and store it.



Do not exceed 330lbs for a single user and do not exceed the total weight for multiple users.



Do not place any sharp objects on the trampoline.




Do not use during pregnancy, high blood pressure or other injuries.


ADDITIONAL SAFETY WARNIN


- Read all instructions before using the trampoline.
- Use trampoline only under adult supervision.
- Not recommended for children under six years old.
- · Secure the trampoline against unauthorized use.
- Use only when the jumping mat is clean and dry.
- Do not use the trampoline without the spring cover pad.
- Do not use the trampoline while under the influence of alcohol or drugs.
- Do not smoke while using the trampoline.
- Do not use the trampoline as a spring board to jump onto other objects. Do not jump from other buildings or object surfaces, onto the trampoline or into or over the trampoline enclosure.
- Never set up or continue to use the trampoline in heavy rain, wind, or storm weather, especially lightning storms. It's recommended that disassemble and store the trampoline in bad weather.
- Inspect carefully before using and replace any worn, defective or missing parts.
- Avoid bouncing too high. Maintain control. Do not try to jump over the enclosure.
- Do not jump and try to hang onto the top of the netting or the enclosure pole.
- Don't intentionally kick, bounce against, climb on, hang from, jump over or crawl under the enclosure.
- Wear clothing free of drawstrings, hooks, loops, or anything that could get caught in the enclosure.
- Enter and exit the enclosure only through the zipper door. Do not crawl under the trampoline.


- Do not go through the gap between the enclosure and the mat.
- Misuse of the enclosure may result in serious injury or death.
- Users may become entangled in or strangled by loose cords or in gaps between trampoline and enclosure.
- Keep the enclosure tightly fastened to the trampoline in accordance with the manufacturer's instructions.
- Failure to properly assemble and maintain a tight, secure trampoline/enclosure boundary may result in serious injury, strangulation or death.


NO	PART	NAME	QTy
1		Top Rail	8
2	500	T-shaped Connector	8
3		Leg Extension (two holes)	8
4		Base Leg	4
5		Upper pole B	8
6	<i>€</i>	Upper pole A & Backboard Pole	7
7		Frame Pad	1
8		Safety Net	1
9	.0	Net Rope	7
0	Œ ● Ø Ø ■ ■	Bolt Pack (M6*75)	16
11	C IIII	Spring	72
12		Jumping Mat	1
13	<u> </u>	Spring Tool	1
14	2 M6	Wrench	1

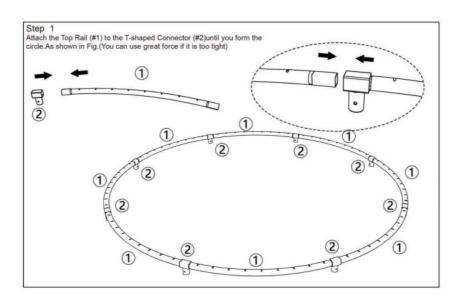


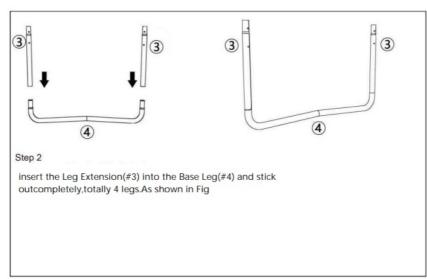


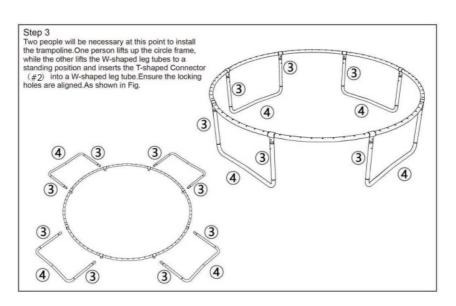


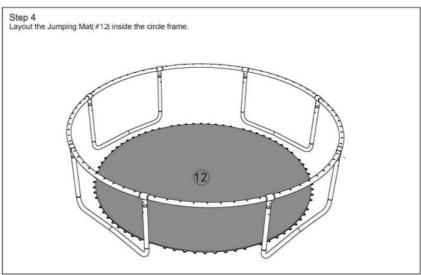


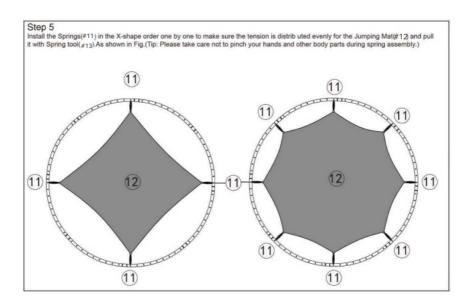


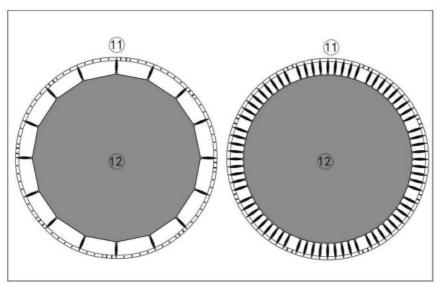


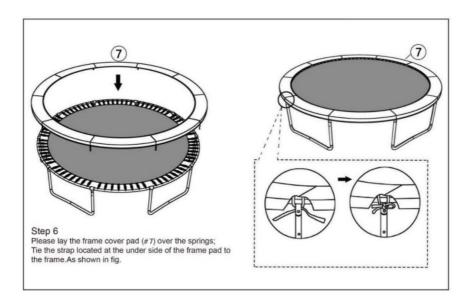

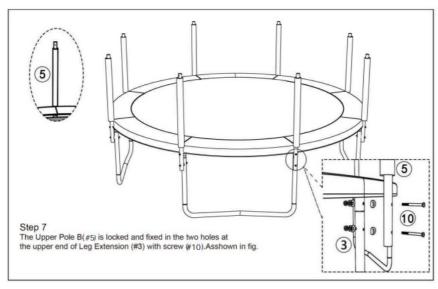

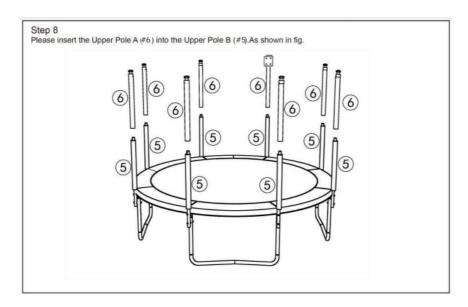

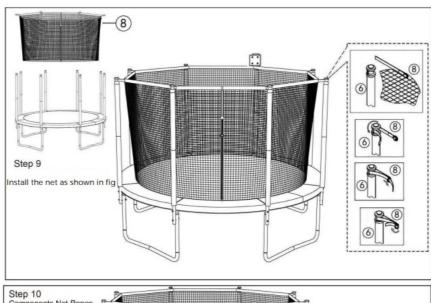

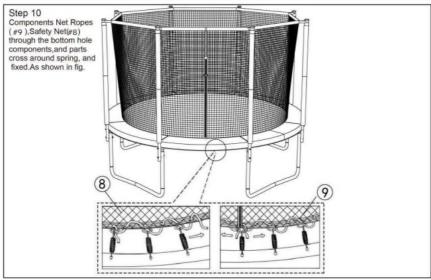

USER MANUAL FOR LADDER (2 STEP/ 3 STEP) WARNING & INSTRUCTION

- Please read the assembly instructions before beginning to assemble the product.
- Please refer to the table for part descriptions and numbers. The assembly instruction use these descriptions and numbers as reference.
- Make sure you have all parts listed. If you are missing any parts, please contact place of purchase.


• Only assemble by adult.

LADDER PART LIST

Ref.number	Part. number	Description	Unit (pcs)
1	LD001	Frame poles	2
2	LD002	Step poles	2 or 3
3	LD003	Screws	4 or 6
4	LD004	Manual	1

LADDER ASSEMBLY


Step 1. Frame install

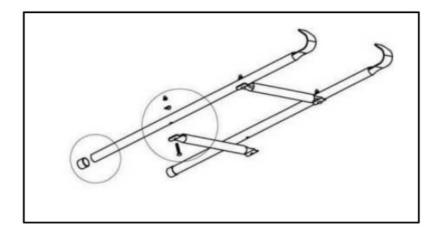


Layout all of the parts as pictures. select two frame pole which have two or three holes.

Step 2 Install screws

Pls install all of the screws use toolas show.

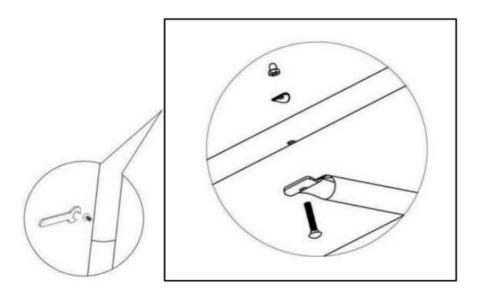

Step 3. Install Finished

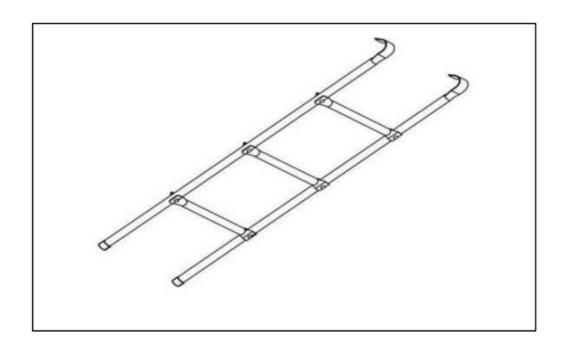


BASKETBALL HOOP UNSTALLATION MANUAL



⚠ WARNING

- Read and follow this installation manual
- Adult assembly required

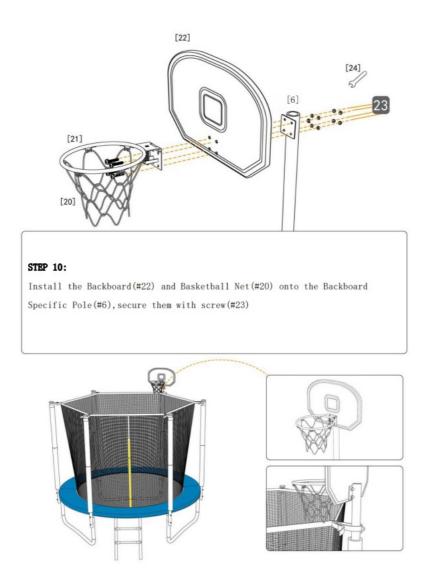

WARNING — GENERAL SAFETY ADVICE

- Please read the instructions before use, and retain for future reference.
- Ensure the trampoline Safety Net has been assembled correctly, as per the instructions in the manual.
- Children MUST NEVER use the trampoline unless supervised by a responsible adult with knowledge of trampoline use.
- Children MUST NEVER be left unattended inside the Safety Net at anytime.
- ALWAY follow the safety warnings stated with your trampoline instructions in conjunction with using Safety Net.
- DO NOT climb, swing or intentionally jump onto the panels or poles of the Safety Net.
- If the Safety Net material becomes damaged refrainfromuse.
- The Safety Net is ONLY intended to be used to reduce the risk of injuryfromfalling off the trampoline.
- DO NOT let children take items or toys into the SafetyNet.
- Please read and refer to other warnings and use information in the trampoline and Safety Net instructions before use.

Please retain this information for future reference.

Care & Use

 Assembly Information – This Safety Net must be assembled by an adult. They must reassembled exactly in accordance with the assembly instructions. Enlisting the aid of a helper will make assembly easier. This Safety Net contains small parts and is not suitable for children under 3 years old. Please take an inventory of all parts before assembly. Should there be any missing parts; the equipment must not be used until replacement parts have been fitted.

• Location — Your trampoline must be placed on a flat and level surface which is well-lighted. Under no circumstances should it be positioned on a hard surface such as concrete or asphalt, unless the ground under the trampoline has free-space of 2 metres surrounding the trampoline and is covered with a safety surface as well as a 7 metres clearance space in height Examples of suitable surfaces are grass, sand or a play surface intended for this trampoline. It is important not to place or store anything under your trampoline. Please also read the instructions accompanied with your trampoline.

Safety Information

- This Safety Net is designed and made for family domestic use only by people 6 years and older. It is not a
 rebounding device. It is designed as a Safety Net to control entry and exit to and from the trampoline and allow
 jumpers to gain confidence, balance, coordination and agility without the fear of rebounding off the trampoline,
 where injury could occur.
- Adult supervision of children Children should always be supervised while they are playing on the trampoline fitted with a Safety Net and should be instructed not to use it in an inappropriate or hazardous manner. In particular be aware of:
 - The objects children bring into the Safety Net
 - Children's activities inside the Safety Net
 - Conditions inside the Safety Net when children are using it
 - The way children get into and out of the Safety Net
- Children should not wear cycle helmets while playing on the trampoline.
- The frame of your trampoline is made of steel and it will conduct electricity. No electrical equipment (lights, heaters, extension cords, household appliances, etc.) should be permitted in or on the Safety Net under any circumstances to avoid the risk of electrocution.
- Never allow more than one person to use the trampoline at a time. Multiple users may collide witheach other and this can result in serious injury.
- As your trampoline mat is raised off the ground, there is the risk of a fall when exiting the trampoline through the
 door of the Safety Net. Children should be assisted when entering and exiting the Safety Net so to reduce their
 risk of falling.

Net.

- Only the door of the trampoline Safety Net should be used to enter or exit the Safety
- Weather conditions Special care should be taken as weather conditions change. In particular, surfaces can
 become slippery in wet weather and tongues and lips can stick to the metalwork at subzero temperatures. In
 warmer and sunnier weather, parts can become hot, and temperatures should be regularly checked during use,
 especially metal parts.

Care & Maintenance of Your Trampoline

• With all products it is vital that the equipment is checked regularly and often by an adult. The complete products should be checked at least once a month, and particular attention should be paid to connections and fastenings. If any parts exhibit signs of wear and tear, they may need to be replaced. Failure to do this may

result in the product malfunctioning and causing injury.

- The product must not be used until properly and fully installed and checked. Galvanized tubular products may require occasional maintenance. If surface rust appears it should be removed with either a wire brush or coarse sandpaper, and the area treated with non-toxic paint.
- To avoid damage to the Safety Net, do not allow pets or other animals inside. Their claws and teeth can damage the netting and the trampoline mat.
- Make sure that no bonfires are lit close enough to threaten your trampoline and Safety Net. In windy conditions, sparks and embers can travel significant distances and burn holes in both the Safety Net netting and trampoline mat
- Any large trampoline, with or without an Safety Net, can be blown around in high winds and cause injury or damage. We recommend that the Safety Net should be removed under these conditions and stored in a dry place.

THE HOME DEPOT

Documents / Resources



The Home Depot MSG-TN-1204 Trampoline with Enclosure Net [pdf] User Manual TN-1204, LD001, LD002, LD003, LD004, MSG-TN-1204 Trampoline with Enclosure Net, MSG-T N-1204, MSG-TN-1204 Trampoline, Trampoline with Enclosure Net, Trampoline

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG. Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.