



Contents [[hide](#)]

- [1 The Home Depot Patio Square Wicker Side Table](#)
- [2 Product Specifications](#)
- [3 PRODUCT OVERVIEW](#)
- [4 SAFETY INFORMATION](#)
- [5 ASSEMBLY INSTRUCTIONS](#)
- [6 PRODUCT CARE](#)
- [7 WARRANTY & CUSTOMER SERVICE](#)
- [8 Frequently Asked Questions](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



The Home Depot Patio Square Wicker Side Table



Product Specifications

- Product Name: Patio Square Wicker Side Table with Umbrella Hole
- Material: Sturdy metal frame, PE rattan, faux wood tabletop
- Usage: Yard, Garden, Poolside
- Features: Central 2" umbrella hole with bottom support
- Warranty: Limited 1-year warranty for manufacturing defects under normal residential use

PRODUCT OVERVIEW

This outdoor wicker side table features a sturdy metal frame wrapped in durable PE rattan and a high-end faux wood tabletop. Designed to enhance any patio, garden, or poolside setting, it includes a central 2" umbrella hole with bottom support for secure placement.

SAFETY INFORMATION

- Do not stand or sit on the table.
- Keep away from open flames and high heat sources.
- Ensure umbrella is properly anchored before use.
- Use only on level ground to prevent tipping.
- Supervise children when near the table.

ASSEMBLY INSTRUCTIONS

Tools Required: Allen wrench (included) Assembly Time: Approximately 15–20 minutes

1. Unpack all parts and check against the parts list.
2. Attach the legs to the tabletop using the provided bolts.
3. Connect the bottom support bars between legs.
4. Align the umbrella holes on tabletop and bottom support.
5. Tighten all bolts securely.
6. Insert umbrella through the top and bottom holes.

PRODUCT CARE

Cleaning Instructions:

- Wipe with a damp cloth and mild soap as needed.
- Avoid harsh chemicals, bleach, or abrasive cleaners.
- Rinse off dirt and debris regularly.

Maintenance Tips:

- Store indoors or cover during prolonged non-use or extreme weather.
- Periodically check and tighten all bolts and connections.
- Inspect rattan surface for signs of wear or damage.

Winter Storage:

- Store indoors in freezing climates to prevent damage.
- Remove umbrella before storing.

WARRANTY & CUSTOMER SERVICE

This product is backed by a limited 1-year warranty covering manufacturing defects under normal residential use.

For support, contact us at:

Email: support@example.com
Phone: (123) 456-7890
Hours: Mon–Fri, 9:00 AM – 5:00 PM (Local Time)

Frequently Asked Questions


Q: Can I leave the table outside in all weather conditions?

A: It is recommended to store the table in a covered area during harsh weather to maintain its quality and prolong its lifespan.

Q: What should I do if I encounter an issue with assembly?

A: Refer to the assembly instructions carefully, ensuring all parts are correctly aligned and securely fastened. If you still face difficulties, contact our customer service for assistance.

Documents / Resources

	<p>The Home Depot Patio Square Wicker Side Table [pdf] User Manual</p> <p>Patio Square Wicker Side Table, Square Wicker Side Table, Wicker Side Table, Side Table</p>
---	---

References

- [User Manual](#)

THE HOME
DEPOT
Patio Square Wicker Side Table, SIDE TABLE, Square Wicker Side Table, THE HOME DEPOT, Wicker Side Table

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.