



THE SOURCE 8087234 LED Curtain String Lights Instruction Manual

[Home](#) » [The Source](#) » THE SOURCE 8087234 LED Curtain String Lights Instruction Manual 

Contents

- [1 THE SOURCE 8087234 LED Curtain String Lights](#)
- [2 INCLUDED](#)
- [3 FEATURES](#)
- [4 OPERATING INSTRUCTIONS BATTERY POWERED](#)
- [5 USB CONNECTED](#)
- [6 SPECIFICATIONS](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

CURTAIN

THE SOURCE 8087234 LED Curtain String Lights



LED CURTAIN STRING LIGHTS

Instruction Manual

INCLUDED

- LED curtain lights
- USB cable
- Instruction manual

FEATURES

- 2m (6.5ft.) string length and 2m (6.5ft.) string width
- 200 LED lights
- 8 light modes

OPERATING INSTRUCTIONS BATTERY POWERED

1. Open the battery cover.
2. Install 3 AA batteries (sold separately) following the polarity markings. DO NOT mix old and new batteries. DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Close the battery cover and switch the battery box ON.
4. Press the button to switch between light modes:
 1. Combination
 2. Waves
 3. Sequential
 4. Slow glow
 5. running water
 6. Slow fade
 7. Twinkling
 8. Solid ON
 9. OFF

USB CONNECTED

1. Connect micro USB cable to battery box.
2. Connect the USB cable to a wall charger (sold separately) or alternative power source.
3. Turn the light ON.
4. Press the button to switch between light modes:
 1. Combination
 2. Waves
 3. Sequential
 4. Slow glow
 5. Running water
 6. Slow fade

7. Twinkling
8. Solid ON
9. OFF


SPECIFICATIONS

- Length: 2m 5ft.)
- Width: 2m 5ft.)
- LED quantity: 200 LEDs
- Wire Material: PVC + copper wire
- Battery: 3 AA batteries (sold separat
- Working Temperatures: -30 to 60

WARNINGS

- DO NOT use if product is damaged
- DO NOT expose to direct heat, flame or immerse in water
- DO NOT attempt to power any further string lights from this product
- DO NOT attempt to remove bulbs, LED bulbs cannot be replaced
- DO NOT attempt to power with an extension cord
- Fully unwind lights and uncoil the cable before turning ON
- Remove batteries when not in use and should be removed and replaced by adults only
- Protect product from sharp or potentially damaging objects to avoid damage to the wire's insulation

Documents / Resources

	<p>THE SOURCE 8087234 LED Curtain String Lights [pdf] Instruction Manual 8087234, LED Curtain String Lights</p>
---	---