



THE SOURCE 8088898 Controller For PS4 Gamepad Instruction Manual

[Home](#) » [The Source](#) » THE SOURCE 8088898 Controller For PS4 Gamepad Instruction Manual 

Contents

- [1 THE SOURCE 8088898 Controller For PS4 Gamepad](#)
- [2 INCLUDED](#)
- [3 FEATURES](#)
- [4 COMPONENT IDENTIFICATION](#)
- [5 OPERATING INSTRUCTIONS](#)
- [6 MAPPING MACROS](#)
- [7 SPECIFICATIONS](#)
- [8 THE SOURCE – WARRANTY](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



THE SOURCE 8088898 Controller For PS4 Gamepad




INCLUDED

- Controller for PS4™
- Removable 8 ft. (2.4m) USB-C cable
- Instruction manual

FEATURES

- Compatible with PS4™
- 2 macro modes—map buttons and create macros for quick access to in-game combos
- Compatible with USB 2.0 and USB 3.0
- 3.5mm port compatible with gaming headsets for in-game sound and voice chat
- Removable 8 ft. (2.4m) USB-C cable

COMPONENT IDENTIFICATION

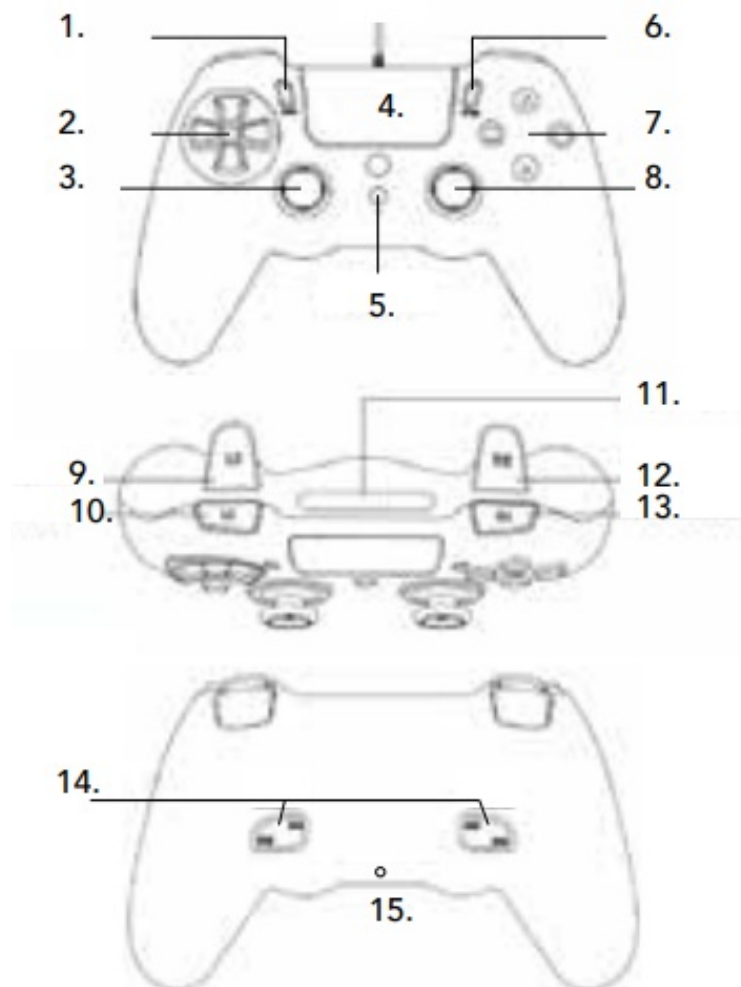

1. Share button
2. D-pad
3. Left Joystick
4. Touchpad
5. Turbo
6. Options
7. Action
8. Right joystick
9. L2
10. L1
11. RGB light bar
12. R2
13. R1
14. Remapping buttons—M1, M2, M3 and M4
15. 3.5mm audio jack

OPERATING INSTRUCTIONS

1. Insert the controller's USB cable directly into the USB port on your PS4™.
2. The 7-colour LED will stay ON when the connection is established.

3. Press the home button to access your console's menu.
4. Launch your game and get into the action!

MAPPING MACROS

There are two macro-mapping modes. Both modes memorize a sequence of buttons, so you can perform a combination of actions or big combo moves with one button press. Mode A continuously activates your mapped-button sequence, while Mode B only executes the mapped-button command. Mode A (record continuous commands)

1. Press and hold M1, and then press Options. The macro LED will remain ON, indicating that the controller is ready to record the button sequence.
2. Press any buttons in the order that you want to save in the sequence. For example, L1, R3, X and then L2.
3. Press M1 again to confirm the setting. The macro LED will turn OFF. The macro has successfully saved the sequence. If you press M1, it will continuously execute L1 R3 X L2.
4. You can create any combination you want with any of the controller's buttons, or you can set one button to that macro.
5. Follow the same steps for mapping M2, M3 and M4. NOTE: You can save up to a maximum of 14 buttons in a sequence per macro.

Mode B (record single command)

1. Press and hold M1, and then press Share. The macro LED will remain ON, indicating that the controller is ready to record the button command.
2. Press any buttons that you want to save in M1. For example, L1.
3. Press M1 again to confirm the setting. The macro LED will turn OFF. The macro has successfully saved the command. If you press M1, it will execute L1.
4. You can create any remap you want with any of the controller's buttons, or you can set one button to that macro.
5. Follow the same steps for mapping M2, M3 and M4.

CAUTION: To avoid potential tripping hazard arrange cables and cords out of the way of walkways and pathways. Keep out of reach of children and pets. Avoid contact with sources of heat and moisture.

SPECIFICATIONS

- **Audio input:** 3.5mm audio jack
- **USB cable:** 2.4m (8ft.)
- **Voltage:** DC 5V-250mA

All trademarks belong to their respective owners.

THE SOURCE – WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this

warranty. This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.


Imported by:

The Source, Barrie, Ontario, Canada, L4M 4W5 Manufactured in China

www.thesource.ca

© 2021 The Source. All rights reserved.

Documents / Resources

	<p>THE SOURCE 8088898 Controller For PS4 Gamepad [pdf] Instruction Manual 8088898, Controller For PS4 Gamepad, 8088898 Controller For PS4 Gamepad</p>
---	---