

Wireless Bluetooth Pool Thermometer Model #SH210 User Manual

Home » Thermometers » Wireless Bluetooth Pool Thermometer Model #SH210 User Manual



Wireless Bluetooth Pool Thermometer



Contents

- 1 Overview
- **2 Function and Specification**
- **3 Product Descriptions**
- **4 Operating Instructions**
 - 4.1 Water temperature collector
 - 4.2 Monitor
 - 4.3 Mobile phone App
 - operation
- **5 Packing List**
- **6 About FMG**
- **7 Related Posts**

Overview

The SH210 wireless Bluetooth pool thermometer consists of a monitor and multiple remote floating sensors. It uses advanced dual-band dual-mode wireless transmission technology, which may be the wireless Bluetooth pool thermometer with the longest transmission distance and best value for money in the world. It can simultaneously monitor and record the measurement data of eight remote floating sensors. The user runs the App application software TempView+, which can conveniently download and view the water temperature measurement data with the mobile phone. It is widely used in the measurement and recording of water temperature in baths, pools, swimming pools, spas, bathing centers and other places.

Function and Specification

Remote floating sensor

• Measurement range: 0°C 70°C

Accuracy: ±1 °C

• Radio frequency: 433Mhz

Transmission distance >100 meters

Memory capacity: 4096BProduct size: D85×H47mm

Monitor

Indoor temperature measurement: 0°C 50°C

• Temperature measurement accuracy: ±1 °C

· Humidity measurement: 10% to 95% RH

Humidity measurement accuracy: ± 5%

• Wireless 433Mhz and Bluetooth BLE4.0 dual-band communication

- Monitor can receive and display the data of eight remote floating sensors
- Display clock, collector temperature, indoor temperature and humidity
- Preset temperature alarm threshold, sound and light alarm
- Transmission distance: >100M (433Mhz), >30M (Bluetooth)
- App software is compatible with Android and iOS operating systems
- Use two 1.5Vdc AAA alkaline batteries

• Dimensions: 108×90×22mm

Product Descriptions



Operating Instructions

Water temperature collector

Install the battery

Unscrew the thermometer cover counterclockwise, remove the battery insulation strip or reload the CR2032 coin cell battery. Press the S key on the board to converse temperature display unit. Press and hold the S button to switch on or off.

Remote floating sensor registration

Remote floating sensor needs to be registered before use. The registration operation is as follows: press and hold the C/F button of monitor for three seconds \rightarrow the house icon on the upper left of the monitor screen flashes \rightarrow in remote floating sensor closed state, press and hold S button three seconds, remote floating sensor sends a registration request \rightarrow when the house icon on the monitor display stops flashing and the serial number is displayed, indicating that the registration is successful. If the registration is unsuccessful within 10 seconds, the icon disappears, and you need to re register.

Place remote floating sensor

Close the cover of the remote floating sensor which is put into the water far away 100 meters from the monitor. To measure the temperature of the bath or pool, tight the rope through the small hole in the cover so that the remote floating sensor does not drift far away. When measuring the water temperature of the fish tank, remote floating sensor is attached to the inner wall of the fish tank by using a plastic suction cup.





Upload the logging data in remote floating sensor

The mobile phone sends an upload instruction to remote floating sensor and receive the stored data in the remote floating sensor through the monitor and App software. After the data is successfully uploaded, the memory is cleared.

Monitor



Install the battery

Open the battery cover and load two AAA batteries.

Set the temperature unit

Press the C/F button on the back cover of the monitor to select the temperature unit.

Setting parameters

Press and hold "SET" key for 3 seconds \rightarrow the screen upper digit flash and appears "↑" the high temperature threshold setting icon \rightarrow press \blacktriangle or \blacktriangledown _key to set high temperature threshold, and then press S key to confirm \rightarrow display low temperature threshold setting "↓" icon \rightarrow press \blacktriangle or \blacktriangledown key to set low temperature threshold and then press SET key t confirm \rightarrow the hour number "12" flickers at the bottom left of the screen, enters the time setting \rightarrow press \blacktriangle or \blacktriangledown key to adjust hours and then press SET key to confirm \rightarrow minute number "00" flickers, press \blacktriangle or \blacktriangledown key to adjust minutes and then press SET key to confirm \rightarrow the house icon at the top left of the screen flicker, press \blacktriangle or \blacktriangledown key to deleted the serial number of remote sensor (serial number 0 means no deletion) \rightarrow press SET key to confirm and then return to the original state.

Bluetooth link

Run the App TempView+ on the mobile phone, press and hold the monitor \triangle button for 3 seconds to link Bluetooth communication between monitor and smartphone. The icon 2 lin in the upper left corner of the monitor screen will flashes. If the icon stops flashing after 60 seconds, the Bluetooth link fails. Please repeat the above steps.

Monitor Display

The number in the upper left corner of the monitor indicates the serial number of the collector. The upper row of the screen cyclically displays the measured water temperature of the remote floating sensors, and the lower row alternates between the indoor temperature and humidity and time.

Query Maximum and Minimum Record

Press the monitor ▼ button to query the maximum and minimum water temperature values of each remote floating sensor. Press and hold the button for 3 seconds to clear the maximum and minimum values.

Query the data of remote floating sensors

Press the monitor A button to query the water temperature value of each remote floating sensor.

High and Low Temperature Alarm

When the water temperature exceeds the threshold temperature, the monitor emits an audible and visual alarm, and any button is pressed to interrupt the alarm.

Battery low voltage display

When the M or S icon appears in the upper right corner of the display, it indicates that the monitor or remote floating sensor battery is low voltage and the battery needs to be replaced.

Mobile phone App operation

Download App Software

Please download and install the App TempView+ in the Apple Store or Google Play Store

APP



Bluetooth Connection

Press and hold the \triangle button for 3 seconds to link Bluetooth communication between the monitor and the mobile phone. The icon 2 local in the upper left corner of the monitor screen flashes;. You need to repeat the above steps for Bluetooth connection. if the pairing is unsuccessful within 60 seconds and then the icon 2 local stops flashing



Parameter settings

Click Set temperature unit, alarm switch, high temperature threshold, low temperature threshold, alarm mode, ordinate. Temperature unit: Celsius °C and Fahrenheit F Alarm setting: set high and low temperature alarm threshold, select ringing, vibration, ringing alarm mode; Vertical coordinate setting: Set the maximum and minimum ordinate.




Data download

After the monitor is connected to the Bluetooth of the smart phone, the mobile phone sends upload command to the remote floating sensor through monitor and the remote floating sensor upload the logging data to smart phone



History query

Click the " " icon on the homepage to enter the historical data query interface, as shown below:

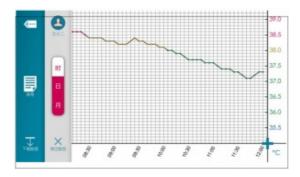

Click to view the collector list and select the collector to be queried.

Click to view the temperature data table of the collector.

Click Data Export: Export the data table by email.
Click "Time, Day, Month": corresponding to view the corresponding interface.

Click to delete the history of the current collector.

Packing List

SH210M monitor: 1 pc

SH210S Remote floating Sensor: 1 pc (multiple options)

Rope: 1pc

CR2032 cell: 1pc

SH210 User Manual: 1pc

About FMG

Visit www.fmg-tech.com for more products. If you have any questions, please contact: sale@fmg-tech.com.

Wireless Bluetooth Pool Thermometer Model #SH210 User Manual – <u>Download [optimized]</u>
Wireless Bluetooth Pool Thermometer Model #SH210 User Manual – <u>Download</u>

Manuals+,