

**THERMOS Push Button Insulated Bottle
with Straw Owner's Manual**



PUSH BUTTON INSULATED BOTTLE WITH STRAW

Contents [[hide](#)]

[1 GENERAL CARE](#)

[2 ASSEMBLY & USE](#)

[3 5 YEAR WARRANTY](#)

[4 Documents / Resources](#)


[4.1 References](#)

GENERAL CARE

- Before first use, and as soon as possible after each use, wash all parts with warm, soapy water. Rinse all parts thoroughly and allow time to dry.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water.
- Allow all parts to dry completely prior to next use or storage.
- DO NOT use abrasive cleaners or scrubbers since they may dull the finish.

- DO NOT use bleach or cleaners containing chlorine on any parts of the product.
- This product is top-rack dishwasher safe; however, washing by hand is recommended as the dishwasher uses harsher detergents and hot water that may affect the appearance of your product.
- Residual contents may become trapped between parts, under gaskets (flexible band around lid and/or stopper), or in straws. Although this products is top-rack dishwasher safe, washing by hand is recommended to ensure that these parts of the product are thoroughly cleaned.
- For maximum thermal insulation efficiency, pre-chill the product just prior to use. Fill with cold tap water, attach lid, let stand 5 to 10 minutes and empty. After filing container with contents, recover with lid to increase thermal efficiency. Never use a microwave, conventional oven, or other heat source for this purpose.

ASSEMBLY & USE

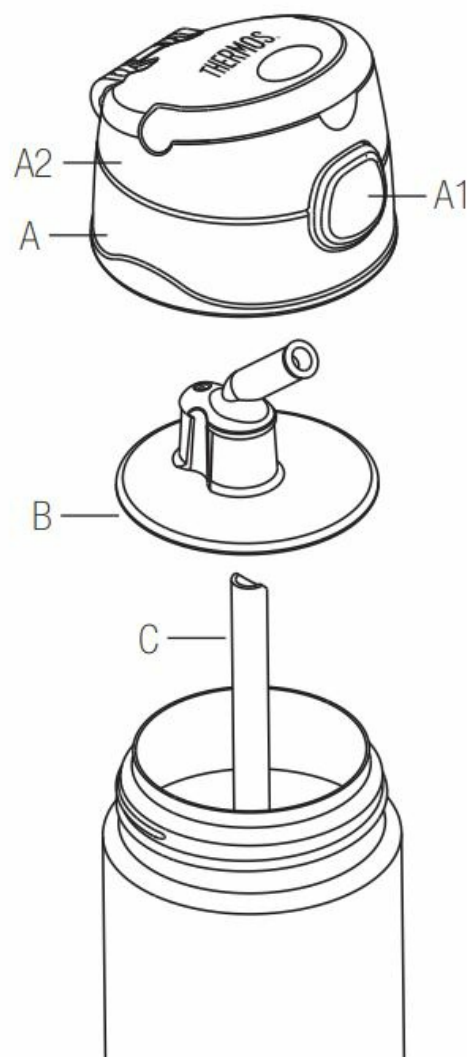

1. Remove lid (A) by twisting counterclockwise.

2. Press the push-button (A1) on the lid (A) to open lid cover (A2).
3. Using your thumbs, push sipper straw (B) downward through lid (A).
4. Pull the straw stem (C) out of bottom of sipper straw (B).
5. Wash all parts separately and re-assemble.
6. Fill container with contents. Do not overfill: Leave space for the lid (A) and straw stem (C), to avoid overflow.
7. Replace lid (A) by twisting clockwise.
8. To drink, press the push-button (A1) located on the lid (A) to release the lid cover (A2) and reveal the drink opening.
9. When finished drinking, close the lid cover (A2) until it snaps securely into place.

Note: A worn sipper straw (B) may cause the product to leak. Check sipper straw (B) regularly and replace immediately if damaged or worn.

WARNING

- DO NOT use product in microwave, on stove top, or in any type of oven.
- Never leave child unattended while using this product.
- Always test temperature of food or liquid before consuming and before feeding to your child.
- DO NOT overfill the container: Leave space at top of container for lid, straw (if present) and stopper (if present) to avoid overflow.
- Check periodically to make sure any gasket (flexible band around lid and/or stopper) is present and properly positioned to prevent contents from passing through lid when lid is closed. Missing, worn or misaligned gaskets may cause product to leak.

WARNING

- In general, contents should not be left in container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that include, for example, dairy, homemade soup, and/or tomato may start to spoil much sooner. Also, spoilage may occur faster when contents have been partially consumed. In addition, spoilage may occur sooner with the opening and reclosing of a product holding contents. Proceed with caution when using the product with quick spoiling or partially consumed contents, as pressure may build up in the container and possibly

cause forceful ejection of the stopper or contents.

- If contents are left in container longer than 24 hours, or you suspect spoilage, use caution when opening container. Contents spoilage can cause pressure inside container to build, possibly leading to forceful ejection of stopper or contents. In such circumstances, before attempting to open container, ENSURE THE OPENING IS POINTED AWAY FROM THE USER OR OTHER PERSONS TO AVOID INJURY.
- DO NOT use tools or devices to force container to open.
- If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.
- DO NOT use to store or carry carbonated drinks or dry ice. This may cause lid/stopper and contents to eject forcefully or leak.
- NOT FOR USE WITH HOT LIQUIDS: For cold liquids only. Hot liquids may cause burns or scald user.
- Use only with adult supervision. To avoid possible injury, do not let child walk or run with product.
- To avoid possible injury, do not let child chew on the soft material of the straw it present) as it may present a choking hazard.
- Check straw (if present) regularly for tears and replace immediately if damaged or worn.
- Continuous and prolonged sucking of fluids such as fruit juices or flavoured sugary drinks may cause tooth decay.
- DO NOT overfill product. Leave space at top of bottle for lid and straw (if present) to avoid overflow.

5 YEAR WARRANTY

- This warranty is given by UK Thermos Limited.
- This warranty only applies to Thermos brand products manufactured by or under our license from us and which have been purchased from a retail outlet within the United Kingdom.
- For consumers, the benefits conferred by this warranty are in addition to all rights and remedies provided to consumers under consumer protection laws. This warranty does not exclude, limit, vary or otherwise affect any of your legal rights as a consumer.
- Our obligations under this warranty are limited to the terms set out below.

- We warrant this Thermos brand product to be free from defects in material or workmanship under normal use in accordance with any instructions accompanying this product for five years from the date of original purchase (the “warranty period”). If any such defect arises and a valid claim is received within the warranty period we will, at our option, repair or replace any product component part that fails to confirm to this warranty within 30 days after its receipt by our factory service department. Nothing in this warranty excludes our liability for defective products under the Consumer Protection Act 1987. Subject to the foregoing and except where this Thermos brand product has been purchased by a consumer, all and any liability on our part for any loss of profits, revenues, use, savings, contracts, goodwill and any indirect, special, incidental, consequential loss or damage are excluded to the maximum extent permitted any applicable law. Some jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the preceding exclusion may not apply to you.
- Please retain our original proof of purchase and this warranty sheet as you must produce them in order to make a claim under this warranty.
- For more information on returning a defective product under this warranty, please contact our customer care line 0113 2763450.
- THERMOS is a registered trademark in over 115 countries.

UK THERMOS LTD, ALBANY HOUSE, 214A LEEDS ROAD, LS26 0JF

NI THERMOS LTD, 3 BEDFORD SQUARE, BELFAST, BT2 7EP

www.thermos.co.uk

Documents / Resources

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.