



Thermostats BGL09RF-WIFI Wireless Thermostat

[Home](#) » [Thermostats](#) » Thermostats BGL09RF-WIFI Wireless Thermostat 

Contents

- [1 Thermostats BGL09RF-WIFI Wireless Thermostat](#)
- [2 Technical Data](#)
- [3 Home Screen](#)
- [4 Quick Operation](#)
- [5 Advanced Setting](#)
- [6 Setting IP code](#)
- [7 Receiver Indicator Light](#)
- [8 Wiring Diagram](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



Thermostats BGL09RF-WIFI Wireless Thermostat



Download “Smart Life” app from Google play and app store.


When power on state, long press receiver button“push” to match wifi. Normally on is EZ mode. Blinking is AP mode. Successive blinking is matching.
The App advanced password is 123456

Considering battery usage, RF data updates every 20 minutes. If shorten interval, pls use USB power and remove batteries. Follow B05, B06 operation.

Technical Data

- Power: Receiver:230Vac 50/60HZ
Transmitter: USB power supply/4*AAA Batteries
Please! remove batteries when USB power is working.
- Display accuracy: 0.5°C
- Probe sensor: NTC(10k)1%
- Contact capacity: 5A/250V(WW);16A/250V(WE)
- Working environment temperature: 0~70°C
- Range of temperature adjustment: 5~35°C
- Range of temperature display: 0~40°C
- Insulating condition: Normal environment
- Running program: Set per 1 week as a cycle
- Output: Switch relay
- Installation: Wall mounted or on battery seat
- Size(mm) 130*90*25

Home Screen

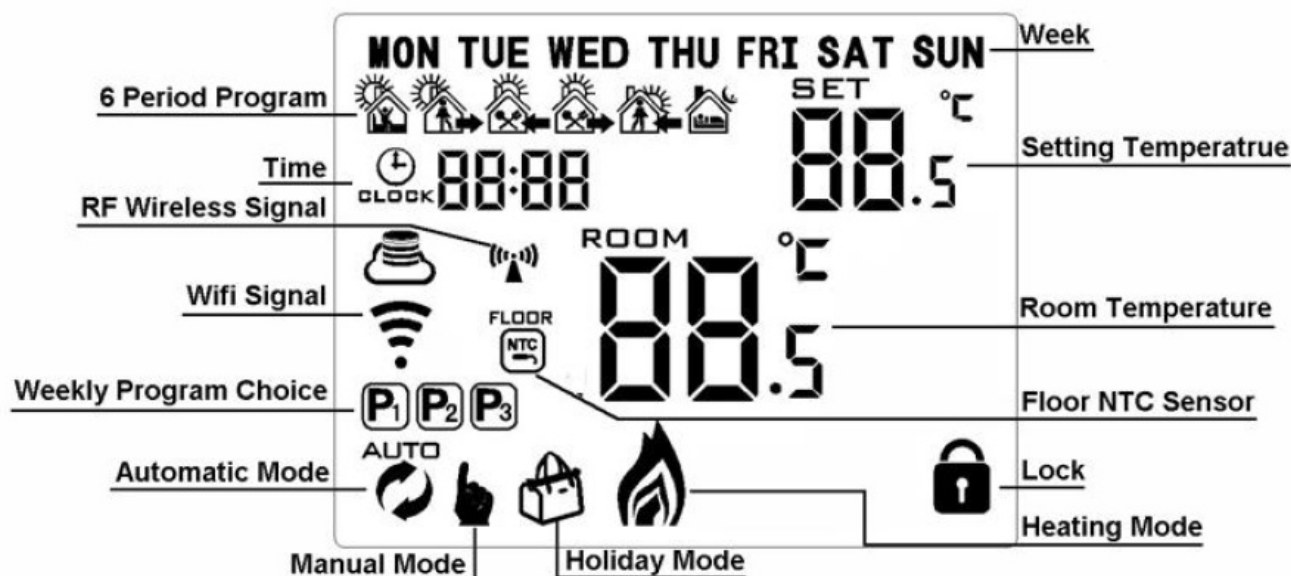

Quick Operation

NO	Icon	Description
A		Turn ON/OFF
B		1 Short press to switch automatic mode and manual mode 2 Power on state, long press for 3-5 seconds to do programmable setting 3 Power off state, long press for 3-5 seconds to do advanced setting
C		1 Confirm key 2 Short press it to set time 3 Holiday mode setting.
B		1 Decrease key 2 Long press to lock /unlock
D		1 Increase key 2 Auto mode state, press , to enter into temporary manual mode 3 Long press to check external sensor temperature (only used for the receiver with external sensor)

Time Setting

Power on state, press to set minute. Second press to set hour. Third press to set week. Press , to change value. Press again to confirm.

Holiday Mode Setting

Power on state, long press for 3-5 seconds to do holiday mode setting. Press or to change “OFF” to “ON”. Then press to switch days and temperature, press , to change value. Press again to confirm. If you want to close holiday mode, press menu







Programmable Mode Setting

6 times period setting: 5+2 days(factory default),6+1 days, 7 days

Long press “ ” 3-5 seconds to do Programmable Mode Setting . Short press “ ” to switch and confirm. Press “ ” and “ ” to adjust value. Power on state, long press “ ” 3-5 seconds to enter into first time period then set hour. press “ ” and “ ” to adjust hour, short press “ ” to confirm then set minutes, press “ ” and “ ” to adjust minutes, press “ ” to confirm then enter into temperature setting, press “ ” and “ ” to adjust value.

Please follow the steps of first time period to set second time period, thirdly time period. After finish setting , stand

for about 10 seconds ,it will save setting then exit.

					
Wake up	Out door	Back home	Out door	Back home	Sleep
6: 00	20°C	8: 00	15°C	11: 30	15°C
				13: 30	15°C
				17: 00	15°C
				22: 00	15°C

Advanced Setting

Power off state, long press for 3-5 seconds to do advanced setting. Short press “ ” to switch and confirm. Press “ ” and “ ” to adjust options.

After finish setting , stand for about 5 seconds ,it will save setting then exit .

NO	Description	Range	Default
A1	Temperature Calibration	-9-+9°C	0.5°C
A2	Switching Differential of Built in Sensor	0.5-2.5°C	1°C
A3	Switching Differential of External Sensor	1-9°C	2°C
A4	Children Lock	0:half lock 1:full lock	0
A5	Max temp of External Sensor	1. 35°C-70°C 2. When setting temp is lower than 35°C, screen displays – , cancel highest temp protection	—
A6	Min temp of External sensor (anti-freeze protection)	1. 1-10°C 2. When setting temp is higher than 10°C, screen display – , cancel anti freeze protection	5°C
A7	Max Temp Setting	1-10°C	5°C
A8	Min Temp Setting	20-70°C	35°C
A9	Descaling function	0:Close descaling function 1:Open descaling function Function works for 3 minutes every no-operating 100 hours	0
AA	Power off Memory	0:Stay last state 1: Electricity turn off 2: Electricity turn on	0
AB	Weekly Programmable Function	P1: 5+2 days P2: 6+1 days P3: 7 days	P1
AC	Factory defaults	Display A o, long press until show the whole screen	

Setting IP code

Power off state, long press for 3-5 seconds to do advanced setting. Short press “ ” to switch and confirm. Press “ ” and “ ” to adjust options. After finish setting , standing for 5 seconds ,it will save setting then exit .

Considering battery usage, RF data updates every 20 minutes. If shorten interval, pls use USB power and remove batteries. Follow B05, B06 operation.

NO	Setting Options	Data Setting Function	Factory Default
B1	IP code low setting	00-FF	00
B2	IP code high setting	01-FF	01
B3	IP matching code	Display"55" means IP match successfully.	00

		(When receiver is power-on, press thermostat successively)	
B4	Sensor state	N1:single built-in sensor N3 both built-in sensor and external sensor. (when receiver with external sensor, this option is automatically recognized and cannot be changed)	N1
B05	Minute interval of RF transmission	1: 1-30 minutes 2:0 B06	20 min.
B06	Second interval of RF transmission	3-30 seconds	30 s

Receiver Indicator Light


Power-on light : green light

Load light/fault light : red light

- When no fault: normally on when load output, light off when no load output
- When fault: blinking
 - IP fault (IP:FFFF) : Light blinks 2 times every 2s
 - No wifi signal within 1h: Light blinks 3 times every 2s
 - External sensor fault: Light blinks 4 times every 2s

Sensor fault: Display "E1" or "E2" . Thermostat stop heating until the fault is eliminated. RF matching light: orange light (B3 IP matching code) When receiver is power-on, orange light is normally on within 10s. And light off when finish matching. When receiver is power-off, orange light is blinking within 10s. Wifi matching light: blue light When power on state, long press receiver button"push" to match wifi. Normally on is EZ mode. Blinking is AP mode. Successive blinking is matching.


Wiring Diagram

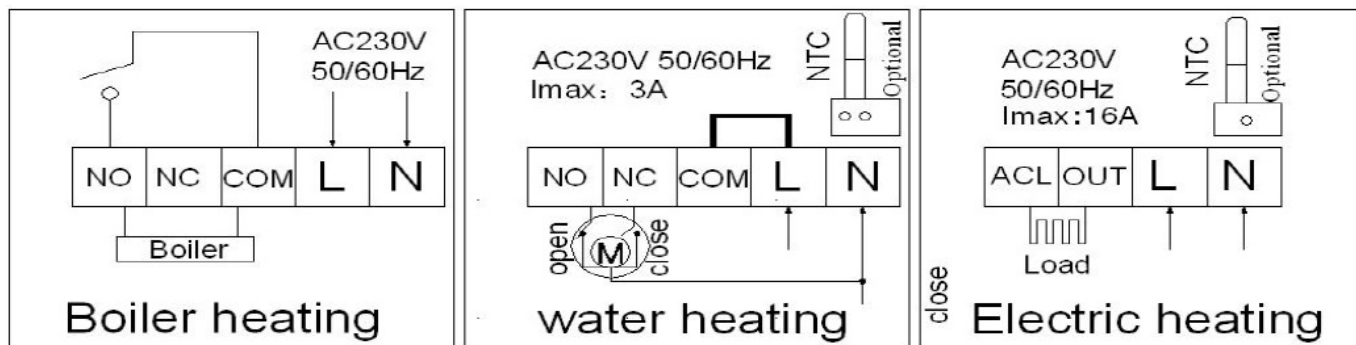

RISK OF ELECTRICAL SHOCK

Please arrange a professional technician to install the product according to drawings and instructions. Disconnect power supply before making any connection. Contact with components carrying hazardous voltage can cause electrical shock.

Documents / Resources

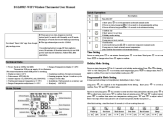	<p>Thermostats BGL09RF-WIFI Wireless Thermostat [pdf] User Manual BGL09RF, WIFI Wireless Thermostat</p>
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------