

THINK GIZMOS TG813 Interactive Toy Rabbit



# THINK GIZMOS TG813 Interactive Toy Rabbit User Manual

[Home](#) » [THINK GIZMOS](#) » THINK GIZMOS TG813 Interactive Toy Rabbit User Manual 

## Contents

- 1 THINK GIZMOS TG813 Interactive Toy Rabbit
- 2 Product Information
- 3 Product Usage Instructions
- 4 IMPORTANT INFORMATION
  - 4.1 Battery Installation
- 5 PRODUCT DETAILS
  - 5.1 Usage Instructions
- 6 WARRANTY
- 7 Documents / Resources
  - 7.1 References
- 8 Related Posts



THINK GIZMOS TG813 Interactive Toy Rabbit



## Product Information

### Specifications

- **Product:** TG813 Interactive Toy Rabbit
- **Age Recommendation:** 18 months and above
- **Battery Requirement:** 2x AA batteries (supplied)

### Product Usage Instructions

#### Safety Information:

- Not for children under 18 months. Must be used under adult supervision.
- Remove any packaging ties, bags, and screws before giving the toy to your child.

#### Battery Installation:

1. Use a small crosshead screwdriver to open the battery compartment.
2. Insert 2x AA batteries observing correct polarity.
3. Secure the battery cover with the screw.
4. Remove batteries if the toy will not be used for an extended period.

#### Usage Instructions:

1. Insert batteries and switch on the toy using the on/off switch.

2. Place the Carrot in front of the rabbit's nose to trigger eating noises.

## FAQ

- **Q: Can I wash the Interactive Toy Rabbit?**

A: No, do not wash the toy as per label information.

- **Q: How do I contact customer support for this product?**

A: For any issues or questions, contact us via email at [help@thinkgizmos.com](mailto:help@thinkgizmos.com) for quick resolution.

- **Q: What age group is this toy suitable for?**

A: The toy is suitable for ages 18 months and above.

Not for children under 18 Months. To be used under the direct supervision of an adult. Any packaging ties, bags, and screws are not part of the product. For safety please remove and discard any packaging ties, bags, and screws before giving this toy to your child.

## SUITABLE FOR AGES 18 MONTHS+

- PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY AND KEEP THIS INSTRUCTION BOOKLET FOR FUTURE REFERENCE.
- DUE TO CONTINUAL IMPROVEMENTS, ACTUAL PRODUCT MAY BE DIFFERENT FROM ILLUSTRATIONS
- If you have any issues with your product or have any questions, please contact us via email: [help@thinkgizmos.com](mailto:help@thinkgizmos.com).
- This is the quickest way to resolve any problems. You will be surprised how fast we will get back to you by email with a resolution.
- All our products are covered by our manufacturer's warranty, details can be found below.
- For more of our brilliant products, search Amazon for "Think Gizmos".
- Think Gizmos "Small enough to care. Big enough to deliver".

## IMPORTANT INFORMATION

### Safety Information

Thank you for purchasing the Interactive Toy Rabbit. Please read through this instruction manual before use as it contains all the information you need about how to correctly enjoy this product.

### CAUTION

### ELECTRONIC PRODUCT

Do not leave children aged 6 or below unattended with this toy. This product should be used by this user manual in a safe way to avoid electric shock.

### ADULT SUPERVISION REQUIRED

- **WARNING!** Do not try to modify this product in any way as this may invalidate your warranty.
- **WARNING!** Contains small parts, child supervision is required at all times.

### Label Information

-  DO NOT WASH
-  DO NOT BLEACH
-  DO NOT TUMBLE DRY
-  DO NOT IRON
-  DO NOT DRY CLEAN

### Battery Safety

1. Use only brand-new batteries of the correct size and power.
2. Do not mix old and new batteries, different types of batteries (zinc, alkaline or rechargeable).
3. If using rechargeable batteries, ensure they are all at the same capacity.
4. Do not try and charge non-rechargeable batteries.
5. Rechargeable batteries should be charged by an Adult or under Adult supervision. Stop charging immediately if you notice any abnormal behavior.
6. Do not throw batteries in the fire.
7. Replace all batteries of the same type/brand at the same time.
8. The supply terminals are not to be short-circuited.
9. Remove empty batteries from the product.
10. Batteries should be changed by an Adult.
11. If the toy is going to be inactive for a long time, please remove all batteries.
12. For your safety, please operate according to these instructions.

### Battery Installation



### Interactive Toy Rabbit Battery Information:

- A small crosshead screwdriver (Phillips) is required to remove the battery compartment on the Interactive Toy Rabbit. Insert 2x AA batteries (supplied) into the battery compartment observing the correct polarity as indicated.
- Re-fit the battery cover and secure it with the screw.

(Warning – Remove the batteries if the Toy is not going to be used for a long time.)

## PRODUCT DETAILS

### Usage Instructions

- Once the batteries have been inserted switch the Interactive Toy Rabbit on with the on/off switch.
- Place the Carrot in front of the rabbit's nose and the rabbit will make eating noises.



- Press the button on the left side of the rabbit and the rabbit will make noises and start to walk, press the button again to stop the rabbit.



- Press the touchpad on the right side of the rabbit and the rabbit will make cute noises.



- Once switched on the rabbit will make noises occasionally, to disable this switch the on/off switch to off.

## WARRANTY

### Warranty Information

- **What is Covered:**

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

- **How Long Coverage Lasts:**

This warranty runs for 2 Years from the date your Interactive Toy Rabbit is delivered.

- **What is not covered:**

Any problem that is caused by abuse, misuse, or an act of God (such as a flood) are not covered.

- **What We Will Do:**

If the Product proves defective during the warranty period, we will provide you with the instructions for the return, and we will take one of the following actions: (i) replace the Product with a product that is the same or equivalent to the Product you purchased; (ii) repair the Product; or (iii) refund to you the whole of or part of the purchase price of the Product.

- **How To Get Service:**


To obtain instructions on how to obtain service under this warranty, contact our customer service by phone or email. You will find the contact details of our customer service below. Customer service may ask you questions to determine your eligibility under this warranty, and if you are eligible you'll be given instructions for returning the defective Product. If we send you a replacement or repair your Product, we will pay the cost of delivering the replacement or repaired Product to you.

Do not return the item to the original place of purchase, please contact Think Gizmos directly.

- Think Gizmos, Unit 19, Lawson Hunt Industrial Park, Broadbridge Heath, West Sussex, RH12 3JR.
- **Tel.:** +44/(0)203 384 8304
- [help@thinkgizmos.com](mailto:help@thinkgizmos.com).
- [www.thinkgizmos.com](http://www.thinkgizmos.com).

---

## Documents / Resources

	<p><a href="#">THINK GIZMOS TG813 Interactive Toy Rabbit</a> [pdf] User Manual</p> <p>TG813 Interactive Toy Rabbit, TG813, Interactive Toy Rabbit, Toy Rabbit, Rabbit</p>
---	---

## References

- [TG Quality Fun Gadgets & Gizmos](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.