

**THOMSON**  
THOMSON  
CT600,CT610  
Alarm Clock  
with Weather  
Display



# THOMSON CT600,CT610 Alarm Clock with Weather Display Instruction Manual

[Home](#) » [THOMSON](#) » THOMSON CT600,CT610 Alarm Clock with Weather Display Instruction Manual 

## Contents

- [1 THOMSON CT600,CT610 Alarm Clock with Weather Display](#)
- [2 Product Usage Instructions](#)
- [3 Safety warning and notice](#)
- [4 Specifications](#)
- [5 Description of parts](#)
- [6 Controls](#)
- [7 Initial operation](#)
- [8 Battery warning](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

**THOMSON**

**THOMSON CT600,CT610 Alarm Clock with Weather Display**



### Specifications:

- Model: CT600 / CT610
- Type: Alarm clock with weather display
- Language: English, French
- Age Recommendation: 8 years and above

### Product Usage Instructions

#### Getting started

Please read the user manual carefully before operating the device. Retain it for future reference.

- Take the appliance out of the box.
- Remove all the packaging from the product.
- Place the packaging inside the box or dispose of it safely in compliance with the waste sorting instructions shown on the outside.

### Safety warning and notice

Please read and understand all the instructions before using this device. The warranty will not apply if damage is caused by failure to follow the instructions.





1. Never remove the device casing.
2. Never place this appliance on top of other electrical equipment.
3. Protect the power cable, so as to avoid it being walked over or trapped somewhere, particularly by the plugs, power sockets, and the device's power connection. Make sure that the power rating corresponds to the voltage shown on the rating plate at the rear of the appliance. Always pull the plug from the socket when disconnecting from the mains. Never pull on the cable. Ensure you have completed all the other connections before connecting the mains plug.
4. Only use attachments/accessories that are recommended by the manufacturer.
5. Entrust all device repairs to qualified repairers. Repair is needed when the appliance has been damaged in any

fashion, and in particular:

- If the power cord is damaged;
  - In the event of a liquid spill or objects being inserted into the appliance;
  - If the appliance is exposed to rain or dampness;
  - If the appliance does not operate normally;
  - Or if the device has been dropped or impacted.
6. The series panel is located on the bottom of the appliance.
  7. Do not block any ventilation openings.
  8. Make sure you have enough space for ventilation. Place the product on a stable surface.
  9. This device must be used in a moderate climate, away from direct sunlight, naked flames or sources of heat, heaters, cookers or any other devices (including amplifiers) that generate heat. Do not install or use near a heat source.
  10. The batteries (battery pack or batteries installed) must not be exposed to excessive heat, such as direct sunlight, fire, etc.
  11. Always unplug the appliance before cleaning it. Never lubricate any part of this apparatus. Clean it using a soft cloth. Do not use abrasive or aggressive cleaning products.
  12. Ensure that you always have easy access to the power cable, plug or adapter to disconnect this device from the mains if necessary.
  13. Do not use this device near water. It must not be dripped on or splashed. Do not use this device in a wet or humid environment.
  14. Disconnect this appliance in the event of a storm, or if you intend not to use it for a long period of time.
  15. This appliance can be used by children aged 8 and over, and by persons with a physical or sensory disability, learning difficulties or a lack of experience and knowledge, provided they are supervised or have received instructions on the safe use of the appliance, and they understand the risks involved. Children must not play with the appliance or power cord (risk of strangulation). Children must not clean or maintain the device without supervision.
  16. This device must only be supplied with very low safety voltage as indicated on the device.
  17. The battery should be removed from the device before disposal. The device must be disconnected from the power supply when removing the battery.
  18. When in operation, the appliance must be at a minimum distance of 20 cm from the human body.
  19. Risk of suffocation: Small parts are not intended for children under 3 years old or for people with a tendency to put inedible objects in their mouths.



RISK OF ELECTRIC SHOCK  
DO NOT OPEN

|                     |  |
|---------------------|--|
| Class II material   |  |
| Direct current      |  |
| Alternating current |  |
| For indoor use only |  |

### What's in the box

#### Check and identify the contents of the packaging:

 
- Weather Station
- USB-C power cable
- User instructions

 
 
### Specifications

- DCF Radio-controlled clock feature
- Radio control feature can be switched ON and OFF
- Time displayed in 12/24-hour format
- Perpetual Calendar Up to Year 2099
- Day of week displayed in 7 languages, selected by the user: English, German, Italian, French, Spanish, Dutch and Danish
- Dual Alarm clock can be set on weekdays/weekends and daily
- Snooze time setting (1 to 30 Minutes or OFF)
- Low battery indicator
- Indoor comfort indicator
- Weather forecasting and air pressure detection
- Ice alert
- Moon phases
- Window opening and closing prompt
- Remote sensor temperature alert range setting
- Change trend display
- Humidity: 20%RH ~ 95%RH
- Temperature:
  - Indoor temperature measurement range: -9.9 °C (14.2 °F) ~ 50 °C (122 °F)
  - Outdoor temperature measurement range: -40°C (-40°F) ~ 70°C (158°F)
  - Temperature displayed in °C or °F
- Maximum/minimum temperature and humidity values recorded
- Wireless Outdoor Sensor:

- 3 Channels available
- Transmission frequency: 433.92 MHz RF
- Transmission range: 60-meter in an open area
- Barometric pressure:
  - Measurement range: 850 — 1100 mB/hPa (25.10 — 32.48 inHg)
  - Pressure displayed in mB/hPa or inHg
- Power Supply:
  - Weather Station:
    - Battery: 2 x LR03 AAA (not included)
    - USB-C power cable (included)
  - Remote Sensor:
    - Battery: 2 x LR03 AAA (not included)

## Description of parts

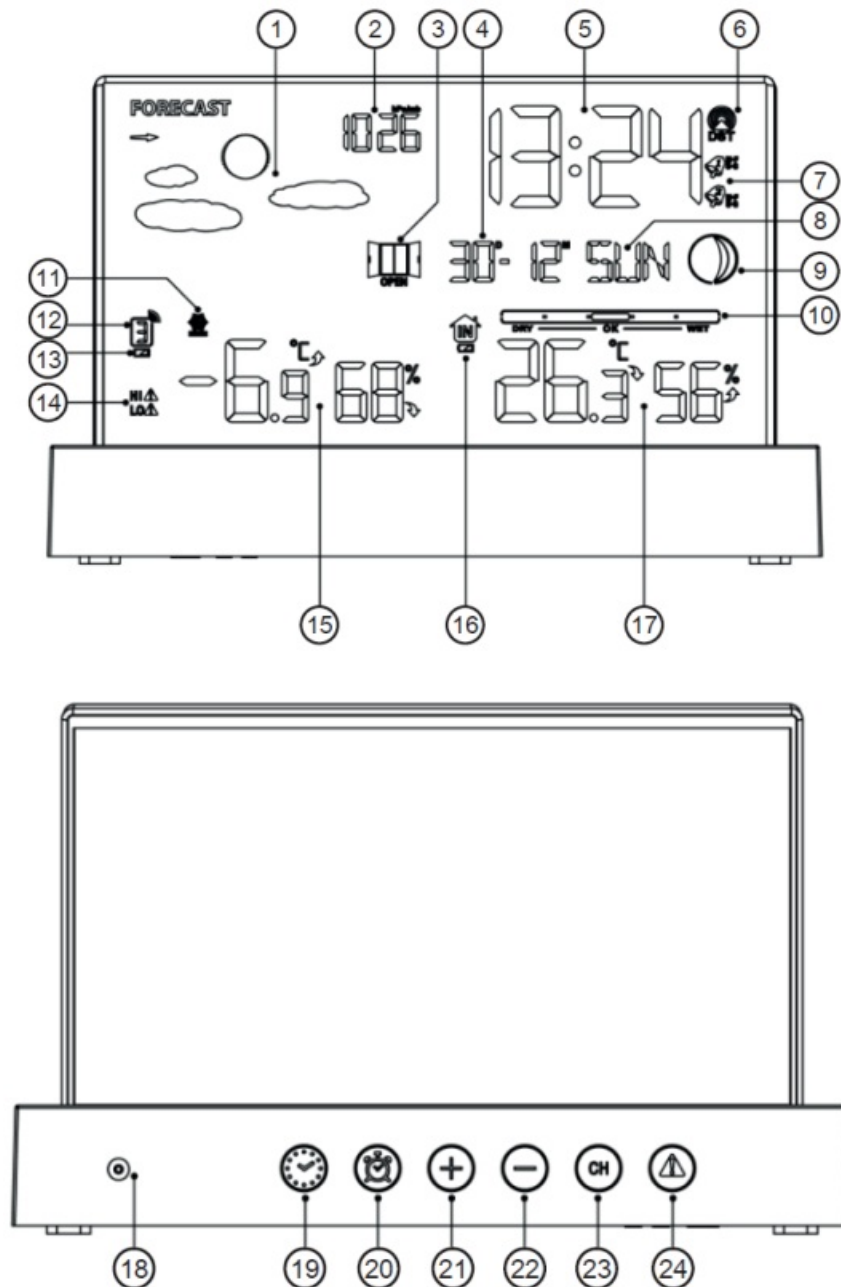

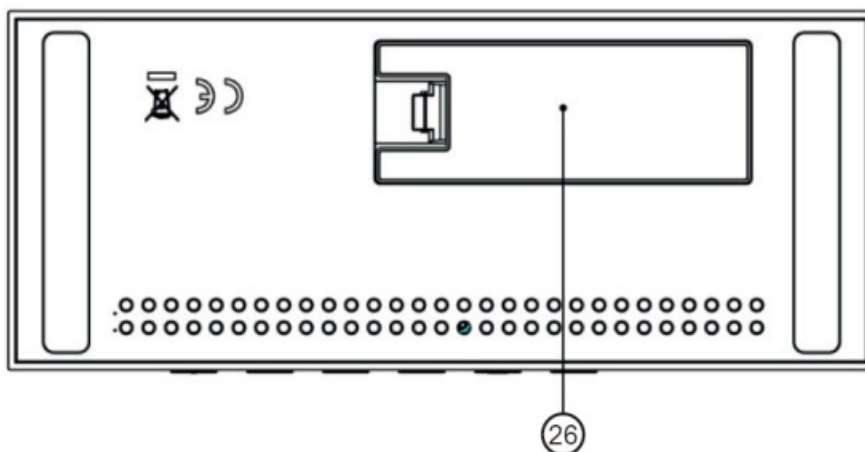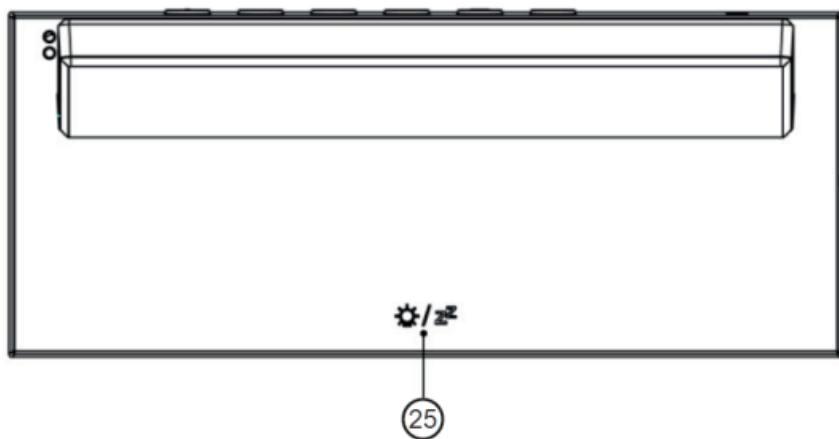


## Controls

The controls are located on the device for easy access and operation.

1. Weather forecast feature
2. Barometric pressure
3. Window opening and closing prompt
4. Date
5. Time
6. Radio signal reception
7. Alarm status indicator
8. Day of week
9. Moon phase
10. Indoor comfort indicator
11. Ice alert
12. Channel number
13. Remote sensor low battery indicator
14. Remote sensor temperature alert status symbol
15. Remote sensor temperature and humidity
16. Main unit low battery
17. Indoor temperature and humidity
18. USB-C port
19. General setting button

 - 20. Alarm setting button
- 21. +/-Memory button
- 22. -/Alarm ON or OFF button
- 23. Channel button
- 24. Alert setting button
- 25. Light and snooze button
- 26. Battery compartment cover

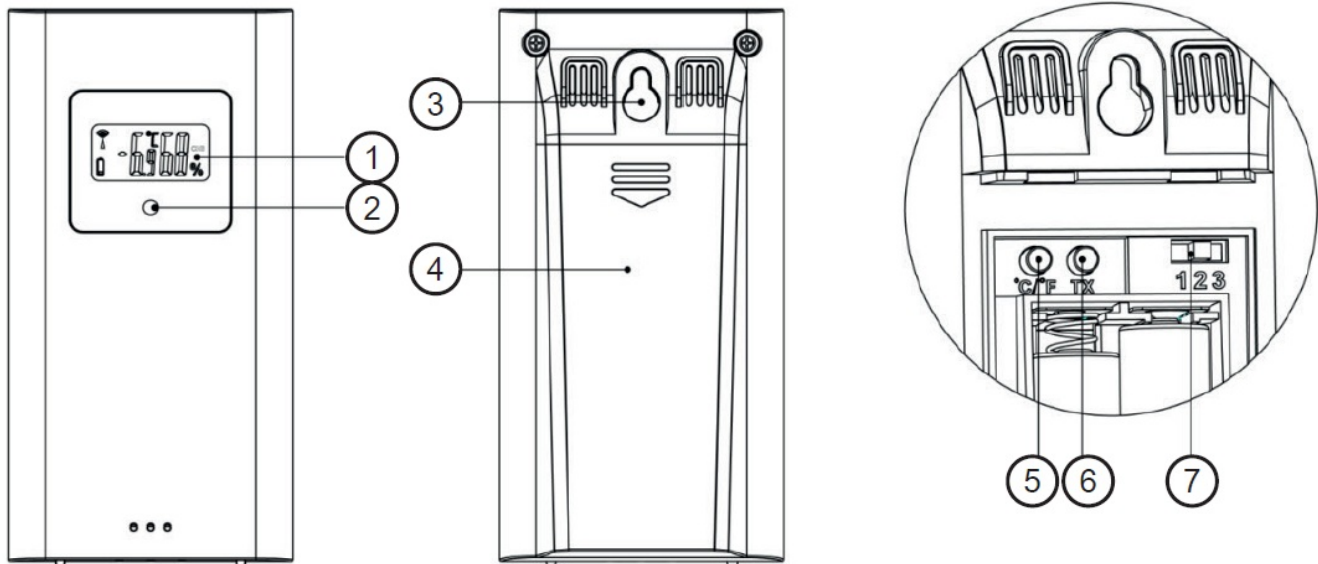

## Sensor

- 1. LCD
- 2. LED transmission indicator
- 3. Wall mounting hole
- 4. Battery compartment cover
- 5. Temperature unit display button
- 6. Manual pairing button
- 7. Channel switch

## Use


Please refer to the information on the outer packaging for electrical and safety information before installing or operating the appliance.

### Follow these steps for proper use of the alarm clock with weather display:

- 1. Read and understand all instructions before use.
- 2. Open the battery compartment of the sensor and press the button.
- 3. Place the station in an appropriate location for receiving radio signals.
- 4. Refer to the weather display symbols for accurate information.

## Initial operation

- 1. Open the main unit battery compartment cover.

2. Insert 2 x AAA batteries observing polarity [“+” and “-” marks].
3. When you insert the batteries, all icons on the LCD will light up for 3 seconds, you will hear a beep, and the indoor temperature & humidity will be detected.
4. The main unit will now start connecting to the outdoor remote sensor. This process will last for a maximum of 3 minutes and will be displayed by a flashing reception antenna symbol  in the upper right corner of the channel number.
5. Open the remote sensor battery compartment cover, press the channel switch button to select the appropriate channel number. Insert 2 x AAA batteries observing polarity [“+” and “-” marks]. Press the “ ” button to select the temperature unit you want and close the battery cover.
6. Once receiver has connected to the outdoor remote sensor, within 3 minutes it will enter the DCF Radio control time signal receiving mode (The backlight will switch off during RC reception).
7. The backlight will stay on after DCF reception is completed.


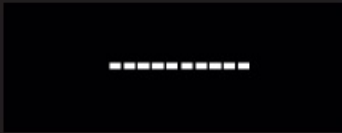






**USB Power**

Power can also be provided via the USB-C port at the rear. Simply connect the supplied USB cable to this port and connect to another USB power source such as a USB power adaptor.

**Weather forecast feature**

Warning: Please take the weather forecast from your local weather forecasting service into account as well as the forecast from your weather station. If there are discrepancies between the information from your device and from the local weather forecasting service, please take the advice of the latter as authoritative.

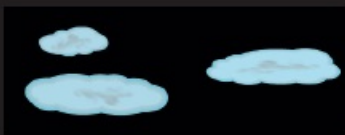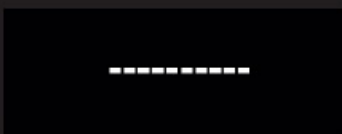- The weather forecast is calculated by evaluating fluctuations in the barometric pressure and may deviate from actual weather conditions.
- The weather station displays the following weather symbols:

|                 |   |   |
|-----------------|---|---|
| Sunny           |  |  |
| Slightly cloudy |  |  |
| Cloudy          |  |  |
| Rainy           |  |  |
| Snowy           |  |  |

**Moon phases**

The weather station automatically displays the current lunar phase.



|           |                 |               |                 |
|-----------|-----------------|---------------|-----------------|
|           |                 |               |                 |
| New moon  | Waxing crescent | First quarter | Waxing gibbous  |
|           |                 |               |                 |
| Full moon | Waning gibbous  | Third quarter | Waning crescent |

### Ice alert



The ice Alert symbol appears and flashes when the remote sensor temperature ranges between -1 .0 and 2.90C (30.2 to 37.30F).

### Outdoor temperature Alert

- Press to set the Outdoor temperature alert feature ON or OFF. This operation is only valid for the currently displayed channel. If you want to set other channels, press “CH” to switch to the channel display you want to set. When the symbol **HI** is displayed, it means the upper limit alert feature is ON. When the symbol **LO** is displayed, it means the lower limit alert feature is ON. When the symbols **HI** or **LO** disappear, it means the Outdoor temperature alert feature is OFF.
- Press and hold for 2 seconds, to enter the outdoor temperature upper limit or lower limit setting mode.  
The set item will flash. Press “+” or “-” to set the value. Press to confirm the item has been set and go to the next one. Press “CH” to set the value of other channels.
- When the outdoor temperature exceeds the limit set for the channel, the temperature and corresponding icon will flash. If the temperature decreases but still exceeds the set limit, there will be a beep reminder.

### Comfort level

Different levels of display are calculated according to the following formula:

|          |      |        |        |        |      |
|----------|------|--------|--------|--------|------|
|          |      |        |        |        |      |
| Humidity | <35% | 35~44% | 45~44% | 66~80% | >80% |

### Window opening and closing prompt

After complex calculation and comparison of indoor and outdoor absolute humidity, the system will use symbols to remind users whether they need to open or close windows.



- : It is recommended to open the window






- : It is recommended to close the window

### Trend display

- The current temperature/humidity/barometric pressure and the temperature/humidity/barometric pressure trend are shown in the LCD display.
- After successfully connecting with the remote sensor, the main unit can display the outdoor temperature/humidity and the change trend.

### Radio signal reception:

1. Press and hold “—” to manually enter the DCF radio control signal receiving feature. When an adapter is used for the power supply, the backlight will be automatically and temporarily turned off during reception. After reception, it will automatically return to the previous backlight brightness.
2. When it enters DCF signal receiving mode, the symbol  will be flashing. When a valid signal is detected, the symbol  will stop flashing and the symbol  will start flashing. After a few minutes, the receiving process will end.



: Received successfully






: The previous reception was successful, but the last reception failed

3. At 1:00/2:00/3:00 AM, the clock will automatically synchronize with the DCF signal to correct any deviations from the correct time. If synchronization is unsuccessful, the system will automatically attempt synchronization after one full hour has elapsed. This procedure is repeated automatically up to 5 times.
4. During RC reception, to stop searching radio signal, press “—” once.

### NOTES :


- We recommend the product be placed at a minimum distance of 2.5 meters (8.2 Feet) from any source of interference, such as televisions, computer monitors and switching power adapters.
- Radio reception is weaker in rooms with concrete walls (e.g.: in cellars) and in offices. In such extreme circumstances, place the system near a window.
- During the RC signal receiving mode, only the “+” and “—” buttons are functional, other buttons are disabled. If you want to carry out other features, please press “—” to exit the RC signal receiving mode.

### Manual time setting:

1. Press and hold  for 2 seconds, the “” symbol will start flashing. Press “+” and “—” to set the radio control feature ON or OFF.
2. Press  to confirm item setting and go to the next one. The sequence of item setting is as follows:

RCC ON/OFF DST ON/OFF(daylight saving time) Time zone 12/24HR HOUR MINUTE Format of DATE (D/M or M/D) YEAR MONTH DATE Language Temperature Unit (°C/°F) Pressure unit (hPa/mb or inHg) Current standard air pressure Current weather

3. Press and hold “+” or “-” for quick setting.

4. Press  to confirm the last item and complete settings, the device will return to the standard display.

5. When choosing the 12Hr format, if “PM” is displayed before the hours, this stands for post-meridiem.





6. Here are the weekday abbreviations in the seven languages:




|           | LANGUAGE       |               |               |                |                |              |               |
|-----------|----------------|---------------|---------------|----------------|----------------|--------------|---------------|
|           | ENGLISH<br>ENG | GERMAN<br>GER | FRENCH<br>FRE | SPANISH<br>SPA | ITALIAN<br>ITA | DUTCH<br>DUT | DANISH<br>DAN |
| MONDAY    | MON            | MON           | LUN           | LUN            | LUN            | MAA          | MAN           |
| TUESDAY   | TUE            | DIE           | MAR           | MAR            | MAR            | DIN          | TIR           |
| WEDNESDAY | WED            | MIT           | MER           | MIE            | MER            | WOE          | ONS           |
| THURSDAY  | THU            | DON           | JEU           | JUE            | GIO            | DON          | TOR           |
| FRIDAY    | FRI            | FRE           | VEN           | VIE            | VEN            | VRI          | FRE           |
| SATURDAY  | SAT            | SAM           | SAM           | SAB            | SAB            | ZAT          | LOT           |
| SUNDAY    | SUN            | SON           | DIM           | DOM            | DOM            | ZON          | ZON           |

#### NOTE :


- If there is no valid operation within 20 seconds, it will automatically return to normal time mode from the set mode.

#### Setting the daily alarms:

1. Press “-” to set Alarm1 and Alarm2 ON or OFF. The  symbol appears, meaning that ALARM1 is ON. When the  symbol appears, this means that ALARM2 is ON. If symbols  or  disappear, this means the corresponding ALARM is OFF.

2. Press . LCD displays Alarm1 time (for 5 seconds). Press  again when Alarm1 time is displayed, LCD displays Alarm2 time (for 5 seconds). Press  again when Alarm 2 time is displayed, to return to current time display.

3. When Alarm1 time is displayed, press and hold  for 2 seconds until Alarm1 time starts to flash. Press “+” or “-” to set the value.

4. Press  to confirm the item has been set and go to the next one. The sequence of item setting is as follows:  
Hour of Alarm1 → Minutes of Alarm1 → Repeat period of Alarm1 → Snooze time of Alarm1

5. When setting the repeat period, select as follows:

**M-F:** From Monday to Friday

**S-S:** From Saturday to Sunday

**M-F**

**S-S:** From Monday to Sunday

6. The snooze time can be set from 1 to 30 minutes or OFF, if "OFF" is selected, this means the snooze function is turned off.
7. The Alarm2 time can be set in the same way

#### **NOTES :**

- If there is no valid operation within 20 seconds, it will automatically return to normal time mode from the alarm time set mode.
- When adjusting the value, press and hold "+" or "-" for quick setting
- The Alarm will ring for 2 minutes if you do not deactivate it by pressing any button.



#### **Turning OFF the alarm**

- When it's ringing, press any button except the "SNOOZE" button to turn off the Alarm.
- When it's ringing, press and hold the "SNOOZE" button for 2 seconds to stop the Alarm.

#### **Snooze feature**

When it's ringing, touch the "SNOOZE" button once. A sound indicates snooze mode. When the set snooze time has elapsed, it will ring again.


#### **RF Transmission Procedure**

1. The main unit automatically starts receiving transmission from remote sensor for temperature & humidity after batteries have been inserted.
2. The remote sensor will automatically transmit temperature and humidity data to the main unit after batteries have been inserted.
3. If the main unit failed to receive transmission from remote sensor ("-. ." and "-" display on the LCD), press and hold "CH" for 2 seconds.  icon will flash, the main unit will start rescanning the channel launch signal.
4. The main unit can receive remote signals from up to 3 channels. Press "CH" to switch and display data of different channels. When the symbol  appears, the data of different channels will be displayed automatically every 5 seconds.

#### **Recording of Maximum/Minimum numerical values**

1. When the temperature and humidity are shown in the LCD, the main unit starts recording maximum and minimum temperature/humidity values.
2. Press "+" and the LCD will display maximum temperature/ humidity value. When the maximum value is displayed, press "+" again to display the minimum temperature /humidity value.
3. At the same time, "MAX" or "MIN" will be displayed on the LCD.
4. The maximum/minimum values will be reset if you press and hold "+" for 3 seconds.
5. The recorded values of the day will be automatically cleared at 0:00 every night.

#### **Background lighting**

- When the USB-C cable is used for power supply, press  to adjust the backlight brightness.
- After the backlight is dimmed, press **“SNOOZE/LIGHT”** once to switch to the brightest backlight for 15 seconds.
- When the product is powered only by battery (without cable), press **“SNOOZE/LIGHT”** once to turn on the backlight for 15 seconds.

## Battery warning

This product contains one or more batteries.

- Use batteries correctly to prevent any injury or fire caused by a leak, overheating, explosion, erosion or other damage.
- Keep new and used batteries out of the reach of children or any vulnerable person. Stop using the device if the battery compartment does not close properly.
- If the liquid from an alkaline battery comes into contact with skin or eyes, rinse immediately with fresh water and consult a physician.
- If an alkaline battery leaks, clean the liquid with a cloth and replace the battery with a new one.
- Do not swallow the battery/ies. If swallowed, a battery can cause severe internal burns in 2 hours and can cause death. If batteries are swallowed, contact a poison centre immediately and consult a physician.
- Use AA Ni-MH, alkaline or lithium batteries.
- Do not charge these batteries. Charging non-rechargeable batteries generates gas or heat emissions that can cause explosions or fires.
- Do not use different types of batteries or a mixture of new and old batteries.
- Insert the batteries according to the correct polarity (+ and -).
- Do not allow the same battery poles to be in contact.
- Remove spent batteries quickly. There is a risk of the battery exploding if it is not replaced or if the device is unused for a long period of time.
- Replace the battery with an identical or equivalent model.
- The batteries (or battery pack) must not be exposed to excessive heat, such as sunlight, fire, etc.
- Do not heat batteries or dispose of them in a fire or in water.
- Do not use metal pliers or metal objects such as the point of a pen or tweezers to remove batteries. Avoid deforming, crushing or piercing batteries.
- Do not disassemble the batteries.
- Cover the ends of the batteries with tape to prevent explosions and combustion when these are scrapped.
- Scrap batteries in an environmentally friendly way.
- Do not dispose of batteries in ordinary household waste.
- Be sure to comply with the local recycling regulations when scrapping batteries.

## BATTERY WARNING

**KEEP OUT OF REACH OF CHILDREN** Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

Risk of fire or explosion if the battery is replaced by an incorrect type. Disposing of a battery into fire or a hot oven, or mechanically crushing or cutting a battery can result in explosion; Leaving a battery in extremely high temperatures can result in explosion or the leakage of flammable liquid or gas; A battery subjected to extremely low air pressure may result

in explosion or the leakage of flammable liquid or gas. Maximum operating ambient temperature of the product is 50°C Please refer to the information on the outer packaging for electrical and safety information before installing or operating the appliance.

## Product Specifications

| Type                         | Specifications                       | Type                       | Specifications   |
|------------------------------|--------------------------------------|----------------------------|------------------|
| LCD display dimension        | 131x78mm                             | Main unit dimension        | 165 x 95 x 45 mm |
| Radio controlled mode        | DCF77                                | EIRP                       | -1.11dBm         |
| RF transmitting frequency    | 433.92MHz                            | RF transmitting range      | 60 meters        |
| Weather Station power supply | 2 x AAA Battery or USB-C power cable | Remote Sensor power supply | 2 x AAA Battery  |

In an environment with electrostatic discharge, the device may switch off. The user must then recharge the battery and reset the device.

## Care for the environment



Your product has been designed and manufactured using high-quality materials and components that can be recycled and reused. Attention should be drawn to the environmental aspects of battery disposal.



When this crossed-out wheeled bin symbol is applied to a product, it means that the product is covered by European Directive 2002/96/EC. Please find out about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products in your household waste. By ensuring this product is disposed of correctly, you are also helping to prevent potentially negative consequences for the environment and human health.

## Additional information

- The word Bluetooth®, the mark and logo are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Bigben Interactive is under licence. All other brands and trade names are the property of their respective owners.
- THOMSON is a trademark of Talisman Brands, Inc. used under licence by Bigben Interactive.
- This product is manufactured and sold under the responsibility of Bigben Interactive.
- THOMSON and the THOMSON logo are trademarks operated under licence by Bigben Interactive – For more information: [www.thomson-brand.com](http://www.thomson-brand.com).
- All other products, services, corporate names, trademarks, trade names, product names and logos referenced herein are the property of their respective owners.

## Declaration of conformity

Bigben Interactive hereby declares that the CT600/CT610 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.bigben->

## Warranty

This product is guaranteed by Bigben for a period of 2 years from the date of purchase, except in countries of the European Economic Area, which offer a longer warranty period. We recommend that you keep your receipt for any claims. The warranty covers breakdowns due to defective material, a missing element or manufacturing defect. In this case, contact our technical support. For any problem with a defective product, contact your point of purchase with your receipt. The warranty does not cover problems of improper use.

## Support

<http://www.bigben-interactive.co.uk/support>

[support@bigben.fr](mailto:support@bigben.fr)

Made in China

Manufactured by BIGBEN INTERACTIVE SA 396

Rue de la Voyette

CRT2 – FRETIN

CS 90414

59814 LESQUIN Cedex – France

[www.bigben.eu](http://www.bigben.eu)

## FAQ


- **Q: Can children use this alarm clock?**

A: Yes, children aged 8 and above can use this appliance under adult supervision or after receiving instructions on safe usage.







- **Q: How should I clean the device?**

A: Clean the device using a soft cloth. Avoid abrasive or aggressive cleaning products.

## Documents / Resources

|   |  |
|---|--|
|  | <p><b><a href="#">THOMSON CT600,CT610 Alarm Clock with Weather Display</a></b> [pdf] Instruction Manual<br/>CT600, CT610, CT600 CT610 Alarm Clock with Weather Display, CT600 CT610, Alarm Clock with Weather Display, Clock with Weather Display, Weather Display</p> |
|---|--|

## References

-  [BestShop | Best Price, Smart Shopping](#)
-  [Technical Support Center | Bigben Interactive | Bigben | Audio | Thomson | Bigben Party | Teknofun | Kids Audio | Lumin'US](#)
-  [Accueil | Bigben - Le Design Sonore pour tous | Audio | Thomson | Bigben Party | Bigben kids | Lumin'US | Colorlight | Metronic](#)
-  [Information sur la licence](#)
-  [New | Bigben Interactive | Bigben | Audio | Thomson | Bigben Party | Teknofun | Kids Audio | Lumin'US](#)
-  [Technical Support Center | Bigben Interactive | Bigben | Audio | Thomson | Bigben Party | Teknofun | Kids Audio | Lumin'US](#)

- [© Support technique | Bigben - Le Design Sonore pour tous | Audio | Thomson | Bigben Party | Bigben kids | Lumin'US | Colorlight | Metronic](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.