



THOMSON TT350 Completely Automated Record Player Instruction Manual

[Home](#) » [THOMSON](#) » THOMSON TT350 Completely Automated Record Player Instruction Manual 

THOMSON TT350 Completely Automated Record Player Instruction Manual



OPERATING INSTRUCTIONS

BEFORE USING THIS DEVICE, PLEASE CAREFULLY READ THESE INSTRUCTIONS FOR USE, AND KEEP THEM IN A SAFE PLACE FOR FUTURE CONSULTATION.

Contents


- 1 Getting started
- 2 Safety warning and notice
- 3 What is in the box
- 4 Precautions for use
- 5 Description of parts
- 6 Features and functions
- 7 Warning
- 8 Record player characteristics:
- 9 Additional information
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

Getting started

- Take the device out of the box
- Remove all the packaging from the product.
- Place the packaging inside the box and either keep or dispose of properly in compliance with the waste sorting instructions shown on the product packaging.

Safety warning and notice


You must read and understand all the instructions before using this device. The warranty will not apply if damage is caused by failure to follow the instructions.


1. Never remove the device casing.
2. Never place this device on other electrical equipment.
-  3. Protect the power cord from being walked on or pinched, particularly at the plugs, sockets, and the point where it exits the device. Make sure that the power voltage corresponds to the voltage shown on the rating plate at the rear of the device. Always pull the plug from the socket when disconnecting from the mains. Never pull on the cord. Ensure you have completed all the other connections before connecting the plug.
4. Only use attachments/accessories that are recommended by the manufacturer.
5. Entrust all device repairs to qualified repairers. A repair is needed when the device has been damaged in any fashion, and in particular:
 - if the power cord is damaged;
 - in the event of a liquid spill or objects being inserted into the device;
 - if the device is exposed to rain or humidity;
 - if the device does not operate normally;
 - or if the device has been dropped or impacted.
6. The series panel is located on the bottom of the device.
7. Never block the air vents.
8. Ensure you have sufficient stable space around the device for ventilation.
9. This device must be used in a moderate climate, away from direct sunlight, naked flames or heat, heating devices, cookers or any other device (including amplifiers) that generates heat. Do not install near a heat





source.

10. The batteries (battery pack or inserted batteries) must not be exposed to excessive heat, such as sunshine, fire, etc.
11. Always unplug the device before cleaning it. Never lubricate any part of this device. Clean it using a soft cloth. Do not use abrasives or aggressive cleaning products. Cleaning and user maintenance must not be carried out by children without supervision.
12. Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this device from the mains if necessary.
13. Do not use this device near a water point. It must not be dripped on or splashed. Do not use this device in a damp or wet environment.
14. Disconnect this device in the event of a storm or if you are not going to use it for a long period of time.
15. This device can be used by children aged 8 and over, and by persons with a physical or sensory disability, learning difficulties or a lack of experience and knowledge, provided they are supervised or have received instructions on the safe use of the device, and they understand the risks involved. Children must not play with the device or cord (risk of strangulation).
16. This device must only be supplied with very low safety voltage corresponding to the marking on the device.
17. The battery should be removed from the device before disposal. The device must be disconnected from the power supply when removing the battery.
18. The product must be at a minimal distance of 20 cm from human body when working.
19. Risk of suffocation: Small parts are not intended for children under 3 years old or for people with a tendency to put inedible objects in their mouths.
20. This device is for household use only; do not use outdoors.
21. The mains adaptor acts as a disconnect. As such, the device's mains adaptor must remain free from obstruction OR be easily accessible when in use. To fully disconnect the power supply, the mains adaptor must unplugged from the mains socket.



 The lightning bolt symbol within an equilateral triangle alerts users to the presence of dangerous uninsulated electrical voltages inside the device that are strong enough to present a risk of electric shock.

 The exclamation mark within a triangle indicates the presence of important instructions for operation and maintenance (repair) in the documentation that accompanies the device.

Class II material	
Direct current	
Alternating current	
For indoor use only	

What is in the box


Check and identify the contents of your box:

- Main unit
- Platter mat
- 45 tr/min. adapter
- Dust cover for the main unit
- Double male RCA to double male RCA cable
- Double female RCA cable to 3.5 mm jack stereo connector
- External power adapter
- User guide


Precautions for use

IMPORTANT. DO NOT MOVE THE TONE ARM BY HAND. USE THE AUTOMATIC PLAY BUTTON CONTROL.

- Once play has started you are free to lift and move the tone arm by hand, but always use the stop control to cease play.
- Do not put anything on top of the record player cover. Objects placed on the cover may generate noises caused by the vibrations, or they may fall, notably when the record player is in use.
- Do not move or lift the product during use. Effectively, during use, the vinyl disc turns and you may damage the record, the needle, the headshell or the unit, or even cause a malfunction. Always remove the vinyl disc before moving this unit.
- You can adjust the speed of 33 or 45 rpm vinyls underneath the product.

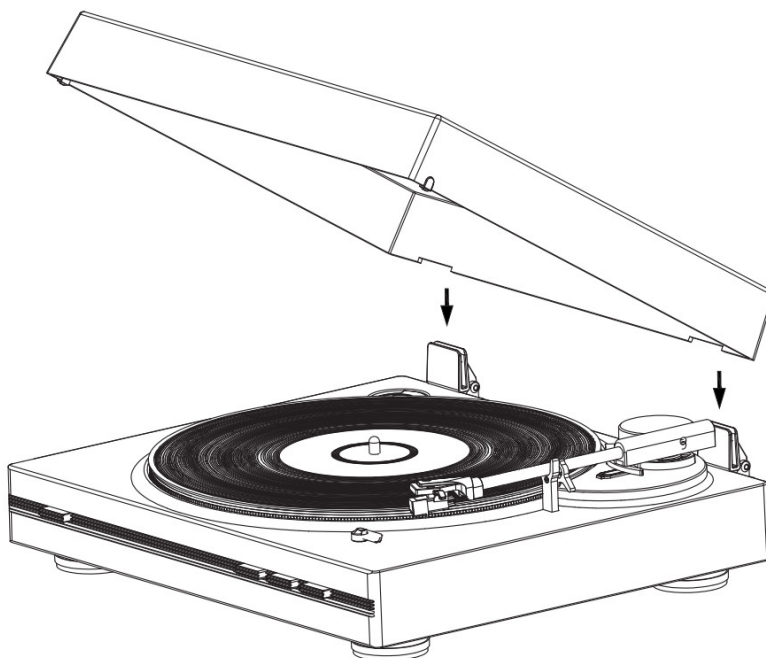

Description of parts

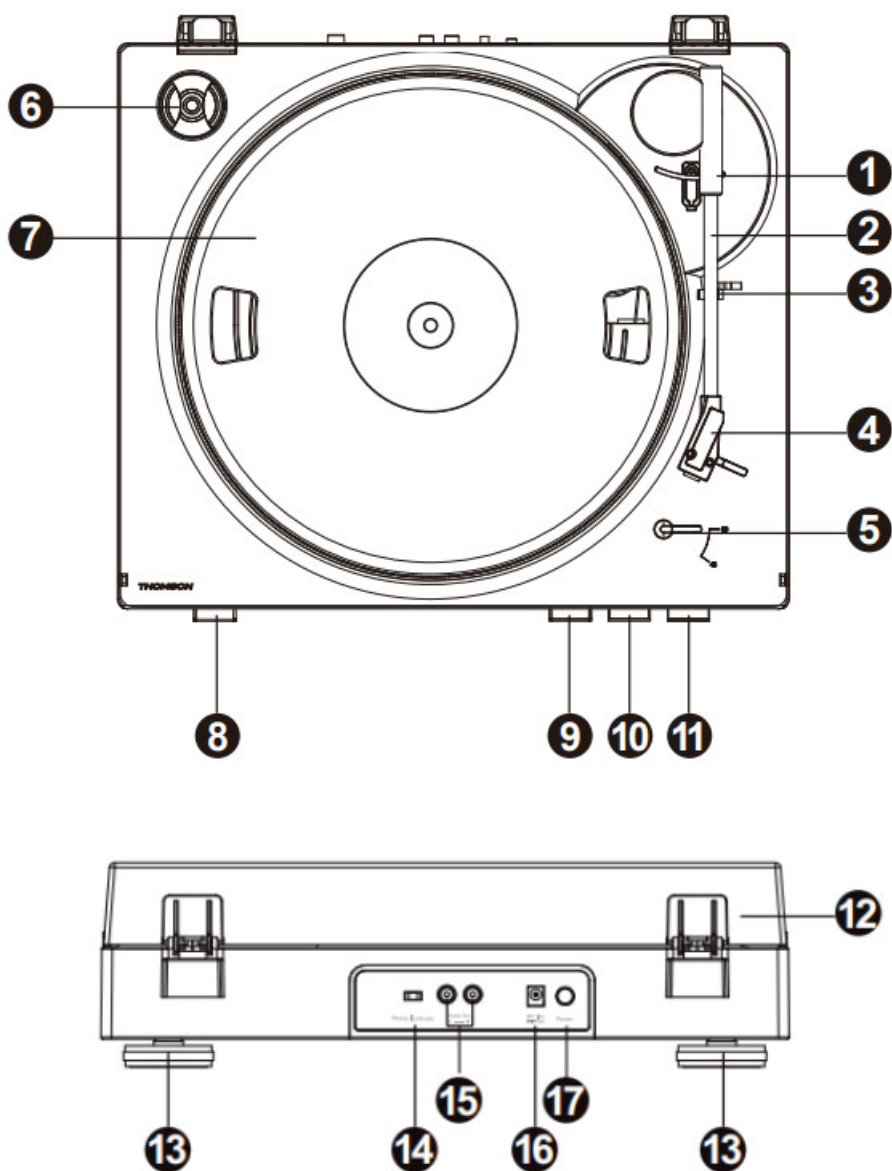

1	Arm base	10	■ Pause / Stop
2	Tone arm	11	Tone arm lever
3	Arm rest	12	Dust cover
4	Headshell	13	Record player feet
5	Automatic start-up for 33/45 turns	14	Phono/line selector
6	45 tr/min. adapter rest	15	RCA line output
7	Record player turntable	16	External power adapter inlet
8	33/45 turns speed selector	17	On/Off switch
9	▶ Play		

Features and functions

Drive belt:

The belt and the record player turntable (7) are installed in the factory, but the drive belt may loosen during transport. If this happens, follow the procedure below to install it yourself.

A. Remove the rubber mat from the record player turntable (7) and E-ring of the record player axis, then release

the turntable from the axis.

B. Place the drive belt on the inner edge of the record player turntable (7) and pass it through the hole.

C. Hold the belt between your fingers and place it on the motor pulley, as shown in the diagram.

D. Attach the E-ring onto the rubber mat on the record player turntable.



Warning

1. Make sure that the drive belt isn't misshapen or twisted.
2. Avoid getting oil on the belt. Oil splashed could make the belt slip.

Connection:

1. Place the dust cover (12) on top of the device by gently inserting the hinges into the dedicated spaces.
2. Insert the power cable into the appliance's socket, then connect the other end to the mains socket.
3. Turn on the record player using the On/Off button (17) on the unit.

Phono/line selector:

- The phono/line selector (14) is located on the rear panel.
- By selection "PHONO", the audio signal bypasses the internal pre-amplifier, without processing. The record player must therefore be connected to an external preamplifier in order to play the music.
- By selecting "LINE", the audio signal is processed by the internal pre-amplifier. The record player can be directly connected to active speakers to play the music.





Phono | Line out

Use:

- Place a disc onto the record player turntable (7) and select the desired speed (33/45) depending on the disc,

and also check that the 33 and 45 tr/min (8) vinyl disc selector is positioned according to the size of your vinyl disc.

- Remove the needle protector.
- Open the base of the tone arm to release the arm. Press the Play button (9) on the front panel. The record player moves directly into the desired position over the disc and starts playing the music, starting with the first track. If you want to play other tracks from the disc, press on the tone arm lever (11) . The tone arm will raise and stop playing the music. Manually position the tone arm in the desired position over your disc and press the tone arm lever(11)  again. The tone arm will slowly move down and start to play the music again.
- The tone arm returns to its base (1) automatically when the disc has finished.
- For optimal product performance and maintenance, unplug the record player when it is not in use.

Please note:

When you're playing a 45-turn disc, use the 45-turn adapter (6) included, located in the upperleft section of the turntable.

Line output:

- This system can be connected to an external device (e.g. amplifier or active speakers) via the RCA line output (15) which is located at the rear of the product.
- Use the double male RCA to double male RCA cable to connect to an external device.




- If necessary, use the Double female RCA to 3.5 mm jack stereo cable to connect the 3.5 mm jack connector of the external device.

How to adjust the Auto Start Position for 7 inch vinyl (17.7 cm) records

1. Turn the record selector switch to the 45 position.
2. Using a flat head screwdriver, turn screw clockwise in position 2 (as shown in illustration), if Auto Start Position drops the headshell too far in.
3. Using a flat head screwdriver, turn screw anti-clockwise in position 2 (as shown in illustration), if Auto Start Position drops the headshell too far out.

Note: adjust the speed selector based on size of your 7 inch vinyl record.

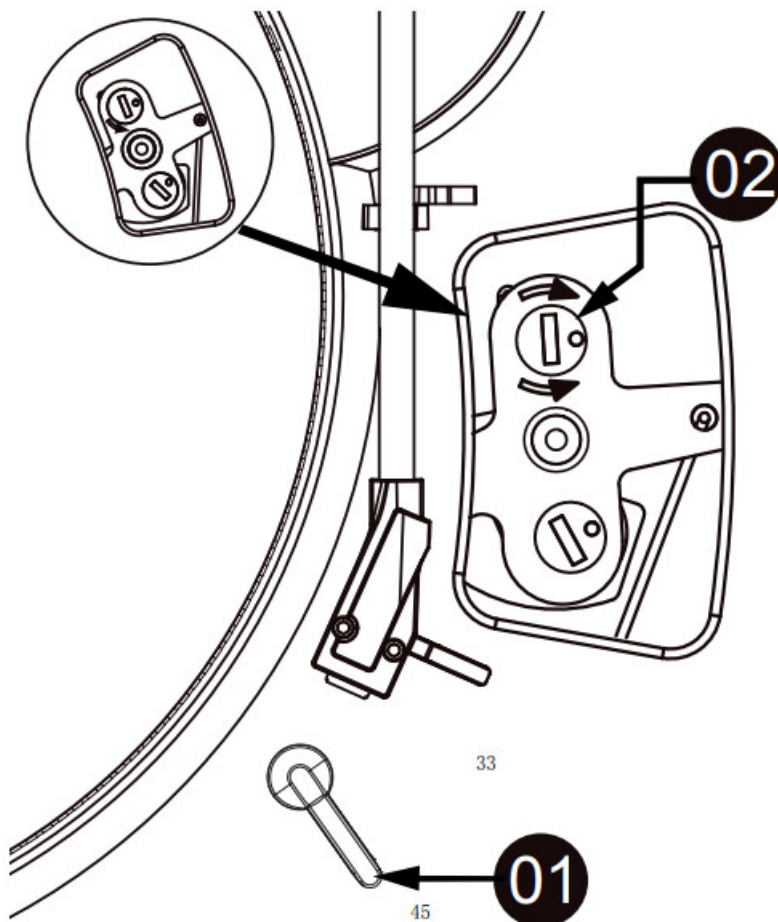

Record player characteristics:

Operating voltage	12 V mains/200 mA
Power consumption	2.4 W
Consumption on standby	0.3 W
Dimensions (LxWxH)	387 x 345 x 119 mm
Unit weight	2.65 kg
Drive method	By belt
Speeds	33- 1/ 3 and 45 tr/min.
S/B ratio	≥40 dB
Type of headshell	MM
Needle	Audio Technica AT3600L

External power adapter characteristics:

Name of manufacturer of the adapter or registered trademark	Ruiguan Technology (Dongguan) Co., Ltd.
Adapter model reference	HP05A-1200200-DE
Input voltage and frequency	100-240V c.a., 50/60 HZ
Voltage, current and output power	12 V 0.2 A 2.4 W
Average active efficacy	72.88%
Power consumption without load	0.1 W

Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Attention should be drawn to the environmental aspects of battery disposal.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Additional information

- THOMSON is a registered trademark of TECHNICOLOR SA or its subsidiaries, used under licence by Bigben Interactive.

Declaration of conformity

- Bigben Interactive hereby declares that the TT350 radio equipment and its derivatives are in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following web address: <https://www.bigben-interactive.co.uk/support/>

THOMSON

Made in China

Manufactured by BIGBEN INTERACTIVE SA

396, Rue de la Voyette


CRT2 – FRETIN

CS 90414

59814 LESQUIN Cedex – France

www.bigben.eu

Documents / Resources

 <p>THOMSON FR</p> <p>TT350 a son disque TOUTES-OPÉRE COMPLÈTEMENT AUTOMATISE</p> <p>MODE D'EMPLOI</p> <p><small>AVANT D'UTILISER CE DISQUE, LIRE ATTENTIVEMENT L'INSTRUCTION D'EMPLOI ET LES CARACTÉRISTIQUES TECHNIQUES DU DISQUE.</small></p>	<p>THOMSON TT350 Completely Automated Record Player [pdf] Instruction Manual TT350 Completely Automated Record Player, TT350, Completely Automated Record Player, Au- tomated Record Player, Record Player, Player</p>
---	--

References

- [Webdesign, Websites & TYPO3 » MEDIA ARTS » Bietigheim-Bissingen](#)
- [DESIGNATE | web development, website , website restyle, nieuwe website, webwinkel, e-commerce, internet site, website, webshop, shop, content management, eigen beheer, open source, CMS, WordPress, Zwaag, Blokker, Hoorn, West Friesland, Noord Holland](#)
- [Accueil | Bigben - Le Design Sonore pour tous | Audio | Lumin'US | Bigben Party | Bigben kids | Thomson | Colorlight](#)
- [Technical Support Center | Bigben EN | Bigben | Audio | Lumin'US | Bigben Party | Aromasound |Gaming-Zubehör | Games](#)