




[Home](#) » [THROWBACK](#) » **THROWBACK LASER-TUNE Wireless Speaker CD Player Instruction Manual** 

Contents [[hide](#)]

- [1 THROWBACK LASER-TUNE Wireless Speaker CD Player](#)
- [2 Product Usage Instructions](#)
- [3 SPECIFICATIONS](#)
- [4 TROUBLESHOOTING GUIDE](#)
- [5 FAQs](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

THROWBACK

THROWBACK LASER-TUNE Wireless Speaker CD Player



Product Usage Instructions

Safety Instructions



1. Read all operating instructions carefully before use.
2. Keep instructions for future reference.
3. Adhere to all warnings and instructions provided.
4. Avoid using near water sources.
5. Main plug should remain readily operable during intended use.
6. Avoid exposing battery to excessive heat.

SPECIFICATIONS

- Bluetooth version : 5.3V+BR+EDR
- RMS: 2W x 2
- Battery capacity: 2200 mAh
- Rated audio response range: 20Hz-20KHz
- Power supply mode: DC 5V
- Noise level: $\leq 25\text{dB}$
- Recommended capacity of U disk: $\leq 128\text{GB}$
- TF card maximum expansion capacity: 128GB

CONTENTS: 1 WIRELESS SPEAKER, 1 USB-C WIRE, 1 USER MANUAL, 1 ADAPTER

OVERVIEW

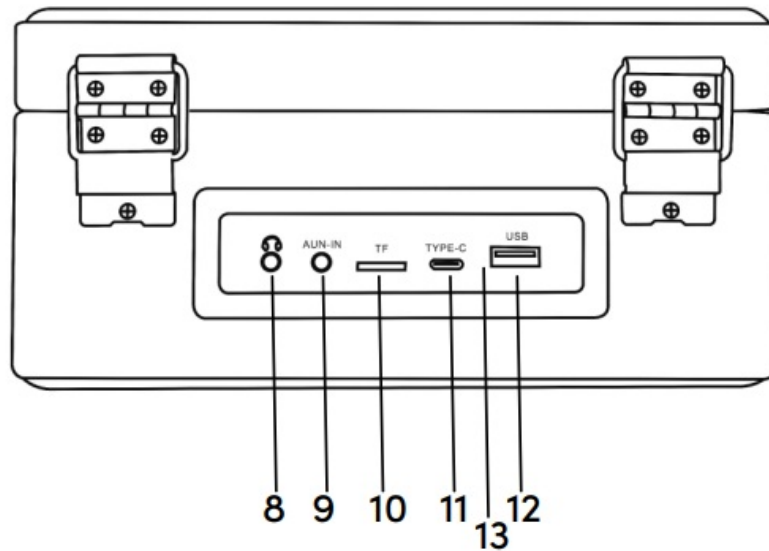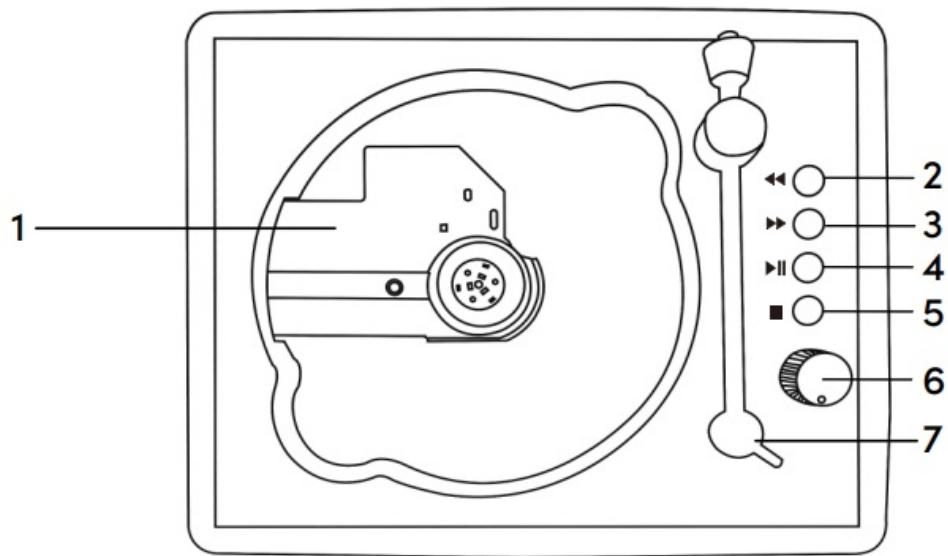

1. CD deck
2. Previous
3. Next
4. Play/Pause
5. Stop
6. Power/Volume knob
7. CD/BT switch
8. Headphone
9. AUX-IN
10. TF card slot
11. Charging port (TYPE-C)
12. USB (for playing back)

13. Charging light

PLAYING A CD

- Turn on the power knob and place a CD into the player. Turn on the CD/BT switch to left side, the LED will be on red. It will play this CD disk after 15 seconds.
- If it needs switch to Bluetooth mode, please turn this CD/BT switch to right. That will enter to Bluetooth mode and the blue LED will be on in the same time.

TF CARD PLAYBACK

- Turn on the power knob, and insert TF card. Wait 5 seconds to read and play. If the U disk and TF card inserted into this unit in the same time, it will play the first inserted one priority. **BLUETOOTH CONNECTION**
- Turn on the power knob, it will enter to Bluetooth mode in default and the LED flashes blue. Turn on the Bluetooth devices and search for Bluetooth pairing name "WONDERLIT". Tap to connect it and start playing music.

USB PLAYBACK

- Open the power knob, and insert USB. Wait 5 seconds to read and play.

HEADPHONE

- Open the power knob, Play music in any mode. Insert the head-phone with 3.5mm jack.

AUX IN

- Open the power knob, Play music in any mode. Insert the AUX-IN line

BATTERY OPERATION

- The product has a built-in battery with a voltage of 3.7V and a capacity of 2200 mAh. Connect the power adapter to charge the battery when the battery is low. Use the power adapter of the TPYP-C interface of the 5V1A provided with the product to

charge. At the beginning of charging, the interface will show a red light, and when the battery is fully charged, the indicator will change to green.

- **Caution:** If the power adapter is not used properly, there is a risk of explosion. Use only the power adapter that comes with the product. When the machine is not used for a long time, turn the power switch to turn off the machine, and store it in a proper position to avoid direct sunlight.

CONNECTING DC POWER

- Connect the small end of DC cord to the socket at the back of the main unit and insert the plug of DC cord into standard DC wall outlet.
- **Caution:** The unit is designed to operate from mains supply of DC 5V 1A. If the plug of DC cord does not fit properly, try to turn it over and try again. Do not force it. When the unit is intended for being unused for a long period of the time. Please turn the switch knob to turn off the unit and unplug the power cord from the DC wall outlet.

CARE AND MAINTENANCE

Clean your unit with a damp (never wet) cloth. Solvent or deter-gent should never be used. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors. If drop-outs or interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.

TROUBLESHOOTING GUIDE

Symptom	Possible Cause	Solution
CD player will not play	Unit not in CD function mode. CD is installed incorrectly. If the CD is self-compiled, the media used may not be compatible with the player.	Select CD function mode. Insert CD with label side up. Use better quality blank media and retest.

CD skips while playing	Disc is dirty or scratched.	Wipe CD with clean cloth or use another disc.
Intermittent sound from CD Player	Dirty or defective disc. Dirty pickup lens. Player is subject to excessive shock or vibration.	Clean or replace the defective disc. Use a CD-lens cleaning disc to clean the lens. Relocate the player away from shock or vibration

SAFETY INSTRUCTIONS



DANGER:

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

SURGE PROTECTORS:

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

LASER SAFETY:

- This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

- **CAUTION:** USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water

or moisture – for example, in a wet basement or near a swimming pool, and the like.

6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This apparatus shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus completely, the main plug should be disconnected from the main socket outlet completely.
17. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

innovative brand of Truststone Group LLC. No portion of this design may be reproduced without express written permission. Other trademarks and trade names are those of their respective owners. All rights reserved. Distributed by Truststone Group LLC. New York NY 10018.

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- The BLUETOOTH® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. All product name, logos, and brands are property of their respective owners.


FCCID: 2BBPLTBVCDSPK

- MADE IN CHINA

FAQS

- Symptom: CD player will not play
 - Possible Cause: Unit not in CD function mode, incorrectly installed CD, incompatible media
 - Solution: Select CD function mode, insert CD correctly, use better quality media
- Symptom: CD skips while playing
 - Possible Cause: Dirty or scratched disc
 - Solution: Wipe CD with clean cloth or use another disc
- Symptom: Intermittent sound from CD Player
 - Possible Cause: Dirty pick up lens, defective disc, excessive shock or vibration
 - Solution: Clean lens, replace defective disc, relocate player away from shock or vibration

Documents / Resources

	<p>THROWBACK LASER-TUNE Wireless Speaker CD Player [pdf] Instruction Manual</p> <p>2BBPLTBVCDSPK, 2BBPLTBVCDSPK, tbvcdspk, LASER-TUNE Wireless Speaker CD Player, LASER-TUNE, Wireless Speaker CD Player, Speaker CD Player, Player</p>
---	---

References

- [User Manual](#)

THROWBACK

2BBPLTBVCDSPK, LASER-TUNE, LASER-TUNE Wireless Speaker CD Player, player, Speaker CD Player, tbvcdspk, THROWBACK, Wireless Speaker CD Player

—Previous Post

[THROWBACK TB-KMS19 Wireless Karaoke Wireless LED Mic Instruction Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.