



[Home](#) » [THROWBACK](#) » **THROWBACK TB-VCDSPK2 Record Player Wireless Speaker Instruction**

**Manual** 

## **Contents** [ [hide](#) ]

- [1 THROWBACK TB-VCDSPK2 Record Player Wireless Speaker](#)
- [2 Product Usage Instructions](#)
- [3 Your Revive Turntable](#)
- [4 Quick Set Up](#)
- [5 Maintenance](#)
- [6 Troubleshooting](#)
- [7 Technical Specifications](#)
- [8 Safety Rules](#)
- [9 Wiring Instructions](#)
- [10 Electrical Information](#)
- [11 FCC STATEMENT](#)
- [12 FAQ](#)
- [13 Documents / Resources](#)
  - [13.1 References](#)

# THROWBACK

**THROWBACK TB-VCDSPK2 Record Player Wireless Speaker**



## Product Usage Instructions

- To prevent undesired operation, keep the device away from sources of interference such as other electronic devices or strong electromagnetic fields.
- If the device experiences interference that affects its operation, try repositioning it or moving it to a different location to minimize the impact.
- Regularly inspect the device for any signs of damage or malfunction that could potentially lead to interference issues. Keep the device clean and free from dust or debris.

## Welcome

- Thank you for choosing Goodman's products.
- We believe great products should be innovative, attractive, and affordable. With 100 years' experience in manufacturing and design excellence, our vision remains as clear as ever.
- As a British brand established in 1923, we have strived to offer our customers engaging products, combining the latest features with uncomplicated functionality for a century.
- Our products have been carefully designed to be great at what they do and work straight out of the box-and this one is no exception.

- Goodmans-brilliantly simple
- Please read this manual carefully before using this product for your own safety.

## Your Revive Turntable

### In The Box

Carefully remove your Revive Turntable from the box

Inside the box, you will find:

 
- 1x Main Unit
- 1x AC Adaptor
- 1x Line in Cable
- Instruction Manual

### Front View

- **A:** Turntable lid
- **B:** Lock catch
- **C:** Tone arm lift
- **D:** Speed selection 3 speed choices: 33.45. 78 rpm.
- **E:** Line in port used to connect the turntable to devices without bluetooth.
- **F:** Function control. Turn the control to select BT / Line In / Phono.
- **G:** Power switch / Volume control


Turn the control anti-clockwise to decrease the volume and power off. Turn the control clockwise to increase the volume.

- **H:** Headphone Output: Insert a 3.5mm headphone Jack to listen to music via your headphones.
- **I:** Auto stop ON / OFF
- **J:** Speaker
- **K:** Cartridge
- **L:** Turntable platter
- **M:** Carrying handle
- **N:** 45 RPM adapter

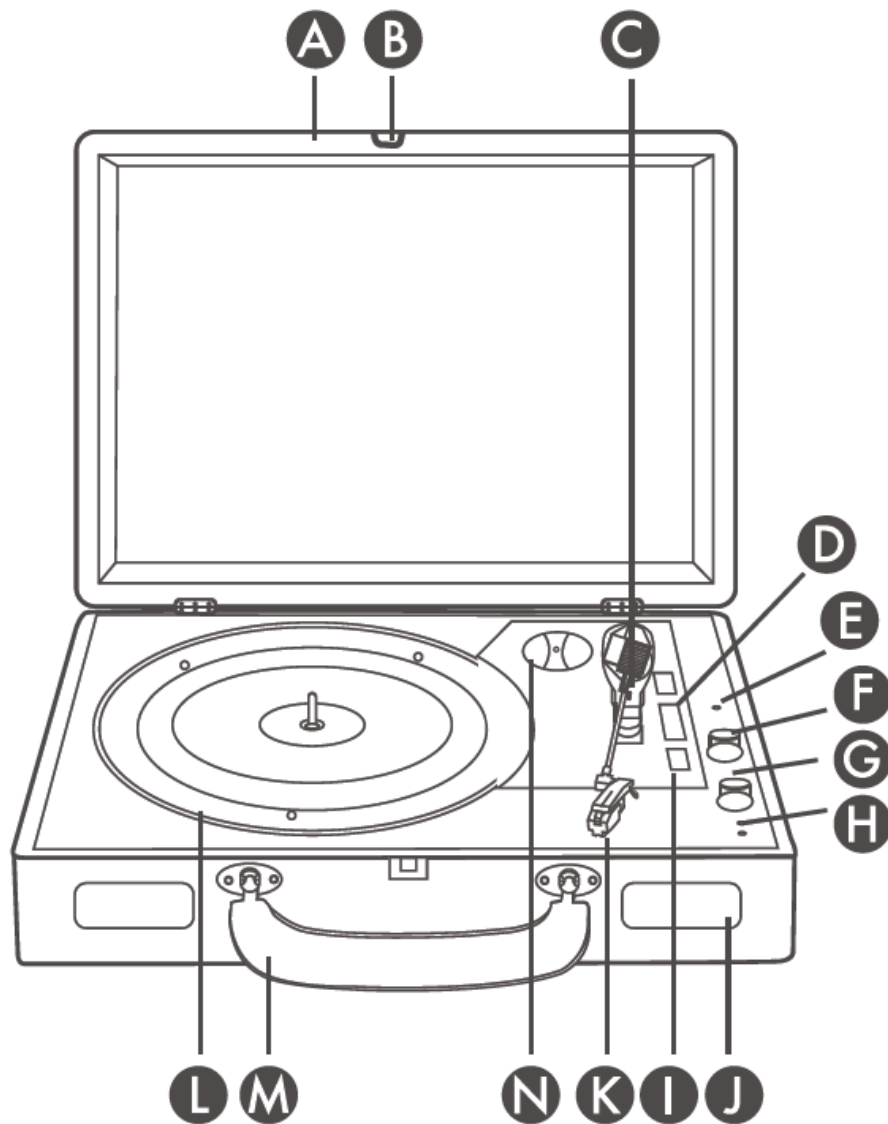

## Back View

 
- **O:** Line out Use the connection to turn the turntable audio output to active external speakers.
- **P:** DC-In socket is used to connect the turntable speaker to the mains power supply.

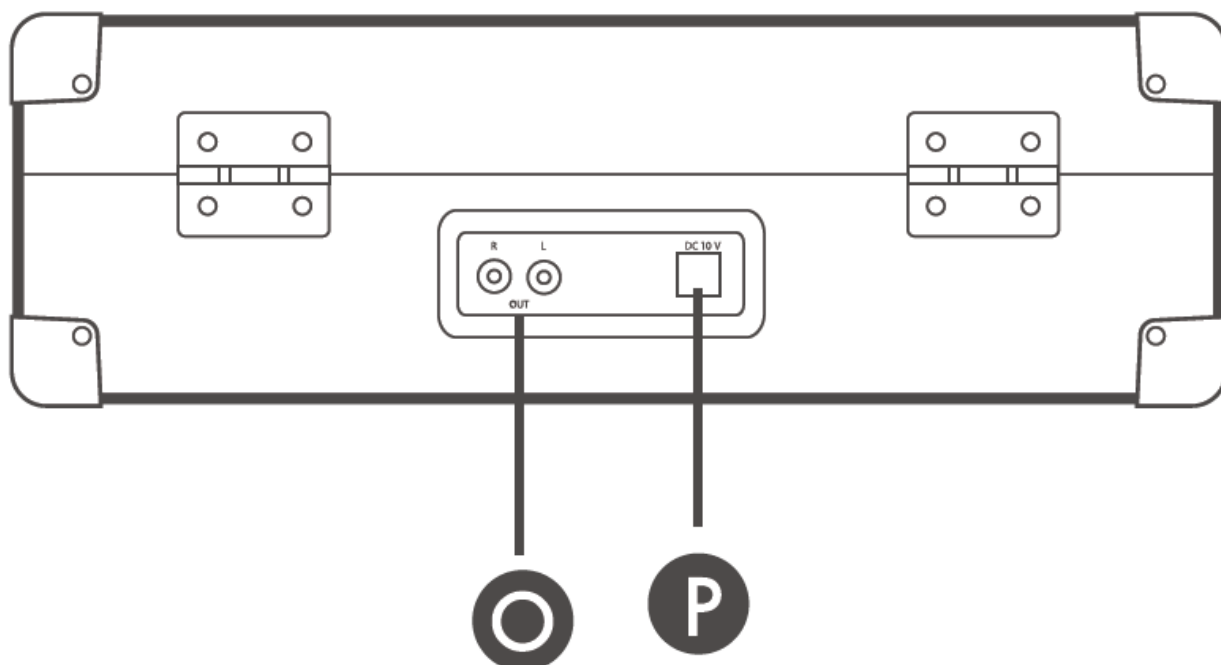

## Quick Set Up

### AC Power Operation

 
1. Insert the DC plug of the adapter into the DC Jack on the back of the unit.
2. Plug the AC Adapter plug into the mains outlet. Connecting this system to any other power SOURCE may cause damage to the system.

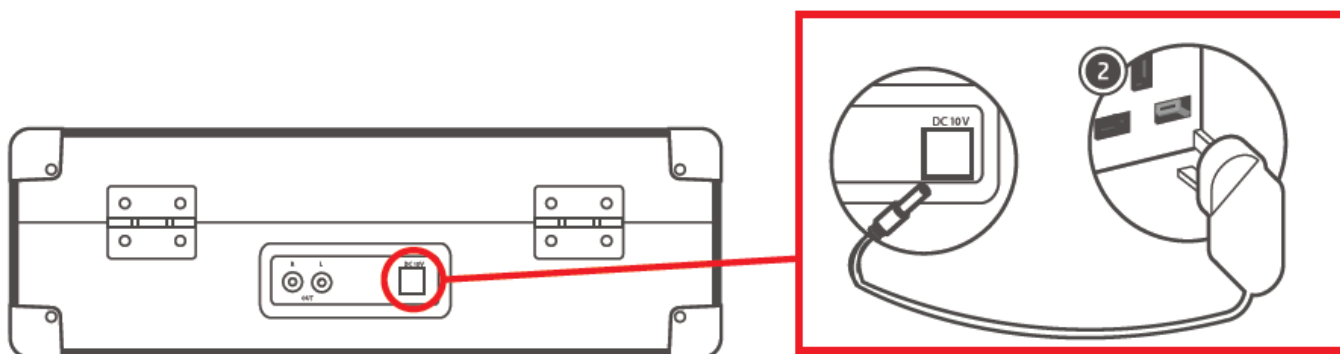

### Bluetooth® Operation

1. Turn the function control to the BT position. The blue indicator light will begin to flash.
2. Turn your device's Bluetooth® setting on, and search for devices.
3. Select the Bluetooth® pairing name "GOODMANS TURNTABLE" to connect to the record player.
4. Once you are connected, the blue indicator light will stop flashing. You can now play music from your device through your record player. Use the volume control dial to

 adjust the volume.

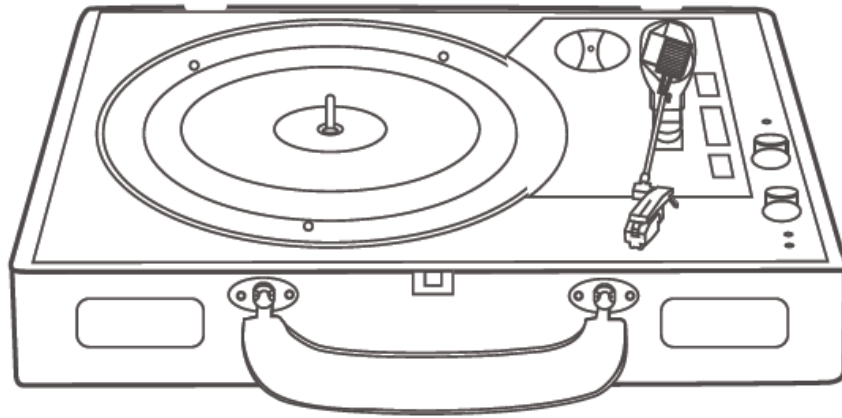

### **NOTE: After initial**

 
 
Pairing the record player will stay paired to your device unless it is unpaired manually or the device is reset.

### **Line in Operation**

1. Use an audio cable with one 3.5mm stereo plug on each end of the cable.
2. Plug one end into the line-in jack on the main unit and plug the other end of the cable into the line-out of your external audio device.
3. Turn on the unit and your external audio device.
4. To select auxiliary audio input, turn the function control to the line-in position.
5. The volume level can now be controlled through the main unit. Operate all other functions on the auxiliary device as normal.


### **Line Out**

1. YOU can listen to your new turntable using the built-in speakers but you may wish to connect it to your existing Hi Fi system. Connect the audio plugs to the line input on your mixer or amplifier using an RCA cable.

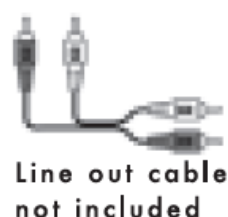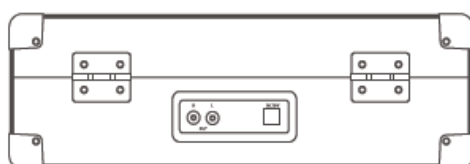


### **Headphone Out**

 1. Use a wired earphone or headphone (NOT INCLUDED) and insert the 3.5mm stereo plug into the phone jack on the turntable.

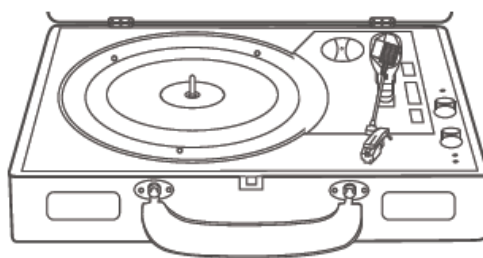

## Playing a Record

 1. Carefully holding the vinyl record by the edges, place the record on the Revive Turntable.
2. Turn on the power and select Phone mode.
3. Select the correct speed for the record that you want to play.
4. Release the tone arm lock.
5. Carefully raise the tone arm. The turntable will start to rotate.
6. Place the stylus over the first track of the record.
7. Put down the stylus slowly onto the record to play.
8. When a record reaches the end, the turntable will stop automatically if the auto-stop switch is in the ON position.
9. Lift up the tone arm and put it on the rest when finished and replace the tone arm lock.

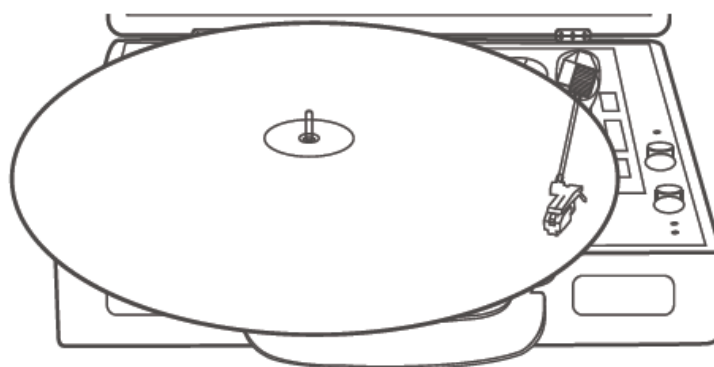

## Maintenance

- Always unplug the unit from the mains power supply and allow it to cool sufficiently before performing any cleaning or maintenance.
- Wipe the unit with a soft, damp cloth and allow to dry thoroughly. Do not use harsh or

abrasive cleaning solvents, as these may damage the finish of the unit. Do not immerse the unit in water or any other liquid

## Troubleshooting

Problem	What to do
Power does not come on when the unit is switched on.	Plug the AC adapter into a wall outlet.
No sound comes out of the speakers.	Adjust the volume. Re-select the desired input source using the mode button
The unit does not respond.	Remove the power cord and all other power supplies from the device, and then plug in the unit again after one minute.
The sound is distorted when playing the record.	Place the stylus in the centre.
Unit gets warm after extended play at high volume.	Turn the unit off a period of time or lower volume.

## Technical Specifications

Model number	347753
Bluetooth version	JL 5.3
Input	AC 100-240V ~50/60Hz
Power supply	10V $\overline{\overline{=}}$ 1000mA
Speaker driver	40 x 70mm, 4OHM
Speaker power	2 x 3W
Dimensions	W355 x D120 x H278mm
Weight	2600g

## Customer Support



- If any defect should occur due to faulty materials or workmanship, please return the goods, along with your receipt to the store you purchased the item from.

## **UK Declaration/ FCC Statement**

- This Product is intended for Use within the UK
- This appliance complies with the following UK directives
- Electromagnetic Compatibility Regulations 2016
- Electrical Equipment (Safety) Regulations 2016
- Radio Equipment Regulations 2017
- The Restriction of the Use of Certain Hazardous Substances in
- Electrical and Electronic Equipment Regulations 2012
- The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019
- The complete declaration of conformity is available upon request for relevant enquiries.

## **FCC Rules**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device is to accept any interference received, including interference that may cause undesired operation.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



## **Waste Disposal for Electrical & Electronic Equipment**

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



-  This mark on a product and/or accompanying documents indicates that when it is

to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

- Any WEE E-marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery, and recycling of the materials used.
- For proper treatment, recovery, and recycling, please take all WEE E-marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.
- If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment of any hazardous materials that the waste may contain.



## **Safety Rules**

### **Safety is important**

- Use of any electrical equipment should be undertaken with care.
- Please read all sections in this guide before first Use and retain for future reference.
- This product has been designed and intended for household/ personal use only.

### **General safety**

- This product has been designed and manufactured to meet British & European safety standards, but like any electrical equipment care must be taken if you are to obtain the best results and safety is to be assured.
- Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the instructions.
- Switch off and remove the mains plug or mains adapter when making or changing any connections.
- Do consult your dealer if you are ever in doubt about the installation, operation or safety of your product.
- Don't remove any fixed covers as this may expose you to dangerous voltages.
- Don't continue to operate the product if you are ever in doubt about it working

normally, or if it is damaged in any way. Switch it off, withdraw the plug from the mains and consult your dealer.

- There are no user-serviceable parts in the product.
- When servicing, refer to qualified service personnel.
- Don't leave the product switched on when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has a standby mode.
- Don't obstruct the ventilation vents on the product, for example, with curtains or soft furnishings, as this may cause overheating.
- Do not place the product in closed cupboards, shelving or in areas without proper ventilation.
- Store the product in a Clean, dry environment.
- The product shall not be exposed to water sources, dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on it.
- Position the power cable and other connected cables so that they are not likely to be walked on, pinched or where items can be placed on or against them.
- Never allow children to insert foreign objects into holes or slots on the product.
- No naked flame or sources of heat, such as lit candles, should be placed on the product.
- Contact local authorities for means of disposal.
- Make sure that other people in your household are conversant with the operation of the product.

## **Important Safeguards**

- If the appliance is handed over to other persons, also supply them with the instructions for Use.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.
- The safeguards must be followed closely, and the appliance has to be used in the way indicated in these instructions. Any other use, especially misuse, can cause injury or damage by electrical shock, fire, or moving mechanical parts. In case of damage and accidents caused by not following these instructions for use, the manufacturer assumes no liability.

- Ensure that the mains voltage rating of your power supply corresponds to the voltage requirements of the appliance. Always handle the power cord with care; do not pull or strain it. The power cord should never be folded or pinched.
- Always pull the plug to disconnect the power cord; never pull on the cord to disconnect it.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge, unless they have been given supervision or instruction.
- Children must not play with the appliance. Cleaning and maintenance should not be performed by children without supervision.
- The appliance should be used on a flat, stable, heat resistant surface.

#### **DO NOT OPERATE THE APPLIANCE IF:**

- The power cord is damaged.
- It malfunctions or if it has been dropped or damaged in any manner. Ask a competent, qualified electrician to check and repair it. Never try to repair it yourself. There are no user serviceable parts on this appliance.
- Should the cord be damaged, discontinue use immediately. The cord must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.

#### **DO NOT USE THE APPLIANCE:**

- With parts or accessories other than those supplied, as this could cause injury or damage.
- For anything other than its intended use.

#### **UNPLUG THE CORD FROM THE MAINS:**

- If the appliance malfunctions during use.
- Before cleaning.
- After use and before storing.

**CAUTION!** This appliance is not a toy!

- Never leave the appliance unsupervised when it is in use.
- Explain to your children all of the risks that can be caused:
  - By the hot parts of the appliance.
  - By moving and/or sharp-edged parts.
  - By the electric current.
- Keep the appliance out of reach of children or persons who cannot handle electric appliances properly, including those who have not been instructed in the correct care and use of the appliance.
- The appliance must be stored in a place that is inaccessible by children.
- DO not package components (plastic bags, cardboard, polystyrene, etc.) within the reach of children, as it could be dangerous-danger of suffocation! Dispose of all packaging responsibly.
- Recycle where possible.

## **CAUTION!**

- Never immerse the appliance, cord, or plug in water or any other liquid.
- Do not use the appliance if your hands or the appliance are wet.
- To avoid the risk of electric shock or damage to the appliance, do not operate or store it outdoors or in damp or wet areas.
- Do not use the product in humid or damp conditions or allow it to be exposed to rain or moisture.
- Switch off the appliance before changing accessories.
- Take care that the power cord never hangs over the edges of furniture.
- Take care that the power cord never touches hot surfaces or sharp-edged objects.
- Do not store the appliance in direct sunlight or high humidity conditions.
- Use of an extension cord with this appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.

## **CHARGING CABLES-SAFETY:**

- This cable is not a toy. Keep away from babies, pets, and children.
- Keep the cable away from heat sources, direct sunlight, humidity, water, and any other

liquid to prevent electric shock, explosion, and/or injury to yourself and damage to the cable.

- Keep the cables, their connections, and any ports intended to connect free from dust, lint, etc.
- Never force a connection into a port; check for obstructions in the cable and port.
- Do not operate the cable in water or any other liquid.
- Do not operate the cable with wet hands.
- Do not use the cable for anything other than its intended use.
- Do not store the cable in direct sunlight or in high humidity conditions.
- Do not be exposed to extreme temperatures of hot or cold.
- For example, do not leave in a parked car where it could get very cold in winter or very hot in summer.
- Do not put objects into any of the openings.
- DO not short-circuit.
- Do not stack up with other electrical or electronic cables to avoid overheating.
- Do not overload or overcharge the cable.
- This cable is intended for domestic use only. It should not be used for commercial purposes.
- This cable is not suitable for charging high-drain devices such as laptops or tablets.
- Use only with the product this cable was supplied.
- DO not leave unattended whilst connected to a device.
- The cable should only be used on a flat, stable, heat-resistant surface.
- Do not store the charging cable in a kinked or twisted manner. Check its condition for damage before use.
- If damaged, DO NOT USE!
- Do not pull, twist or strain the cable.
- The cable should be unobstructed when in use. DO not place items on the cable.
- When connecting and disconnecting from devices, remove gently using the solid plastic head at either end of the cable. DO not pull on the cable or flex as this can cause damage.
- Do not use the cable if it or if any connected devices are damaged. Discontinue use immediately.

## **Electrical Information**

- (Fixed Mains Plug Only)
- The mains lead supplied with this product is fitted with a BS1363/A amp plug. If it is not suitable for your supply sockets, it must be replaced with an appropriate plug.
- If the plug becomes damaged and/or needs to be replaced, please follow the wiring instructions on the next page. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard.
- If the fuse needs to be replaced, it must be of the same rating as the one fitted and ASTA approved to BS1632. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded appliance can be used.

## Wiring Instructions

- The supply cable will be either 2-core or 3-core.
- Follow the appropriate wiring instructions shown.
- In both cases, ensure that the outer sheath of the cable is firmly held by the cable clamp.

### 2-core plug

 


**WARNING:** Do not connect either wire to the earth terminal.



This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

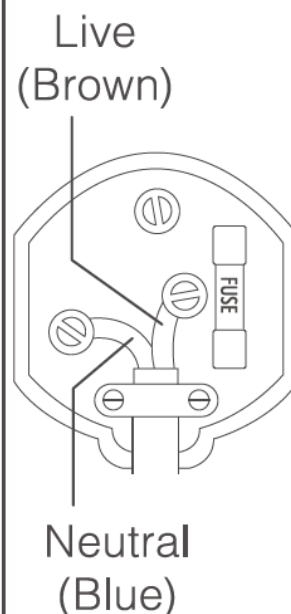

## 3-core plug

 


**WARNING:** This appliance must be earthed.



The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

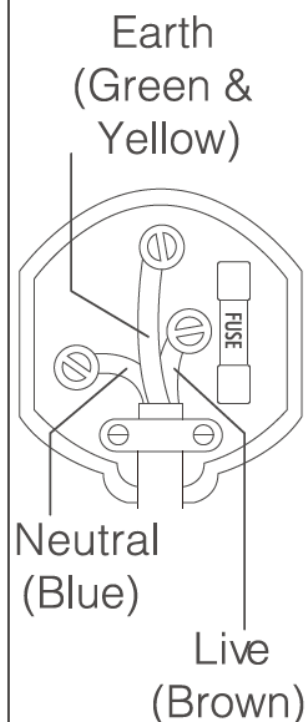

## Electrical Information

### (Power adapters only)

- Never open the power adapter; you risk getting an electric shock.
- Only use the power adapter that is supplied with your product.
- You must always connect the power adapter to the product before connecting to the mains power supply.
- The power adapter must be used indoors only and must not be subjected to damp conditions.
- The power adapter does not have any user-serviceable parts.

## Storage

- Ensure that the unit is completely cool. Store in a cool, dry place.
- B&M Retail Limited, Dakota Drive, Speke, Liverpool, L24 8RJ, UK
- Centz Stores 7 Limited, 5 Old Dublin Road, Dublin, A94 KI H5, Ireland
- THROWBACK' COPYRIGHT ALL RIGHTS RESERVED.
- THROWBACK is an innovative brand of Truststone Group LLC. No portion of this design may be reproduced without express written permission. Other trademarks and



trade names are those of their respective owners.

- All rights reserved. Distributed by Truststone Group LLC. 1370 Broadway, New York, NY 10018.

## FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FAQ

- **Q: What should I do if my device is causing harmful interference?**
  - **A:** If your device is causing harmful interference to other devices, immediately stop using it and contact customer support for assistance.
- **Q: How can I ensure my device accepts interference?**
  - **A:** Simply operate the device as intended, following the guidelines provided in the user manual to ensure it accepts any interference received.

## Documents / Resources



[THROWBACK TB-VCDSPK2 Record Player Wireless Speaker \[pdf\]](#) Instruction Manual  
TB-VCDSPK2, TB-VCDSPK2 Record Player Wireless Speaker, Record Player Wireless Speaker, Wireless Speaker

## References

- [User Manual](#)

THROWBACK

Record Player Wireless Speaker, TB-VCDSPK2, TB-VCDSPK2 Record Player Wireless Speaker, THROWBACK, Wireless Speaker

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

[Post Comment](#)

## Search:

[Search](#)

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.