

Thundercomm EB2 Edge Al Box User Guide

Home » Thundercomm » Thundercomm EB2 Edge Al Box User Guide 🖫

Contents

- 1 Thundercomm EB2 Edge AI Box
- 2 Overview
- 3 What's in the box
- **4 Key Features**
- 5 Flexible network connection selection
- **6 Technical support**
- 7 Important Product Information
 - 7.1 Terms, Notices & Policies
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts



Thundercomm EB2 Edge Al Box



Thank you for purchasing our EB2 Edge Al Box. Before using the product, please carefully read and properly manage this quick start for future reference. The appearance and structure of the product will be improved continuously, and the content changes caused by the product improvement are subject to no prior notice

Overview

Thundercomm EB2 Edge AI Box is a light-weight edge server, featuring powerful AI and video decoding capabilities. It supports device-edge-cloud synergy, remote algorithm and application deployment, FOTA, and device management. With fanless design and high reliability, it can be widely used in complex environment such as industrial park, smart building, manufacture, retail, transport and city, etc.

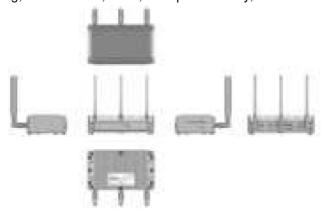


Figure 1. EB2 Edge AI Box

What's in the box

Item	Quantity
EB2 Edge Al Box	1
AC Adapter	1
AC Cable	1
Antenna	3
Screw	1
EB5 Quick Start Guide	1

Note:

For Japan AC Adapter and AC Cable are in one combine.

Key Features

Easy to use for edge scenes

- Real-time: EB2 can deal with data locally and provide real-time response.
- Low bandwidth: EB2 can only transfer necessary information to the cloud.
- Privacy protection: EB2 can process data locally with no need to process or store data on the cloud. You can
 decide to save your information either to the cloud or to local directories. All information sent to the cloud can
 be encrypted.
- Support standard containers engine.
- Support rapid deployment of third-party algorithms and applications (under development).

Multi-channel video analysis

• Support multi-channel Full HD video decoding with Al algorithm processing.

Flexible network connection selection

• Support Ethernet, WiFi 5 and LTE module.

Remote maintenance and upgrade

Remote preview video of IP cameras connected to EB2.

- Configure the camera parameters of IP cameras remotely.
- Remote firmware upgrade for EB2.

Certification

• CE, FCC, JATE/TELEC, CCC/SRRC, RoHS/Reach/WEEE.

Technical support

You can login to website https://www.thundercomm.com/product/eb2-edge-ai-box to download user manual and more technical documents.

You can also post your questions and get technical support by sending email to service@thundercomm.com.

Important Product Information

Safety, compliance, recycling, and other important information regarding your device can be found at https://www.thundercomm.com/product/eb2-edge-ai-box.

Terms, Notices & Policies

Before using your device, please read the terms, notices, and policies located at https://www.thundercomm.com/product/eb2-edge-ai-box.

Documents / Resources



Thundercomm EB2 Edge Al Box [pdf] User Guide EB2 Edge Al Box, EB2, EB2 Al Box, Edge Al Box, Al Box

References

• © EB2 Edge Al Station - Thundercomm

Manuals+,