

TiePie engineering HS3 Handy Scope




# TiePie engineering HS3 Handy Scope Instruction Manual

[Home](#) » [TiePie engineering](#) » TiePie engineering HS3 Handy Scope Instruction Manual 

## Contents

- [1 TiePie engineering HS3 Handy Scope](#)
- [2 Product Usage Instructions](#)
- [3 Safety](#)
- [4 Declaration of conformity](#)
- [5 Introduction](#)
- [6 Driver installation](#)
- [7 Front panel](#)
- [8 Specifications](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

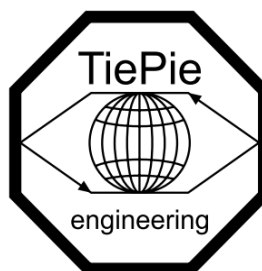

**TiePie engineering HS3 Handy Scope**



## Specifications

- **Acquisition system:** High-performance data acquisition system
- **Trigger system:** Advanced trigger system for precise measurements
- **Arbitrary Waveform Generator:** Ability to generate custom waveforms
- **Interface:** USB interface for connection to computer
- **Power:** Can be powered via USB or external power adapter
- **Physical:** Compact and portable design
- **I/O connectors:** BNC connectors for signal input/output
- **System requirements:** Compatible with Windows 8, Windows 10
- **Environmental conditions:** Operating temperature: 0-40°C, Storage temperature: -20-70°C

## Product Usage Instructions

### Safety

- When using the Handyscope HS3, always ensure proper safety measures are taken to avoid any electrical hazards.
- Avoid measuring directly online voltage without proper isolation equipment.

### Driver Installation

- Before using the device, install the necessary drivers based on your computer's operating system.
- Follow the instructions provided in the manual for driver installation.

### Hardware Installation

- Power the instrument using either the external power adapter or USB power cable.
- Connect the instrument to your computer via the USB port.
- Ensure a stable connection for accurate data transfer.

### Front Panel

- The front panel of the Handyscope HS3 features input connectors for Channel 1 and Channel 2, as well as a GENERATOR output connector.
- The power indicator shows the status of the device.

## Rear Panel

- The rear panel includes power options such as a USB power cable or a power adapter.
- Additionally, there is an Extension Connector for expanding connectivity options.

## FAQ

### **Q: Can I measure line voltage directly with the Handyscope HS3?**

- **A:** It is not recommended to measure line voltage directly with the Handyscope HS3 due to safety concerns.
- Always use proper isolation equipment when working with high voltages.

### **Q: What are the system requirements for the Handyscope HS3?**

- **A:** The Handyscope HS3 is compatible with computers running Windows 8 or Windows 10.
- Ensure your system meets the minimum requirements for optimal performance.

## ATTENTION!

- Measuring directly on the line voltage can be very dangerous.
- The outside of the BNC connectors at the Handyscope HS3 are connected to the ground of the computer.
- Use a good isolation transformer or a differential probe when measuring the line voltage or at grounded power supplies! A short-circuit current will flow if the ground of the Handyscope HS3 is connected to a positive voltage.
- This short-circuit current can damage both the Handyscope HS3 and the computer.

## Safety

- When working with electricity, no instrument can guarantee complete safety.
- It is the responsibility of the person who works with the instrument to operate it safely.
- Maximum security is achieved by selecting the proper instruments and following safe working procedures.

### **Safe working tips are given below:**

- Always work according to (local) regulations.
- Work on installations with voltages higher than 25 VAC or 60 VDC should only be performed by qualified personnel.
- Avoid working alone.
- Observe all indications on the Handyscope HS3 before connecting any wiring
- Check the probes/test leads for damages. Do not use them if they are damaged
- Take care when measuring voltages higher than 25 VAC or 60 VDC.
- Do not operate the equipment in an explosive atmosphere or the presence of flammable gases or fumes.
- Do not use the equipment if it does not operate properly. Has the equipment been inspected by a qualified

service personnel? If necessary, return the equipment to TiePie Engineering for service and repair to ensure that safety features are maintained.

- Measuring directly on the line voltage can be very dangerous. The outside of the BNC connectors at the Handyscope HS3 are connected to the ground of the computer. Use a good isolation transformer or a differential probe when measuring the line voltage or at grounded power supplies! A short-circuit current will flow if the ground of the Handyscope HS3 is connected to a positive voltage. This short-circuit current can damage both the Handyscope HS3 and the computer.

## Declaration of conformity

- TiePie engineering Koperslagersstraat 37 8601 WL Sneek
- The Netherlands

## EC Declaration of Conformity

We declare, on our own responsibility, that the product

**andyscope HS3-5MHz  
Handyscope HS3-10MHz  
Handyscope HS3-25MHz  
Handyscope HS3-50MHz  
Handyscope HS3-100MHz**

for which this declaration is valid, is in compliance with

EC directive 2011/65/EU (the RoHS directive)  
including up to amendment 2021/1980,

EC regulation 1907/2006 (REACH)  
including up to amendment 2021/2045,

and with

EN 55011:2016/A1:2017	IEC 61000-6-1:2019 EN
EN 55022:2011/C1:2011	IEC 61000-6-3:2007/A1:2011/C11:2012 EN

according the conditions of the EMC standard 2004/108/EC,

also with


Canada: ICES-001:2004	Australia/New Zealand: AS/NZS CISPR 11:2011
-----------------------	---

and

IEC 61010-1:2010/A1:2019	USA: UL 61010-1, Edition 3
--------------------------	----------------------------

and is categorized as 30 Vrms, 42 Vpk, 60 Vdc

Sneek, 1-9-2022  
ir. A.P.W.M. Poelsma

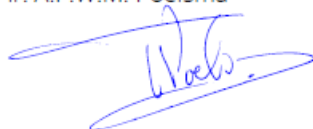

## Environmental considerations

- This section provides information about the environmental impact of the Handy-scope HS3.

## End-of-life handling

- Production of the Handyscope HS3 required the extraction and use of natural resources.
- The equipment may contain substances that could be harmful to the environment or human health if improperly handled at the Handyscope HS3's end of life.
- To avoid the release of such substances into the environment and to reduce the use of natural resources, recycle the Handyscope HS3 in an appropriate system that will ensure that most of the materials are reused or recycled appropriately.
- The shown symbol indicates that the Handyscope HS3 complies with the European Union's requirements according to Directive 2002/96/EC on waste electrical and electronic equipment (WEEE).

## Introduction

- Before using the Handyscope HS3 first read Chapter 1 about safety.
- Many technicians investigate electrical signals. Though the measurement may not be electrical, the physical variable is often converted to an electrical signal, with a special transducer.
- Common transducers are accelerometers, pressure probes, current clamps, and temperature probes. The advantages of converting the physical parameters to electrical signals are large since many instruments for examining electrical signals are available.
- The Handyscope HS3 is a portable two-channel measuring instrument with an Arbitrary Waveform Generator.
- The Handyscope HS3 is available in several models with different maximum sampling rates: 5 MSa/s, 10 MSa/s, 25 MSa/s, 50 MSa/s or 100 MSa/s.
- The native resolution is 12 bits, but user selectable resolutions of 8, 14 and 16 bits are available too, with adjusted maximum sampling rate:

Resolution	HS3-100	HS3-50	HS3-25	HS3-10	HS3-5
8 bit	100 MSa/s	50 MSa/s	25 MSa/s	10 MSa/s	5 MSa/s
12 bit	50 MSa/s	50 MSa/s	25 MSa/s	10 MSa/s	5 MSa/s
14 bit	3.125 MSa/s	3.125 MSa/s	3.125 MSa/s	3.125 MSa/s	3.125 MSa/s
16 bit	195 kSa/s	195 kSa/s	195 kSa/s	195 kSa/s	195 kSa/s

**Table 3.1: Maximum sampling rates**

- With the accompanying software, the Handyscope HS3 can be used as an oscilloscope, a spectrum analyzer, a true RMS voltmeter, or a transient recorder.
- All instruments measure by sampling the input signals, digitizing the values, processing them, saving them, and displaying them.

## Sampling

- When sampling the input signal, samples are taken at fixed intervals. At these intervals, the size of the input signal is converted to a number.
- The accuracy of this number depends on the resolution of the instrument. The higher the resolution, the smaller the voltage steps in which the input range of the instrument is divided.
- The acquired numbers can be used for various purposes, e.g. to create a graph.

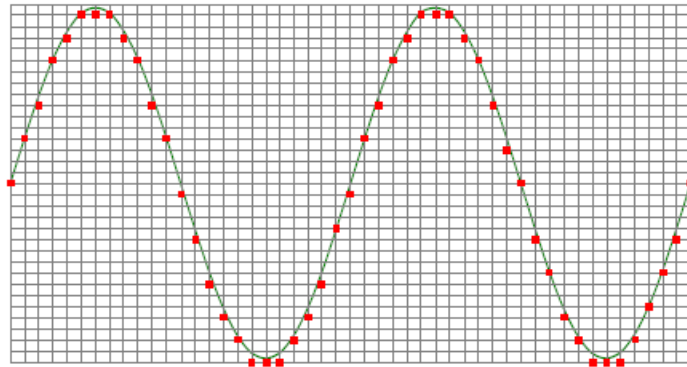


Figure 3.1: Sampling

- The sine wave in figure 3.1 is sampled at the dot positions. By connecting the adjacent samples, the original signal can be reconstructed from the samples. You can see the result in figure 3.2.

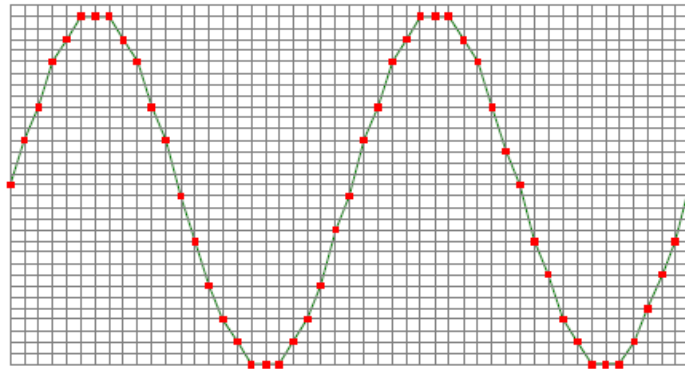


Figure 3.2: "connecting" the samples

## Sampling rate

- The rate at which the samples are taken is called the sampling rate, the number of samples per second. A higher sampling rate corresponds to a shorter interval between the samples.
- As is visible in figure 3.3, with a higher sampling rate, the original signal can be reconstructed much better from the measured samples.

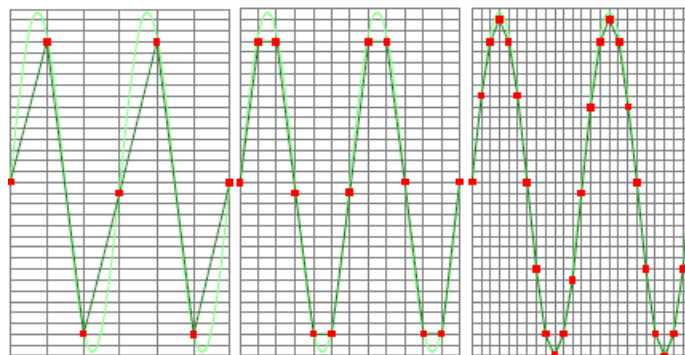


Figure 3.3: The effect of the sampling rate

- The sampling rate must be higher than 2 times the highest frequency in the input signal. This is called the Nyquist frequency.

- Theoretically, it is possible to reconstruct the input signal with more than 2 samples per period.
- In practice, 10 to 20 samples per period are recommended to be able to examine the signal thoroughly.


## Aliasing

- When sampling an analog signal with a certain sampling rate, signals appear in the output with frequencies equal to the sum and difference of the signal frequency and multiples of the sampling rate.
- For example, when the sampling rate is 1000 Sa/s and the signal frequency is 1250 Hz, the following signal frequencies will be present in the output data:

Multiple sampling rate	1250 Hz signal	-1250 Hz signal
...		
-1000	$-1000 + 1250 = \mathbf{250}$	$-1000 - 1250 = -2250$
0	$0 + 1250 = 1250$	$0 - 1250 = -1250$
1000	$1000 + 1250 = 2250$	$1000 - 1250 = -250$
2000	$2000 + 1250 = 3250$	$2000 - 1250 = 750$
...		

**Table 3.2: Aliasing**

- As stated before, when sampling a signal, only frequencies lower than half the sampling rate can be reconstructed. In this case, the sampling rate is 1000 Sa/s, so we can only observe signals with a frequency ranging from 0 to 500 Hz.
- This means that from the resulting frequencies in the table, we can only see the 250 Hz signal in the sampled data. This signal is called an alias of the original signal.
- If the sampling rate is lower than twice the frequency of the input signal, aliasing will occur. The following illustration shows what happens.

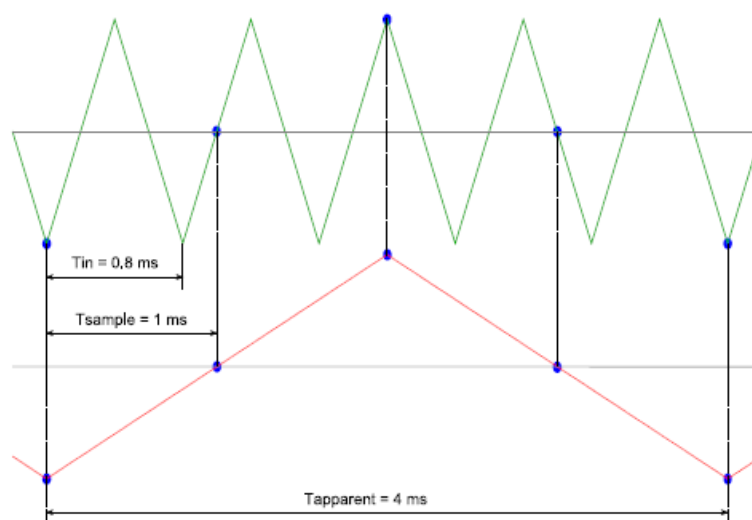

**Figure 3.4: Aliasing**

- In figure 3.4, the green input signal (top) is a triangular signal with a frequency of 1.25 kHz. The signal is sampled with a rate of 1 kSa/s. The corresponding sampling interval is  $1/1000\text{Hz} = 1\text{ ms}$ .

- The positions at which the signal is sampled are depicted with blue dots. The red dotted signal (bottom) is the result of the reconstruction.
- The period time of this triangular signal appears to be 4 ms, which corresponds to an apparent frequency (alias) of 250 Hz (1.25 kHz – 1 kHz).
- To avoid aliasing, always start measuring at the highest sampling rate and lower the sampling rate if required.

## Digitizing

- When digitizing the samples, the voltage at each sample time is converted to a number. This is done by comparing the voltage with many levels.
- The resulting number is the number corresponding to the level that is closest to the voltage.
- The number of levels is determined by the resolution, according to the following relation:  $\text{LevelCount} = 2^{\text{Resolution}}$ .
- The higher the resolution, the more levels are available, and the more accurately the input signal can be reconstructed.
- In figure 3.5, the same signal is digitized, using two different amounts of levels: 16 (4-bit) and 64 (6-bit).

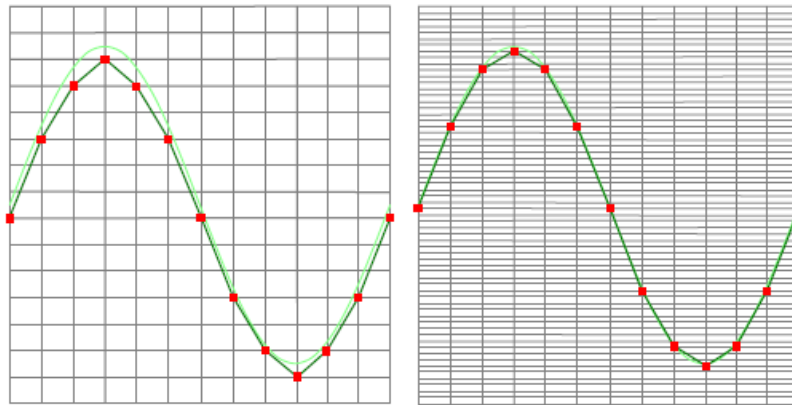


Figure 3.5: The effect of the resolution

- The Handyscope HS3 measures at e.g. 12-bit resolution ( $2^{12}=4096$  levels). The smallest detectable voltage step depends on the input range.
- This voltage can be calculated as  $\text{VoltageStep} = \text{FullInputRange} / \text{LevelCount}$
- For example, the 200 mV range ranges from -200 mV to +200 mV, therefore the full range is 400 mV.
- This results in the smallest detectable voltage step of  $0.400 \text{ V} / 4096 = 97.65 \mu\text{V}$ .

## Signal coupling

- The Handyscope HS3 has two different settings for the signal coupling: AC and DC. In the setting DC, the signal is directly coupled to the input circuit.
- All signal components available in the input signal will arrive at the input circuit and will be measured.
- In the setting AC, a capacitor will be placed between the input connector and the input circuit. This capacitor will block all DC components of the input signal and let all AC components pass through.
- This can be used to remove a large DC component of the input signal, to be able to measure a small AC component at high resolution.
- When measuring DC signals, make sure to set the signal coupling of the input to DC.

## Probe compensation.



- The Handyscope HS3 is shipped with a probe for each input channel. These are 1x/10x selectable passive probes.
- This means that the input signal is passed through directly or 10 times attenuated.
- When using an oscilloscope probe in a 1:1 setting, the bandwidth of the probe is only 6 MHz.
- The full bandwidth of the probe is only obtained in the 1:10 setting
- The x10 attenuation is achieved through an attenuation network. This attenuation network has to be adjusted to the oscilloscope input circuitry, to guarantee frequency independency.
- This is called low-frequency compensation. Each time a probe is used on another channel or another oscilloscope, the probe must be adjusted.
- Therefore the probe is equipped with a setscrew, with which the parallel capacity of the attenuation network can be altered.
- To adjust the probe, switch the probe to the x10 and attach the probe to a 1 kHz square wave signal.
- Then adjust the probe for a square front corner on the square wave displayed. See also the following illustrations.

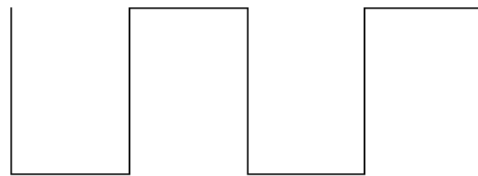


Figure 3.6: correct

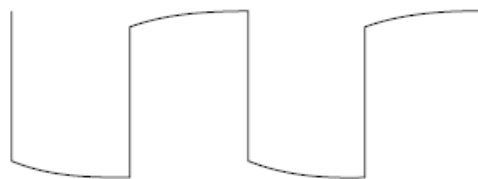


Figure 3.7: under compensated

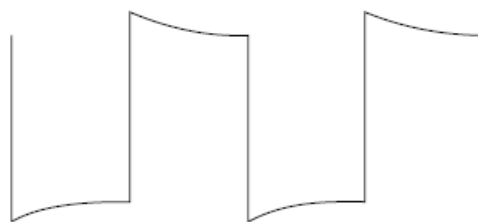


Figure 3.8: over compensated

## Driver installation

- Before connecting the Handyscope HS3 to the computer, the drivers need to be installed.

## Introduction

- To operate a Handyscope HS3, a driver is required to interface between the measurement software and the instrument. This driver takes care of the low-level communication between the computer and the instrument, through USB.

- When the driver is not installed, or an old, no longer compatible version of the driver is installed, the software will not be able to operate the Handyscope HS3 properly or even detect it at all.

### Computers running Windows 10

- When the Handyscope HS3 is plugged into a USB port of the computer, Windows will detect the instrument and will download the required driver from Windows Update.
- When the download is finished, the driver will be installed automatically.

### Computers running Windows 8 or older

- The installation of the USB driver is done in a few steps. Firstly, the driver has to be pre-installed by the driver setup program.
- This makes sure that all required files are located where Windows can find them.
- When the instrument is plugged in, Windows will detect new hardware and install the required drivers.

### Where to find the driver setup

- The driver setup program and measurement software can be found in the download section on TiePie Engineering's website.
- It is recommended to install the latest version of the software and USB driver from the website. This will guarantee the latest features are included.

### Executing the installation utility

- To start the driver installation, execute the downloaded driver setup program. The driver install utility can be used for a first time installation of a driver on a system and also to update an existing driver.
- The screenshots in this description may differ from the ones displayed on your computer, depending on the Windows version.

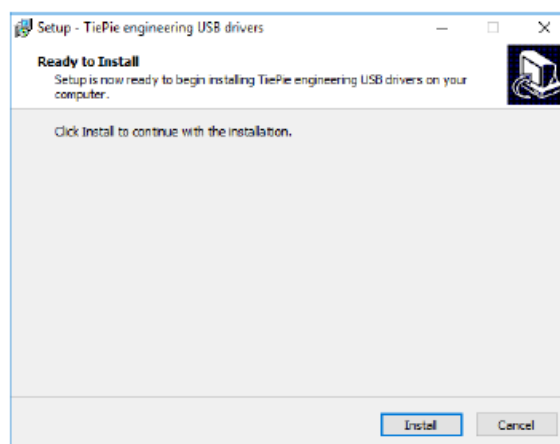


Figure 4.1: Driver install: step 1

- When drivers are already installed, the install utility will remove them before installing the new driver. To remove the old driver successfully, the Handyscope HS3 must be disconnected from the computer before starting the driver install utility.
- When the Handyscope HS3 is used with an external power supply, this must be disconnected too.

- Clicking "Install" will remove existing drivers and install the new driver. A remove entry for the new driver is added to the software applet in the Windows control panel.

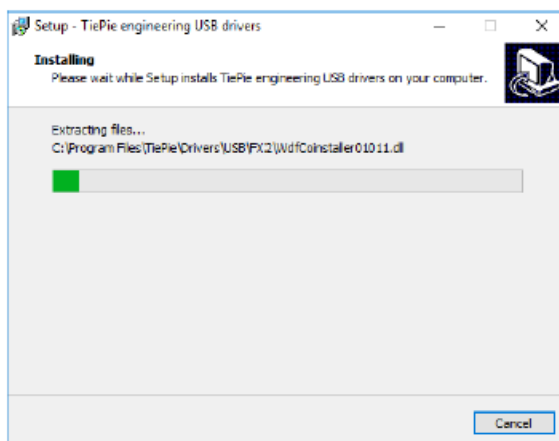


Figure 4.2: Driver install: Copying files

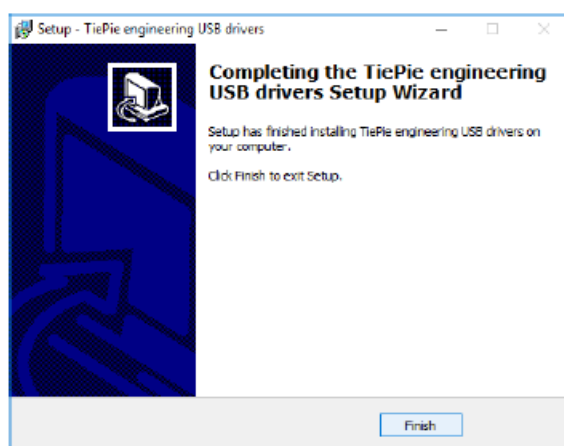


Figure 4.3: Driver install: Finished

## Hardware installation

- Drivers have to be installed before the Handyscope HS3 is connected to the computer for the first time. See chapter 4 for more information.

## Power the instrument

- The Handyscope HS3 is powered by the USB, no external power supply is required. Only connect the Handyscope HS3 to a bus-powered USB port, otherwise it may not get enough power to operate properly.

## External power

- In certain cases, the Handyscope HS3 cannot get enough power from the USB port. When a Handyscope HS3 is connected to a USB port, powering the hardware will result in an inrush current higher than the nominal current. After the inrush current, the current will stabilize at the nominal current. USB ports have a maximum limit for both the inrush current peak and the nominal current. When either of them is exceeded, the USB port will be switched off. As a result, the connection to the Handyscope HS3 will be lost.
- Most USB ports can supply enough current for the Handyscope HS3 to work without an external power supply, but this is not always the case. Some (battery-operated) portable computers or (bus-powered) USB hubs do not

supply enough current.

- The exact value at which the power is switched off varies per USB controller, so it is possible that the Handyscope HS3 functions properly on one computer, but does not on another.
- To power the Handyscope HS3 externally, an external power input is provided. It is located at the rear of the Handyscope HS3. Refer to paragraph 7.1 for specifications of the external power input.

### Connect the instrument to the computer

- After the new driver has been pre-installed (see Chapter 4), the Handyscope HS3 can be connected to the computer. When the Handyscope HS3 is connected to a USB port of the computer, Windows will detect new hardware.
- Depending on the Windows version, a notification can be shown that new hardware is found and that drivers will be installed. Once ready, Windows will report that the driver is installed.
- When the driver is installed, the measurement software can be installed and the Handyscope HS3 can be used.

### Plug into a different USB port

- When the Handyscope HS3 is plugged into a different USB port, some Windows versions will treat the Handyscope HS3 as different hardware and will install the drivers again for that port.
- This is controlled by Microsoft Windows and is not caused by TiePie engineering.

### Front panel



Figure 6.1: Front panel

### CH1 and CH2 input connectors

- The CH1 and CH2 BNC connectors are the main inputs of the acquisition system. The outside of the BNC connectors is connected to the ground of the Handyscope HS3. Connecting the outside of the BNC connector to a potential other than ground will result in a short circuit that may damage the device under test, the Handyscope HS3, and the computer.

### GENERATOR output connector

- The OUT BNC connector is the output of the internal Arbitrary Waveform Generator. The outside of this BNC connector is connected to the ground of the Handyscope HS3.
- When the generator is switched off in the software, the generator output is switched to a high impedance, floating state, and the output voltage is then undefined.
- When the generator is switched on in the software and set to pause, the generator output is switched to a low impedance (50  $\Omega$ ), and the output voltage is at the selected offset level.

## Power indicator

- A power indicator is situated at the top cover of the instrument. It is lit when the Handyscope HS3 is powered.

## Rear panel



Figure 7.1: Rear panel

## Power

- The Handyscope HS3 is powered through the USB. If the USB cannot deliver enough power, it is possible to power the instrument externally.
- The Handyscope HS3 has two external power inputs located at the rear of the instrument: the dedicated power input and a pin of the extension connector.
- Handyscope HS3s with SN# 11832 and lower do not have a dedicated power input at the rear, they only have an external power input on the extension connector.

**The specifications of the dedicated power connector are:**



Pin	Dimension	Description
Center pin	Ø1.3 mm	ground
Outside bushing	Ø3.5 mm	positive

**Figure 7.2: Power connector**

- Besides the external power input, it is also possible to power the instrument through the extension connector, the 25-pin D-sub connector at the rear of the instrument.
- The power has to be applied to pin 3 of the extension connector. Pin 4 can be used as ground.

**The following minimum and maximum voltages apply to both power inputs:**

	Minimum	Maximum
SN# <12941	4.5 VDC	6 VDC
SN# >12941	4.5 VDC	12 VDC

**Table 7.1: Maximum voltages**

- Note that the externally applied voltage should be higher than the USB voltage to relieve the USB port.

### USB power cable

- The Handyscope HS3 is delivered with a special USB external power cable.



Figure 7.3: USB power cable

- One end of this cable can be connected to a second USB port on the computer, the other end can be plugged into the external power input at the rear of the instrument. The power for the instrument will be taken from two USB ports of the computer.
- The outside of the external power connector is connected to +5 V. To avoid a shortage, first connects the cable to the Handyscope HS3 and then to the USB port.

### Power adapter

- In case a second USB port is not available, or the computer still can't provide enough power for the instrument, an external power adapter can be used. When using an external power adapter, make sure that:
- the polarity is set correctly
- the voltage is set to a valid value for the instrument and higher than the USB voltage
- the adapter can supply enough current (preferably >1 A)
- the plug has the correct dimensions for the external power input of the instrument

### USB

- The Handyscope HS3 is equipped with a USB 2.0 High speed (480 Mbit/s) interface with a fixed cable with type A plug. It will also work on a computer with a USB 1.1 interface, but will then operate at 12 Mbit/s.

### Extension Connector

 


Figure 7.4: Extension connector

To connect to the Handyscope HS3 a 25-pin female D-sub connector is available, containing the following signals:

Pin	Description	Pin	Description
1	Ground	14	Ground
2	Reserved	15	Ground
3	External Power in DC	16	Reserved
4	Ground	17	Ground
5	+5V out, 10 mA max.	18	Reserved
6	Ext. sampling clock in (TTL)	19	Reserved
7	Ground	20	Reserved
8	Ext. trigger in (TTL)	21	Generator Ext Trig in (TTL)
9	Data OK out (TTL)	22	Ground
10	Ground	23	I2 C SDA
11	Trigger out (TTL)	24	I2 C SCL
12	Reserved	25	Ground
13	Ext. sampling clock out (TTL)		

**Table 7.2: Pin description Extension connector**

- All TTL signals are 3.3 V TTL signals which are 5 V tolerant, so they can be connected to 5 V TTL systems.
- For instruments with serial numbers 14266 and higher, pins 9, 11, 12, and 13 are open collector outputs.  
Connect a pull-up resistor of 1 kOhm to pin 5 when using one of these signals.
- For older instruments, the outputs are standard TTL outputs and no pull-up is required.

## Specifications

### Acquisition system

Number of input channels	2 analog				
CH1, CH2	BNC, female				
Type	Single ended				
Resolution	8, 12, 14, 16 bit user selectable				
Accuracy	0.2% of full scale $\pm$ 1 LSB				
Ranges (full scale)	$\pm 200$ mV $\pm 2$ V $\pm 20$ V	$\pm 400$ mV $\pm 4$ V $\pm 40$ V		$\pm 800$ mV $\pm 8$ V $\pm 80$ V	
Coupling	AC/DC				
Impedance	1 M $\Omega$ / 30 pF				
Maximum voltage	200 V (DC + AC peak <10 kHz)				
Bandwidth (-3dB)	50 MHz				
AC coupling cut off frequency (-3dB)	$\pm 1.5$ Hz				
Maximum sampling rate	HS3-100	HS3-50	HS3-25	HS3-10	HS3-5
8 bit	100 MSa/s	50 MSa/s	25 MSa/s	10MSa/s	5 MSa/s
12 bit	50 MSa/s	50 MSa/s	25 MSa/s	10MSa/s	5 MSa/s
14 bit	3.125 MSa/s	3.125 MSa/s	3.125 MSa/s	3.125 MSa/s	3.125 MSa/s
16 bit	195 kSa/s	195 kSa/s	195 kSa/s	195 kSa/s	195 kSa/s
Maximum streaming rate	10 kSa/s				
Sampling source	internal quartz, external				
Internal	Quartz				
Accuracy	$\pm 0.01\%$				
Stability	$\pm 100$ ppm over -40°C to +85°C				
Time base aging	$\pm 5$ ppm/year				
External	On extension connector				
Voltage	3.3 V TTL, 5 V TTL tolerant				
Frequency range	10 MHz - 100 MHz				
Memory	128 kSamples per channel (256 kSamples with disabled generator)				

### Trigger system

System	digital, 2 levels
Source	CH1, CH2, digital external, AND, OR, AWG Start, AWG Stop, AWG New period
Trigger modes	rising slope, falling slope, inside window, outside window
Level adjustment	0 to 100% of full scale
Hysteresis adjustment	0 to 100% of full scale
Resolution	0.024 % (12 bits)
Pre trigger	0 to 128 ksamples (0 to 100%, one sample resolution)
Post trigger	0 to 128 ksamples (0 to 100%, one sample resolution)
Digital external trigger	
Input	extension connector
Range	0 to 5 V (TTL)
Coupling	DC

### Arbitrary Waveform Generator



Output channel	1 analog, female BNC
DAC Resolution	14 bit @ 50 MSa/s
Output range	-12 V to 12 V (open circuit)
Amplitude	
Range	$\pm 0.12$ V, $\pm 1.2$ V, $\pm 12$ V (open circuit)
Resolution	13 bit
Accuracy	0.4 % of range
Noise	0.12 V range: $900 \mu\text{V}_{\text{RMS}}$ 1.2 V range: $1.3 \text{ mV}_{\text{RMS}}$ 12 V range: $1.5 \text{ mV}_{\text{RMS}}$
DC offset	
Range	-12 V to 12 V (open circuit)
Resolution	13 bit
Accuracy	0.4 % of range
Coupling	DC
Impedance	$50 \Omega$
Bandwidth	2 MHz
System	DDS
Memory	256k points
Operating mode	Continuous, triggered, gated
Maximum sampling rate	50 MSa/s
Sampling source	internal quartz
Accuracy	$\pm 0.01\%$
Stability	$\pm 100$ ppm over $-40^\circ\text{C}$ to $+85^\circ\text{C}$
Time base aging	$\pm 5$ ppm/year
Waveforms	sine, square, triangle, noise, DC and user defined
Symmetry	0 to 100%

## Interface

Interface	USB 2.0 High Speed (480 Mbit/s) (USB 1.1 Full Speed (12 Mbit/s) and USB 3.0 compatible)
-----------	---

## Power

Input	from USB or external input
Consumption	500 mA max

## Physical

Instrument height	25 mm / 1.0"
Instrument length	170 mm / 6.7"
Instrument width	140 mm / 5.2"
Weight	480 gram / 17 ounce
USB cord length	1.8 m / 70"

## connectors

CH1, CH2	BNC, female
Generator out	BNC, female
Power	3.5 mm power socket
Extension connector	D-sub 25 pins female
USB	Fixed cable with type A plug

## System requirements

PC I/O connection	USB 2.0 High Speed (480 Mbit/s) (USB 1.1 and USB 3.0 compatible)
Operating System	Windows 10, 32 and 64 bits

## Environmental conditions

Operating	
Ambient temperature	0°C to 55°C
Relative humidity	10 to 90% non condensing
Storage	
Ambient temperature	-20°C to 70°C
Relative humidity	5 to 95% non condensing

## Certifications and Compliances

CE mark compliance	Yes
RoHS	Yes
REACH	Yes
EN 55011:2016/A1:2017	Yes
EN 55022:2011/C1:2011	Yes
IEC 61000-6-1:2019 EN	Yes
IEC 61000-6-3:2007/A1:2011/C11:2012	Yes
ICES-001:2004	Yes
AS/NZS CISPR 11:2011	Yes
IEC 61010-1:2010/A1:2019	Yes
UL 61010-1, Edition 3	Yes

## Probes

Model	HP-3250I	
	X1	X10
Bandwidth	6 MHz	250 MHz
Rise time	58 ns	1.4 ns
Input impedance	1 M $\Omega$ oscilloscope impedance	10 M $\Omega$ incl. 1 M $\Omega$ oscilloscope impedance
Input capacitance	56 pF + oscilloscope capacitance	13 pF
Compensation range	-	10 to 30 pF
Working voltage (DC + AC peak)	300 V 150 V CAT II	600 V 300 V CAT II

## Package contents



Instrument	Handyscope HS3
Probes	2 x HP-3250I X1 / X10 switchable
Accessories	USB power cable
Software	Windows 10, 32 and 64 bits, via website
Drivers	Windows 10, 32 and 64 bits, via website
Software Development Kit	Windows 10 and Linux, via website
Manual	Instrument manual and software manual

- If you have any suggestions and/or remarks regarding this manual, please contact: TiePie Engineering  
Koperslagersstraat 37 8601 WL SNEEK The Netherlands
- **Tel.: +31 515 415 416**
- **Fax: +31 515 418 819**
- **E-mail: [support@tiepie.nl](mailto:support@tiepie.nl)**
- **Site: [www.tiepie.com](http://www.tiepie.com).**




---

## Documents / Resources

 <p>Handyscope HS3 User manual</p> 	<p><a href="#">TiePie engineering HS3 Handy Scope</a> [pdf] Instruction Manual HS3 Handy Scope, HS3, Handy Scope, Scope</p>
---	---

## References

-  [TiePie - USB oscilloscopes, spectrum analyzers, data loggers, multimeters, Arbitrary Waveform Generators](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.