



TIGER PERFORMANCE Remote Master Transceiver and Headset Key Fob Instruction Manual

[Home](#) » [TIGER PERFORMANCE](#) » TIGER PERFORMANCE Remote Master Transceiver and Headset Key Fob Instruction Manual 

TIGER PERFORMANCE Remote Master Transceiver and Headset Key Fob



Contents

- [1 Key FOB for Headset](#)
- [2 Key FOB for Transceiver](#)
- [3 Documents / Resources](#)

Key FOB for Headset



The button for communicating with the radio

The button for communicating with the radio & intercom

The button for communicating with intercom

1. The initial state of the remote controller is unpaired, press any key at this time, and the red light will flash once.
2. When the remote controller is under the unpaired state, turn on the headset and press any button on the remote controller within 30 seconds, then it will be paired with the headset. At this time, the voice in the headset will announce "remote key paired". The remote controller will flash the green light twice to indicate that it is paired successfully.
3. When the remote controller is under the paired state, press any key at this time, the green light will flash once. If the headset does not respond, the red light will flash twice. If the headset responds, the green light will immediately flash once again.

When the remote controller is under the paired state, if it needs to clear the pairing of the remote controller, quickly press the button in the center of the remote controller several times, until the indicator light of the remote controller flashes red and green slowly, which means that the pairing status of the remote controller has been cleared. Return to the initial state.

Key FOB for Transceiver



The button for communicating with the radio

The button for communicating with the radio & headset


The button for communicating with the headset

1. The initial state of the remote controller is unpaired, press any key at this time, and the red light will flash once.
2. When the remote controller is under the unpaired state, turn on the transceiver and press any button on the remote controller within 30 seconds, then it will be paired with the transceiver. The remote controller will flash green light twice to indicate that it is paired successfully.
3. When the remote controller is under the paired state, press any key at this time, the green light will flash once. If the transceiver does not respond, the red light will flash twice. If the transceiver responds, the green light will immediately flash once again.

When the remote controller is under the paired state, if it needs to clear the pairing of the remote controller, quickly press the button in the center of the remote controller several times, until the indicator light of the remote controller flashes red and green slowly, which means that the pairing status of the remote controller has been cleared. Return to the initial state.



Documents / Resources

	<p>TIGER PERFORMANCE Remote Master Transceiver and Headset Key Fob [pdf] Instruction Manual</p> <p>Remote Master Transceiver and Headset Key Fob, Master Transceiver and Headset Key Fob, Transceiver and Headset Key Fob, Headset Key Fob, Key Fob, Fob</p>
---	--