



TILTA 95mm Variable ND Instruction Manual

 
[Home](#) » [TILTA](#) » TILTA 95mm Variable ND Instruction Manual 

Contents


- 1 95mm Variable ND
 - 1.1 95MM VARIABLE ND TILTA FOR TILTA MIRAGE
 - 1.2 INSTALLING THE 95MMVARIABLE ND FOR TILTA MIRAGE
 - 1.3 NOTES:
 - 1.4 Manual control
- 2 Documents / Resources
- 3 Related Posts

95mm Variable ND

95MM VARIABLE ND TILTA FOR TILTA MIRAGE

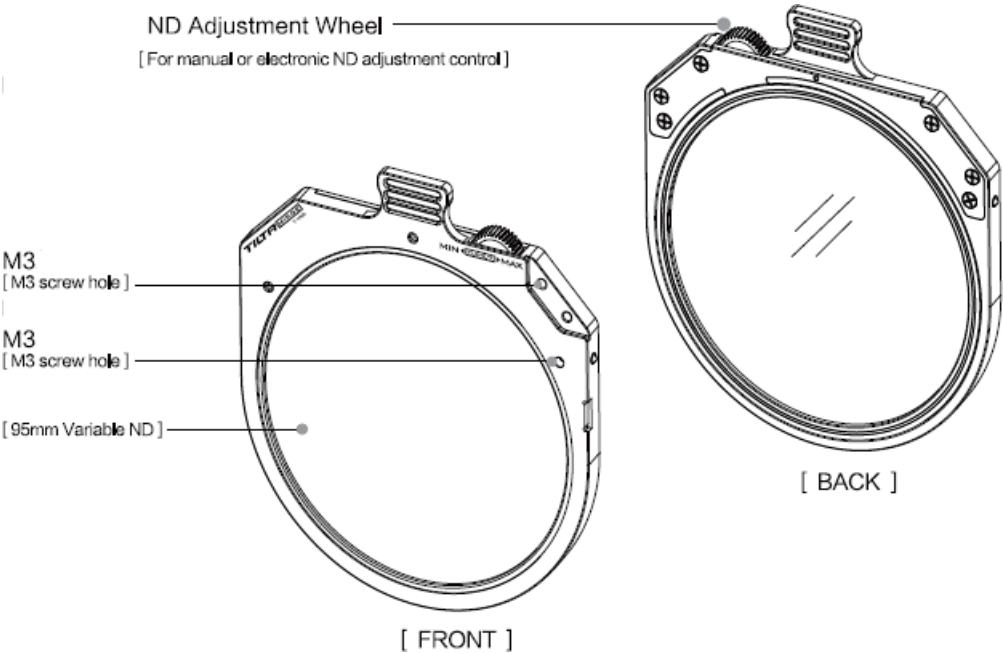

 INSTALLING THE 95MM VARIABLE ND FOR TILTA MIRAGE

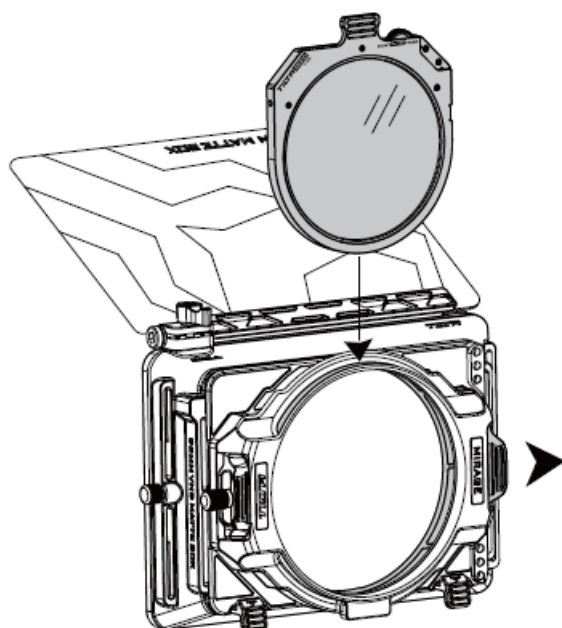


Inserting the 95mm variable ND filter tray.

When taking out the 95mm variable ND filter tray ,pull the locking toggle to release the filter tray , then remove it from the matte box.

NOTES:

a: When inserting the 95mm variable ND filter tray, please make sure to align the front of the filter tray to avoid any damage to the product.

 
b: After taking out the 95mm variable ND filter tray , please insert the 95mm circular filter tray.

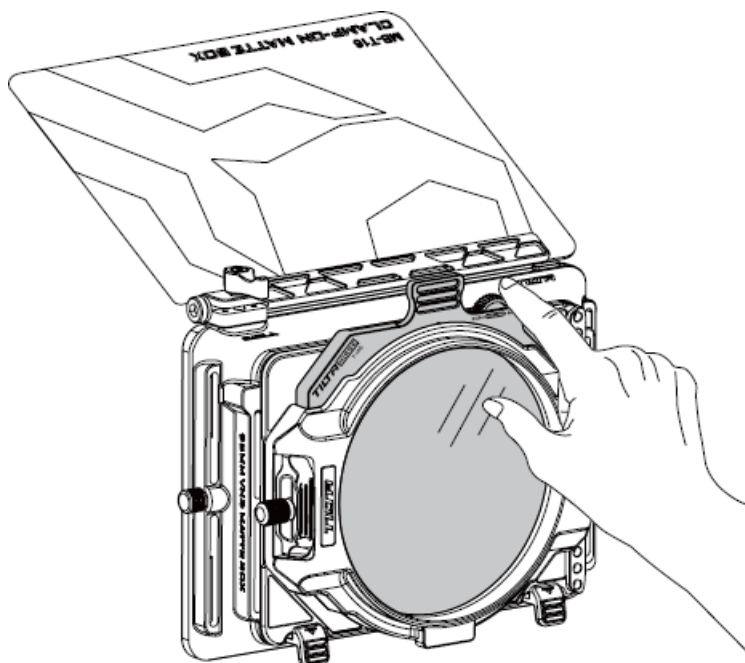

Manual control

Toggle the wheel located on the top right of the 95mm variable ND filter tray to adjust the ND for your exposure needs .

 Documents / Resources

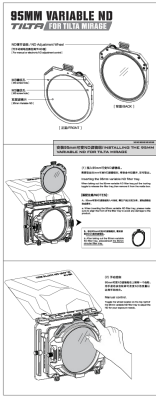

[TILTA 95mm Variable ND](#) [pdf] Instruction Manual
95mm Variable ND, 95mm Variable, Variable ND, Variable