

# Tilvision HC-001 Wireless Smart Camera Instruction Manual

Home » Tilvision » Tilvision HC-001 Wireless Smart Camera Instruction Manual





Instruction Manual
WIRELESS SMART CAMERA
Model No.: HC-001

Thank you for purchasing Tilvision Wireless Smart Camera. Please read this instruction manual before use to ensure safe operation.

This product contains multiple functions to protect your home: Monitoring: monitor your house anytime and anywhere. Motion Detection: receive a notification on your phone when a person has tripped the motion detector. 2-way Audio: talk to visitors in real time. Alarm: scare off trespassers and robbers. Expandable Storage: supports micro SD cards up to 128 GB. If you have any questions about your product, contact our customer service for

#### **Contents**

- 1 Included in Package:
- 2 Parts Names:
- 3 Downloading & Installing APP:
- **4 Account Registration:**
- 5 Adding a Device:
- **6 Important Notes Before**


Installation:


- 7 Installation:
- 8 Home Page:
- 9 APP Settings:
- 10 Monitor Page:
- 11 Device Settings
- 12 Battery Management:
- 13 Specifications:
- 14 Trouble Shooting:
- **15 FCC Regulatory Compliance:**
- 16 Documents / Resources
- 17 Related Posts

## Included in Package:

- 1 x Wireless Camera
- 1 x Instruction Manual
- 1 x Set of Screws
- 1 x Camera Stand
- 1 x USB Cable

#### **Parts Names:**

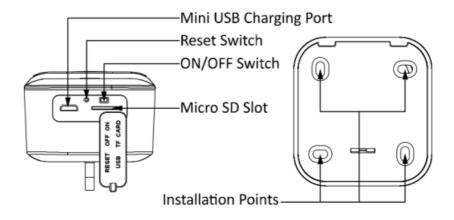

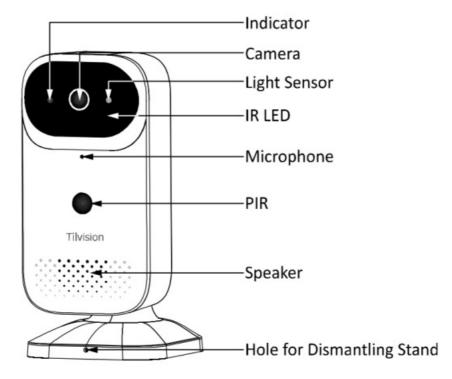


## **Downloading & Installing APP:**

Download the Television App in the Apple Appstore or Google Play Store, or scan the QR code below.




http://dl.tilvision.net/download/pages/tilvision.html

Once installed, open the app and allow the four permission requests shown below so the app works correctly on your device. (i05 requires these permissions when the relevant features are enabled).

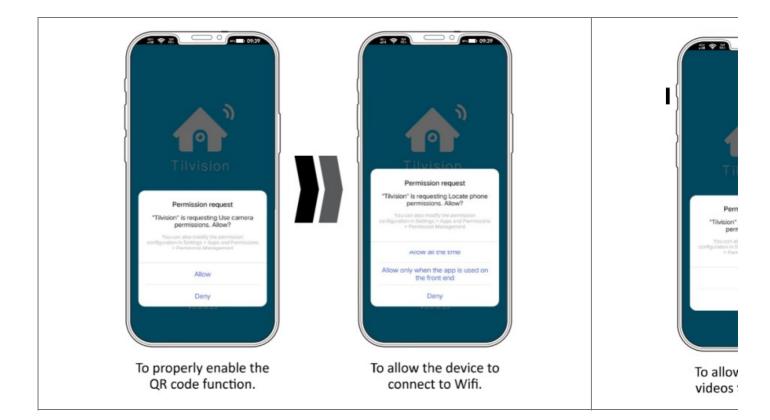

## **Account Registration:**

If this is your first Tilvision product, you will be asked to set up a new account. To set up an account: Open the Television app. Select "Register new user." Follow the in-app instructions to create a new account. If you already have another Tilvision device installed, simply open the Television app and sign in.

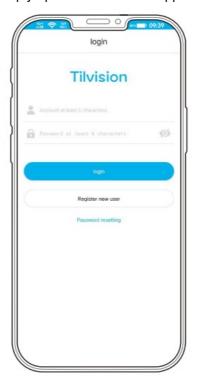

## Adding a Device:







Choose

HC-002

HC-003


HC-005


HC-010

Click "+".

Click "Setup Device".



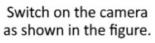


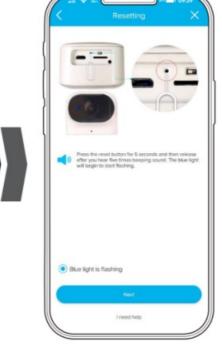

Reset the camera.





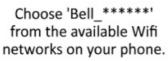



Close the Tilvision app then reopen it.



Choos




Confirm the Wifi settings.


## **Important Notes Before Installation:**

- The camera should not be facing strong lights.
- The camera should be placed in an area with a stable Will signal.
- Motion detection is best within 3 meters and within a 120° angle, so the camera should be mounted appropriately.
- The PIR motion sensor can be affected by temperature, so mount it in a position not affected by temperature.


### Installation:

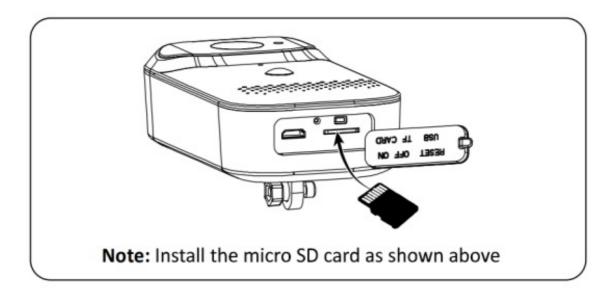

Place the camera on a table or on a wall, and adjust the angle as needed as shown below.

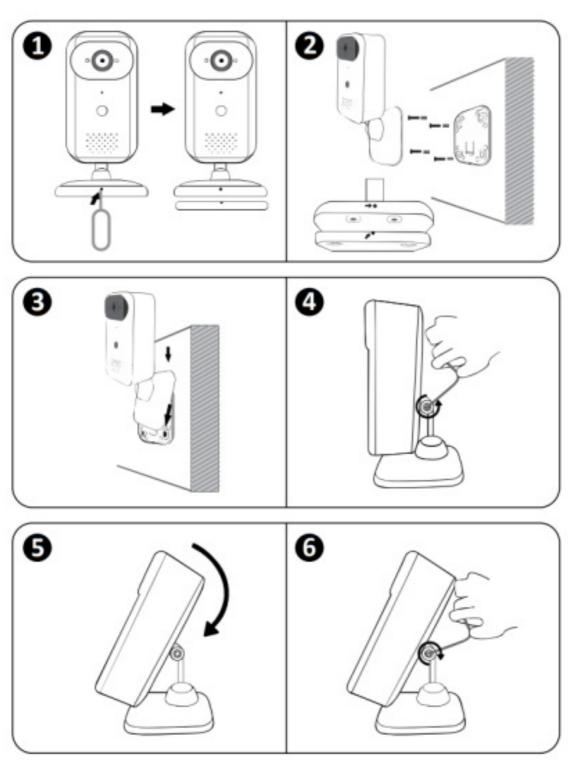


## **Home Page:**

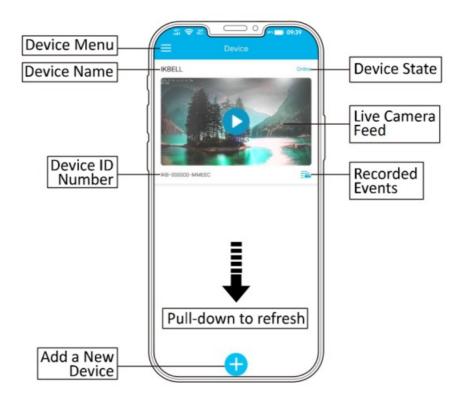

## **APP Settings:**

Note: While the functions are the same, there may be small interface differences between Android and i0S.

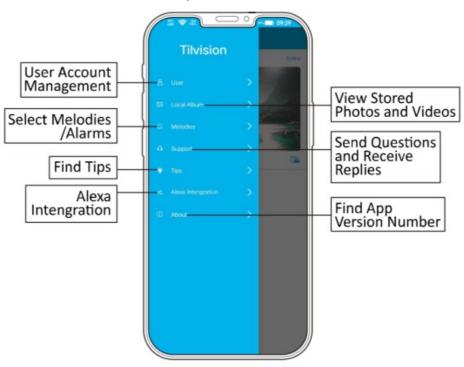

### 9.1. User Account Management






Specify the email address to receive Customer Service replies and for resetting passwords.

#### 9.3. Select Melodies/Alarms


#### 9.4. Send Questions and Receive Re



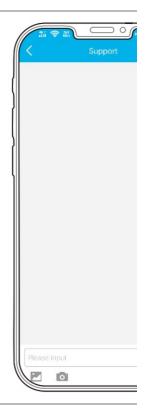


Note that this melody function is only for doorbell products and is not a functi on of this camera.


If your email address is added to you and this support page.

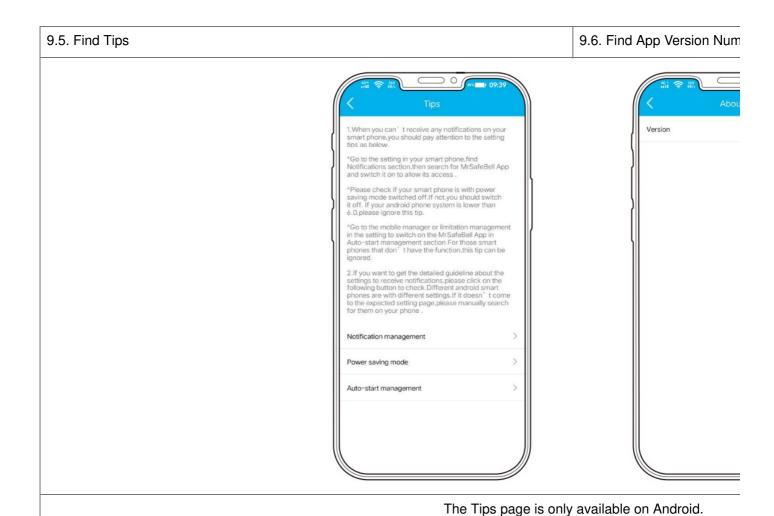

### **Monitor Page:**

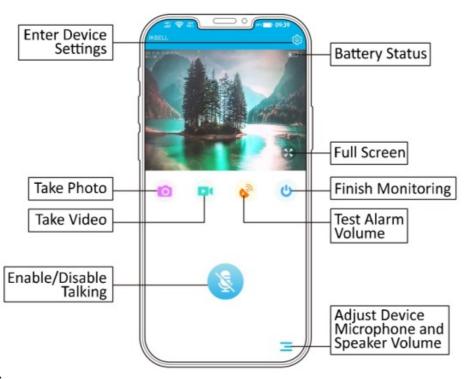

**Device Settings** 

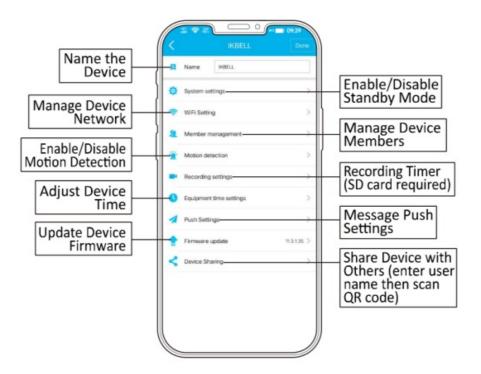

### **Battery Management:**

- This camera has a built-in rechargeable 5200 mAh 18650 battery. A full charge will last 2-4 months, assuming the camera wakes 10 times a day for 10 minutes each.
- Use a 2A/1A 5V charging adapter (not included). Charging time to full is 6-8 hours.
- An alert will appear on the monitoring interface when the remaining battery power is less than 20%.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

### **Specifications:**

Network	WIFI 802.11 b/g/n(2.4GHz)	
Audio	Full duplex	
Camera	1080P, 160 degree	
Micro SD	Max 128G	
Battery	Rechargeable 18650 2x2600mAH, DC5V/1A	
Detection Distance	Within 3.5 meters	
Environment	-20-30°C, 10-95% RH	
WiFi Distance	50 meters in the open area	

#### **Trouble Shooting:**

No.	Description	Solution
1	The device is shown as offline in App	Wake up the camera     Try a different network
2	No response after inserting SD card	Restart device
3	No response after reset	Restart the device then reset
4	Cannot change network	Change the network when the device is online     Delete the camera then connect it to a new network
5	No motion detection push notifications	Make sure notifications are both turned on in smartphon e settings and in Television App
6	Voice and video delay	Make sure the Wifi network is. functioning properly
7	An alarm photo does not show a person	•The person was moving faster than the 1 sec needed f or the camera to wake •An animal or object around 36°C passed by •There was an alarming error. Double-check for correct i nstallation.

## **FCC Regulatory Compliance:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **RF Exposure Compliance Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### **Documents / Resources**



<u>Tilvision HC-001 Wireless Smart Camera</u> [pdf] Instruction Manual HC-001, HC001, 2AAV8HC-001, 2AAV8HC001, HC-001, Wireless Smart Camera

Manuals+,