



## Time Drops Timing Push Button App User Manual

[Home](#) » [Time Drops](#) » Time Drops Timing Push Button App User Manual 

### Timing Push Button User manual

 
#### Install the APP



Method One: Scan the QR code on the package to download the 'Joyway Alarm' APP.

Method Two: Search 'Joyway Alarm' in the APP Store or Google Play to download APP.

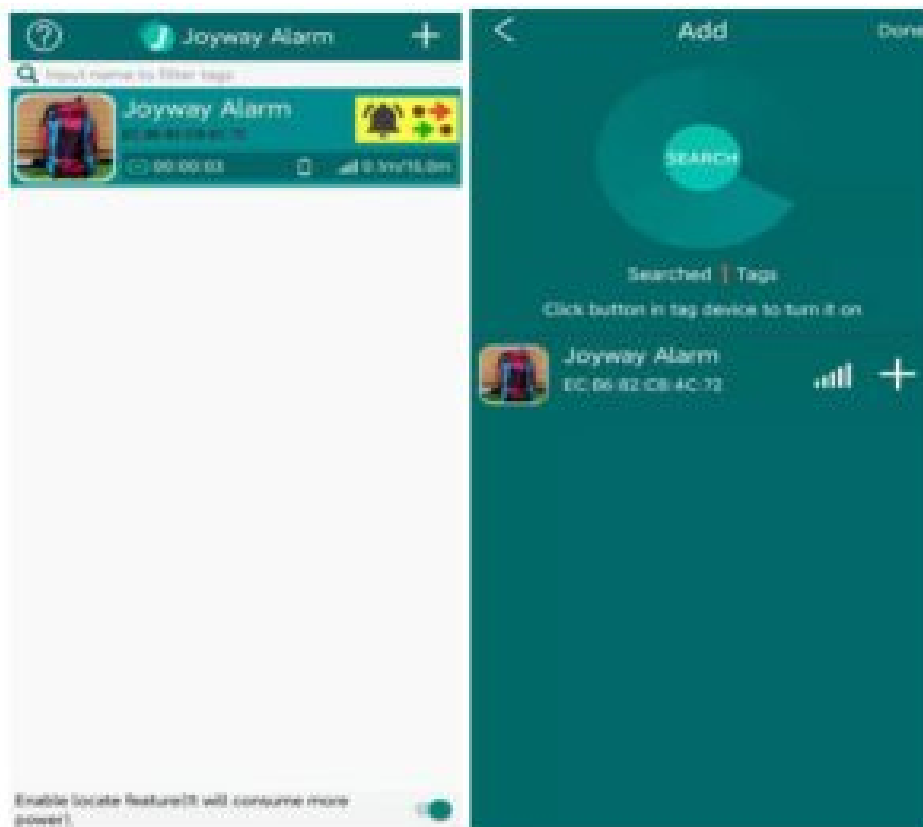 



To learn more, please visit <http://ala.joyway.cn> (including app, video, user guide, and so on).

#### Add Device Into App



- Turn on the Bluetooth of your smartphone.
- Start the Joyway Alarm app and make sure the device is close to the phone.
- In the top-right corner of the page, click  the button This will take you to the adding alarm page. This page shows all Joyway Alarms devices in range.
- To add a device, click  and tap the 'Done' button when Finished. This will take you back to the home page.
- Tap the added alarms on the home page, to access the details of each device.
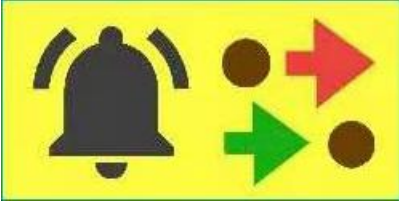
#### Alarm Switch:

	Alarm when a tag gets OUT / IN of preset distance.
	Alarm when a tag gets IN of preset distance.
	Alarm when a tag gets OUT of preset distance.
	No Alarm.

#### Using Joyway Alarm



Product Features: Find Phone, Take Photo, Real-time location(Phone location)



Press this button to make the device sound alarm



Press this button to enter the camera interface, double press the button on the device to take a picture  
App show the real-time location if you enable the locating function On the home page.



## Changing Avatar



- Tap the default picture to load the camera.  
You can then take a new photo.
- Select the area of the photo you want to use. Tap OK to Finish or Cancel to exit

## Changing the Name

- To change the name of the device, tap it to load the keyboard. Type in the new name, then press OK or Cancel.

## History

This automatic function will drop a pin on the map as soon as your device exit/enter the preset safe range. It will also record the address and event time. This will help you find back your belongings easily.



## SETTINGS

Alarm Time – How long phone will alarm for.

Safe distance – Set the preset distance.

Max History Count – Set the history record quantity, it can be 0.

 
Ring – Select the sound when the phone alarms.

Delete – Remove the selected device from the app.



## Replace Battery

Model: JW-1405

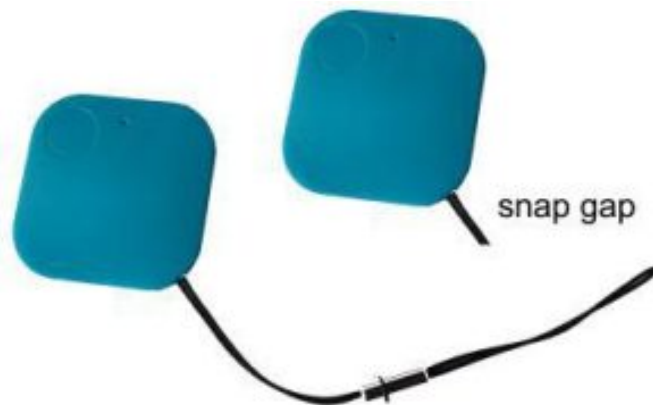

### Step 1

Open the top Cover from the Snap gap.



### Step 2

Place the CR2032 battery.

Make sure the negative side is facing down.



### Step 3

Install strap like the above picture.

**Model: PB-1**



### Step 1

Open the bottom battery cover by counterclockwise rotation.



### Step 2

Install CR2032 battery.

The negative side faces down.



### Step 3

Put back the bottom cover, clockwise rotation to close.

### RF features:

Bluetooth Range

Outdoor : 0-100 meters

Indoor: 0-10 meters

Operation Frequency: 2.4GHz

Max Transmitting Power: +4dBm

**NOTE:** The Bluetooth range could be affected by the environment.

### Mobile Device Supports

iOS devices: Must be iOS 8.0 or above, must support Bluetooth 4.0 or above.

Android devices: Must be Android version 4.3 or above, must support Bluetooth 4.0.

Requires 1 x CR2032 (included)

**ADULT NOVELTY PRODUCT-THIS THIS IS NOT A TOY.**

### Battery instructions:

Never recharge non-rechargeable batteries. Do not mix old and new batteries. Do not mix different types of batteries. Only use the recommended type of battery. Always insert the batteries using the correct polarity. Always remove exhausted batteries from the product. Do not short circuit terminals. Batteries are to be changed by an adult. It is advisable to remove batteries from the unit if the product is not to be used for long periods of time. WEEE products should be disposed of by handing it over at a designated collection point. For more information about where you can drop off your waste product for recycling please contact your local authority.

**Retain packaging for future reference.**

### FCC Caution.

(1) § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Contents**

- [1 Documents / Resources](#)
- [2 Related Posts](#)

**Documents / Resources**

	<p><a href="#">Time Drops Timing Push Button App</a> [pdf] User Manual PB001, 2AZ5T-PB001, 2AZ5TPB001, Timing Push Button App, Timing Push Button App</p>
---	---