



## TIME TIMER CR2205 Watch User Guide

[Home](#) » [TIME TIMER](#) » TIME TIMER CR2205 Watch User Guide 



User Guide



**GETTING STARTED WITH  
YOUR TIME TIMER®WATCH**


### Contents

- [1 CR2205 Watch](#)
- [2 Documents / Resources](#)
- [2.1 References](#)

The Time Timer® Watch uses a red disk to visually depict how much time remains. As time elapses clockwise, the disk gradually disappears, helping you see and manage time more effectively. For more detailed instructions and how to video, visit the [Time Timer Support Page](#).

## 1. INSERT BATTERY

The battery cover is located on the back of the Watch. Open battery cover with a coin by turning counter-clockwise. Lift tab, then insert battery (+ side up) under tab. Close battery cover by turning clockwise.

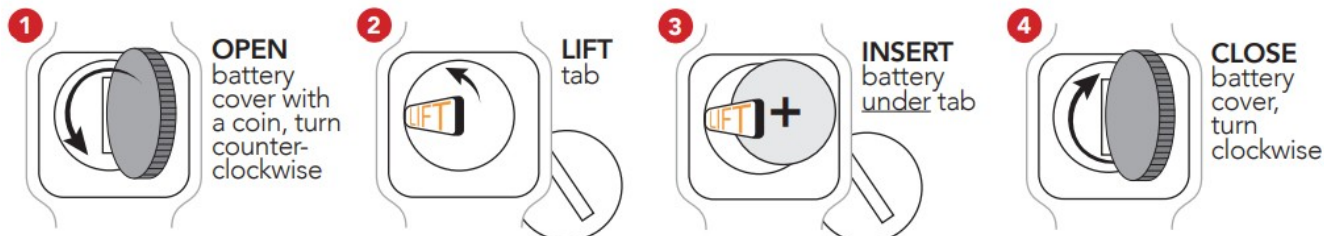

## 2. CHOOSE YOUR MODE

The Time Timer® Watch comes in three modes:

Clock, Time Timer, and Alarm. Toggle between modes by simply pressing the MODE button on the upper right.

## 3. QUICK START

- To set the Watch in any mode, press the SET button (top left) for 3 seconds.
- The first value will start to flash. Set that value by using the Start/Stop (-) and (+) Alarm.
- Once the value is to your liking, press the NEXT button on the top right.
- Continue setting until all values are selected.
- To exit at any time, press the SET button.



## CLOCK MODE

The Clock mode displays time of day using both a traditional analog clock face and a digital numeric display. If a Time Timer® is running or an Alarm has been set, a unique icon displays on the right side of the watch face. Time can be viewed in 12- or 24-hour format.



### TIME TIMER® MODE

The Time Timer® mode includes two options: 1) Original 60-minute Timer or 2) Custom Timer. The Custom Timer allows the disk to be scaled to represent any duration from 1 minute to 99 hours. A numeric display of time remaining is shown below the red disk. Alert can be set to audible, vibrate, both, or no alert. Timer can also be set to repeat upon completion.



### ALARM MODE

The Alarm mode can be set in 12- or 24 hour time formats. Set alert to activate alarm. Alert can be set to audible, vibrate, both, or no alert.

QUESTIONS? WE'RE HERE TO HELP: [AMZSUPPORT@TIMETIMER.COM](mailto:AMZSUPPORT@TIMETIMER.COM)

CR22205 Time Timer®

Amazon User Guide – Watch 10.19.2022

## Documents / Resources

	<a href="#">TIME TIMER CR22205 Watch [pdf]</a> User Guide CR22205, CR22205 Watch, Watch
--	--------------------------------------------------------------------------------------------

## References

- [User Manual](#)