 


TIME TIMER TT08B KITCHEN COUNTDOWN TIMER

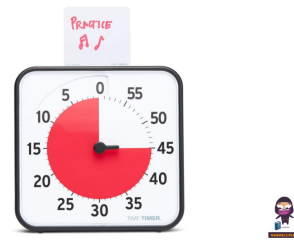

TIME TIMER TT08B Kitchen Countdown Timer User Guide

[Home](#) » [TIME TIMER](#) » TIME TIMER TT08B Kitchen Countdown Timer User Guide 

Contents

- [1 TIME TIMER TT08B Kitchen Countdown Timer](#)
- [2 USAGE INSTRUCTIONS](#)
- [3 Features](#)
- [4 Maintenance and care](#)
- [5 FREQUENTLY ASKED QUESTIONS](#)
- [6 VIDEO – PRODUCT OVERVIEW](#)
- [7 References](#)
- [8 Related Posts](#)



TIME TIMER TT08B Kitchen Countdown Timer



GETTING STARTED WITH YOUR TIME TIMER® ORIGINAL 2021 & BEYOND EDITIONS

Congratulations on the purchase of your new Time Timer Original 12", 8", or 3". We hope that it helps you make every moment count!

USAGE INSTRUCTIONS

- **INSTALL 1 OR 2 AA BATTERIES**

The battery compartment is located on the back of the Time Timer.

- 3" model requires 1 AA battery



- 8" and 12" models require 2 AA batteries




• CHOOSE YOUR SOUND PREFERENCE

The timer itself is quiet—no distracting ticking sound—but you can choose whether or not to have an alert sound when time is complete. Simply use the red on/off switch on the back of the timer to control audio alerts.




• SET YOUR TIMER

Use the center knob to turn the red disk counter-clockwise until you reach your chosen amount of time. Immediately, your new timer will begin to countdown, and a quick glance will reveal the time left thanks to the brightly colored disk and large, easy-to-read numbers.

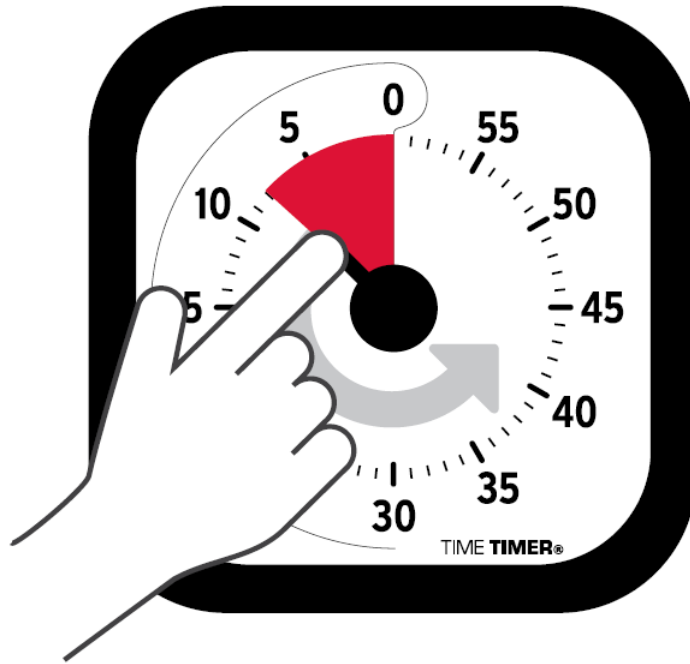

DRY ERASE ACTIVITY CARD

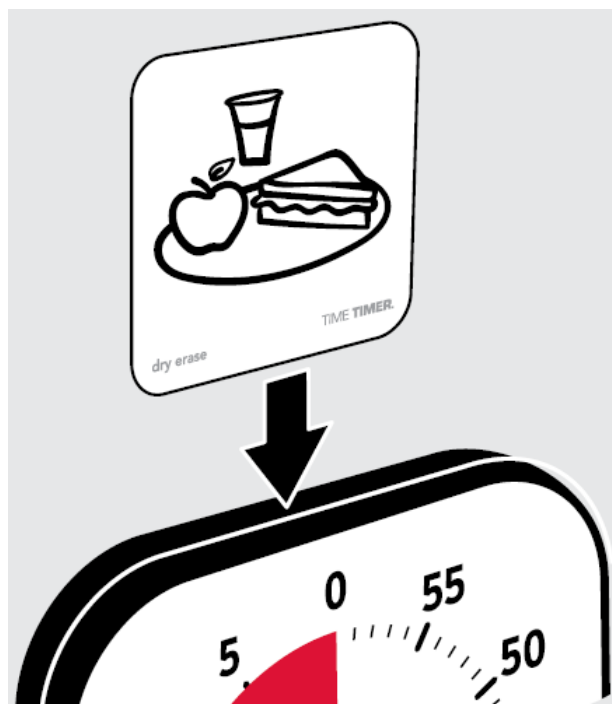

- The Dry Erase Activity Card, included in all new 2021 and beyond models of the Time Timer Original line-up, can be placed into the slot on the top of the timer for time-to-task management or visual schedules.

BATTERY RECOMMENDATIONS

- We recommend using high-quality, name-brand alkaline batteries to ensure accurate timing and longevity. You may use rechargeable batteries with Time Timer, but they may deplete more quickly than traditional batteries. If you do not plan to use your Time Timer for an extended period of time (several weeks or more), please remove the battery to avoid corrosion.

PRODUCT CARE

- Our timers are manufactured to be as durable as possible, but like many clocks and timers, they have a quartz crystal inside. This mechanism makes our products quiet, accurate and easy to use, but it also makes them sensitive to being dropped or thrown. Please use with care.

Features

- **Visual Timer:** Has a clear, visual clock device with a red disk that gets smaller as time goes on, which makes it easier to see how much time is left.
- **Large Dial:** The dial is easy to turn and lets you set the time quickly and accurately.
- **No-Tick Operation:** It works quietly and doesn't make a ticking sound, so it's less distracting.
- **Audible Alert:** Makes a loud noise to let you know when the time is up, so you don't miss it.
- It runs on a single AA battery, which makes it compact and easy to use anywhere.
- **30-Minute Duration:** It can be set for up to 30 minutes, which is good for many cooking and other time-sensitive jobs.
- **Strong Construction:** Made from long-lasting, high-quality materials that can handle a lot of use.
- **Magnetic Backing:** It has a magnetic back that makes it easy to stick to metal objects like ovens and freezers.
- **Size:** It's small and light, which makes it easy to carry and keep.
- **Clear Markings:** The clock has clear, easy-to-read numbers that make it easy to set the time.
- **Time Management Tool:** This is a great way to teach kids and adults how to handle their time well.
- **Uses Many Things:** Great for cooking, learning, working out, meetings, and more.
- With a simple, easy-to-understand layout, ergonomic design makes it easy to use.
- **Portable:** It's small and light, so it's easy to take with you and use in different places.
- **Easy Setup:** It's easy to set up and use, and you don't need many directions.

Maintenance and care

- **Clean Often:** Use a soft, wet cloth to wipe the timer clean of dust and dirt.
- **Avoid Water:** To keep the timer from breaking, don't put it in water or leave it in a place with too much wetness.
- **Check the Battery:** Check the battery box often for signs of rust or leaks, and if you find any, replace the battery.
- **How to Store It:** When not in use, keep the timer in a cool, dry place to keep it from getting damaged by the elements.
- **Be careful with this:** Be careful not to drop the timer or hit it hard so that it keeps working.
- **Quickly change the battery:** As soon as the alert sound gets quieter or the screen gets darker, you should replace the battery.
- **Stay away from extreme temperatures:** To keep the timer from breaking, keep it away from very hot or very cold temperatures.
- **Stay Away from Chemicals:** Do not touch the timer with strong chemicals or cleaning products that could damage it.
- **Regularly check:** Check the timer often for damage or signs of wear, and fix any problems right away.
- Clean the screen with a soft cloth to keep the surface from getting scratched.
- **Secure Battery Compartment:** Make sure the cover on the battery compartment is tightly shut to keep the

battery from moving.

- **Choose the Right Type of cell:** To keep the timer from breaking, only use the type of cell that comes with it.
- **Regular Testing:** Make sure the timer is working right by testing it from time to time.
- **Avoid Overuse:** To keep the timer from getting too hot, don't use it nonstop for long amounts of time without stopping.
- **Protect the Dial:** Be careful not to damage the internal parts when you turn the dial.

FREQUENTLY ASKED QUESTIONS

How do I activate the TIME TIMER TT08B Kitchen Countdown Timer?

To activate the TIME TIMER TT08B Kitchen Countdown Timer, simply press the start button located on the front of the device.

What are the dimensions of the TIME TIMER TT08B Kitchen Countdown Timer?

The TIME TIMER TT08B Kitchen Countdown Timer measures approximately 7.5 inches in length, 1.25 inches in width, and 7.5 inches in height, providing a compact yet visible display.

What is the weight of the TIME TIMER TT08B Kitchen Countdown Timer?

The TIME TIMER TT08B Kitchen Countdown Timer weighs 12.32 ounces, making it lightweight and easy to handle in kitchen settings.

What age group is the TIME TIMER TT08B Kitchen Countdown Timer suitable for?

The TIME TIMER TT08B Kitchen Countdown Timer is recommended for individuals aged 3 years and up, providing a user-friendly design suitable for both children and adults.

What are the three ways to display the TIME TIMER TT08B Kitchen Countdown Timer?

The TIME TIMER TT08B Kitchen Countdown Timer offers three display options: a visual countdown timer, an audible alarm, and a silent mode with no alarm.

How do I set the countdown time on the TIME TIMER TT08B Kitchen Countdown Timer?

To set the countdown time on the TIME TIMER TT08B Kitchen Countdown Timer, turn the dial located on the front of the device to the desired time duration.

What is the price of the TIME TIMER TT08B Kitchen Countdown Timer?

The TIME TIMER TT08B Kitchen Countdown Timer is priced at \$27.95, offering an affordable solution for time management needs in the kitchen and beyond.

Why is my TIME TIMER TT08B Kitchen Countdown Timer not starting the countdown?

If your TIME TIMER TT08B Kitchen Countdown Timer is not starting the countdown, ensure that the timer has been activated by pressing the start button. Also, check if the timer dial is set to the desired countdown duration.

What should I do if the display of my TIME TIMER TT08B Kitchen Countdown Timer is not showing the countdown numbers?

If the display of your TIME TIMER TT08B Kitchen Countdown Timer is not showing the countdown numbers, check the battery compartment to ensure the battery is properly inserted and has sufficient power.

How can I troubleshoot if the buttons on my TIME TIMER TT08B Kitchen Countdown Timer are unresponsive?

If the buttons on your TIME TIMER TT08B Kitchen Countdown Timer are unresponsive, try cleaning the button contacts with a soft cloth to remove any dirt or debris. If the issue persists, there may be a malfunction with the internal circuitry.

Why is the alarm of my TIME TIMER TT08B Kitchen Countdown Timer not sounding?

If the alarm of your TIME TIMER TT08B Kitchen Countdown Timer is not sounding, check the alarm settings to ensure it is enabled and set to the desired time. Also, check if the volume is set to an audible level.

What should I do if my TIME TIMER TT08B Kitchen Countdown Timer is not keeping accurate time?

If your TIME TIMER TT08B Kitchen Countdown Timer is not keeping accurate time, ensure that the battery is inserted correctly and is of good quality. If the issue continues, try resetting the timer to its default settings.

How can I troubleshoot if my TIME TIMER TT08B Kitchen Countdown Timer is freezing or displaying erratic behavior?

If your TIME TIMER TT08B Kitchen Countdown Timer is freezing or displaying erratic behavior, try resetting the timer by removing and reinserting the battery. If the issue persists, there may be a more significant underlying problem.

What should I do if the countdown on my TIME TIMER TT08B Kitchen Countdown Timer resets randomly?


If the countdown on your TIME TIMER TT08B Kitchen Countdown Timer resets randomly, check the battery contacts to ensure they are clean and secure. Reset the timer to the desired countdown duration and monitor its performance.

Why does my TIME TIMER TT08B Kitchen Countdown Timer emit a continuous beeping sound?

If your TIME TIMER TT08B Kitchen Countdown Timer emits a continuous beeping sound, check the alarm settings to ensure it is not set to repeat continuously. Adjust the alarm settings as needed. If the beeping

persists, try resetting the timer by removing and reinserting the battery.

VIDEO – PRODUCT OVERVIEW

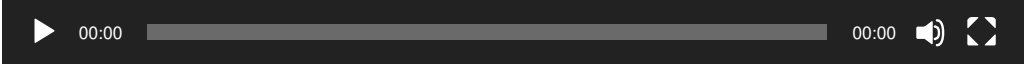

[Download the PDF link: TIME-TIMER-2020S / TIME-FM-05B-T100B-Kitchen User Guide Countdown-Timer-User-Guide.mp4](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.