 


**TIMEGUARD TS800N 24 Hour Plug-In Time Controller**

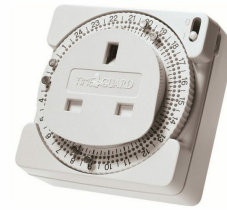

# TIMEGUARD TS800N 24 Hour Plug-In Time Controller Instruction Manual

 
[Home](#) » [TIMEGUARD](#) » TIMEGUARD TS800N 24 Hour Plug-In Time Controller Instruction Manual 

## Contents

- [1 TIMEGUARD TS800N 24 Hour Plug-In Time Controller](#)
- [2 Safety](#)
- [3 Technical Specifications](#)
- [4 Use With Discharge Lighting](#)
- [5 Operation](#)
- [6 3 Year Guarantee](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



**TIMEGUARD TS800N 24 Hour Plug-In Time Controller**

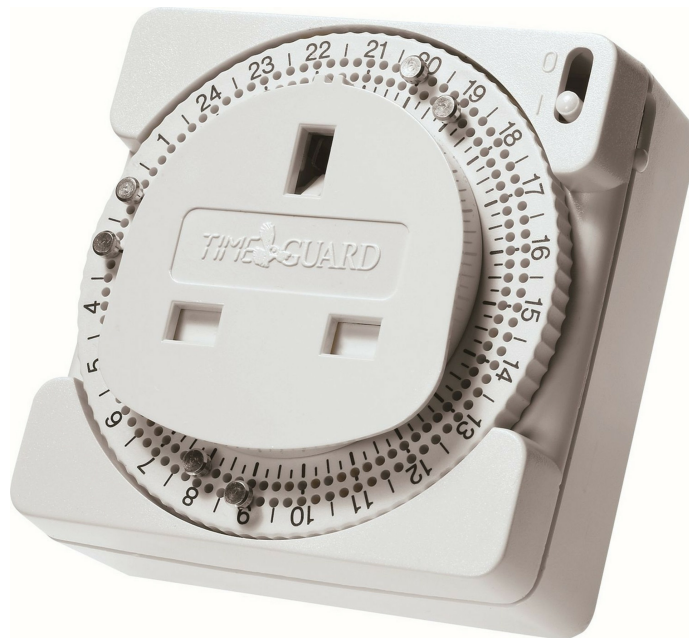

## General Information

These instructions should be read carefully and retained for further reference and maintenance.

## Safety

- Do not plug in any appliance that exceeds the capacity of the Timer.
- Always ensure the plug of any appliance is fully inserted into the timer outlet.
- If cleaning of the timer is required, remove it from mains power and wipe the timer with a dry cloth.
- Do not immerse in water or any other liquid.
- For indoor use only.

## Technical Specifications


- 230V AC 50 Hz
- **Switch Rating:**
  - 13A resistive (3kW) 400W Filament
  - Lighting 60W Fluorescent/CFL and LED Lighting
- **Programme:** 24 hour
- **Minimum setting interval:** 15 minutes
- **Minimum ON/OFF time between settings:** 30 minutes
- Up to 24 ON & OFF programmes per day (additional pins required).
- **Operating temperature:** 0°C to +40°C
- CE Approved
- **Manual Override:** Self-cancelling manual override to the next programme change.

**Note:** Not suitable for use with Discharge lighting.

## Use With Discharge Lighting

Certain washing machines require the power to be permanently connected so they cannot be controlled by the TS800N. This is also true of tumble dryers with push-button start.

 **Diagram A**

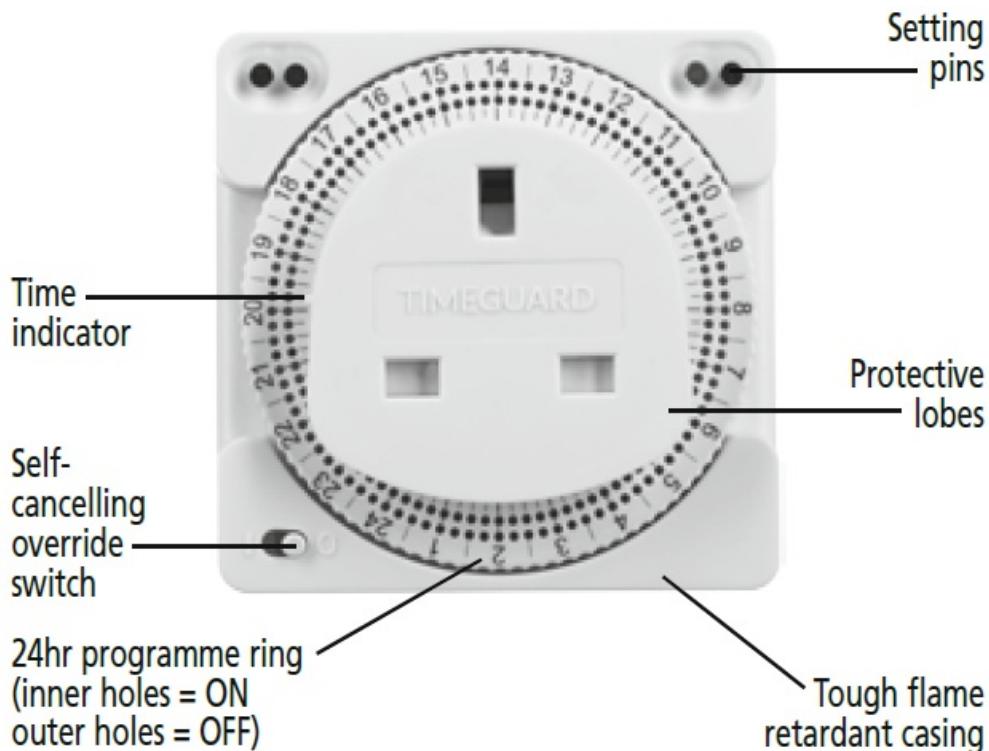

## Operation

- Decide what times you would like the time switch to switch ON and OFF.
- Insert a pin in the Inner Circle for an ON period.
- Insert a pin in the Outer Circle for an OFF period.

### Important:

The pins should be pushed fully home or they will catch on the underside of the protective lobes on the bottom of the front socket face (See diagram "A").

- The minimum switching interval is 30 minutes, and this can be increased in 15 minute steps.
- Set the correct time of day by rotating the dial clockwise, until the correct time is indicated by the Time indicator located on the left centre of the time switch (See diagram "A").
- Plug the time controller into a socket and switch the socket ON if necessary.
- Plug your appliance into the time controller and switch the appliance ON.

## Manual Override

- It is possible to manually override the programmed time by operating the override switch located in the bottom left-hand corner of the plug-in timer.
- 1 = ON. O = OFF.
- If you use the manual override it will self-cancel at the next programmed time.
- The override switch cannot be used within 15 minutes on either side of a switching time.

## Points to note

- Each time the time controller has carried out an automatic switching operation the manual switch cannot be operated for about 15 minutes before, and after, automatic switching because it will be mechanically locked for this period.
- If required you can programme your time controller to switch OFF only by inserting just a single pin. For many electrical appliances you can, therefore, program for OFF only to ensure that if you forget to switch the appliance off nothing can be damaged or unnecessary power used. When using this technique switch on by hand using the self-cancelling override switch.
- The Programme ring can be turned even when the time controller is operating. In case of a power failure, please re-adjust the time controller to the correct time of day, turning the dial in a clockwise direction.

### 3 Year Guarantee

In the unlikely event of this product becoming faulty due to defective material or manufacture within 3 years of the date of purchase, please return it to your supplier in the first year with proof of purchase and it will be replaced free of charge. For the second and third years or any difficulty in the first year telephone the helpline on 020 8450 0515.

#### Note:

Proof of purchase is required in all cases. For all eligible replacements (where agreed by Timeguard) the customer is responsible for all shipping/postage charges outside of the UK. All shipping costs are to be paid in advance before a replacement is sent out.

- If you experience problems, do not immediately return the unit to the store.
- Telephone the Timeguard Customer Helpline;


### HELPLINE

- 020 8450 0515
- email [helpline@timeguard.com](mailto:helpline@timeguard.com).


Qualified Customer Support Co-ordinators will be online to assist in resolving your query.

Deta Electrical Co Ltd Panattoni Park, Luton Road, Chalton, Bedfordshire, LU4 9TT Sales **Office:** 020 8452 1112 or email [csc@timeguard.com](mailto:csc@timeguard.com) [www.timeguard.com](http://www.timeguard.com). 67-058-539 (Issue 3).

### Documents / Resources

	<p><a href="#">TIMEGUARD TS800N 24 Hour Plug-In Time Controller</a> [pdf] Instruction Manual  TS800N 24 Hour Plug-In Time Controller, TS800N, 24 Hour Plug-In Time Controller, Plug-In Time Controller, Time Controller, Controller</p>
---	---

## References

-  [timeguard.com](https://timeguard.com)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.