




TIMEOUT H217 Digital Timer User Manual

[Home](#) » [TIMEOUT](#) » TIMEOUT H217 Digital Timer User Manual 

Time Out

TIMEOUT – USER MANUAL

Contents

- [1 H217 Digital Timer](#)
- [2 PRODUCT OVERVIEW:](#)
- [3 Product Specifications:](#)
- [4 Product Panel:](#)
- [5 HOW TO USE THE DIGITAL TIMER:](#)
- [6 INSTRUCTIONS FOR RECYCLING AND DISPOSAL:](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

H217 Digital Timer

PRODUCT OVERVIEW:


The H217/H218 is a digital timer with both count up and count down functions. It can be utilized as a countdown timer, ranging from 99 minutes and 55 seconds to zero, or as a stopwatch counting from zero to 99 minutes and 55 seconds. This versatile device is suitable for various activities such as kitchen cooking, baking, exercise, gym workouts, sports, games, classroom teaching, and more.

Product Specifications:

Operating Voltage: 4.5V (three AAA batteries)
Timing Range: 0-99 minutes, 55 seconds
Operating Temperature: 0°C-50°C

Volume Settings: Mute / 60-75dB / 80-90dB
Battery Life: 3 months
Color: Black
Product Size: Diameter 78 x 27.5mm
Weight: 70g

Product Panel:

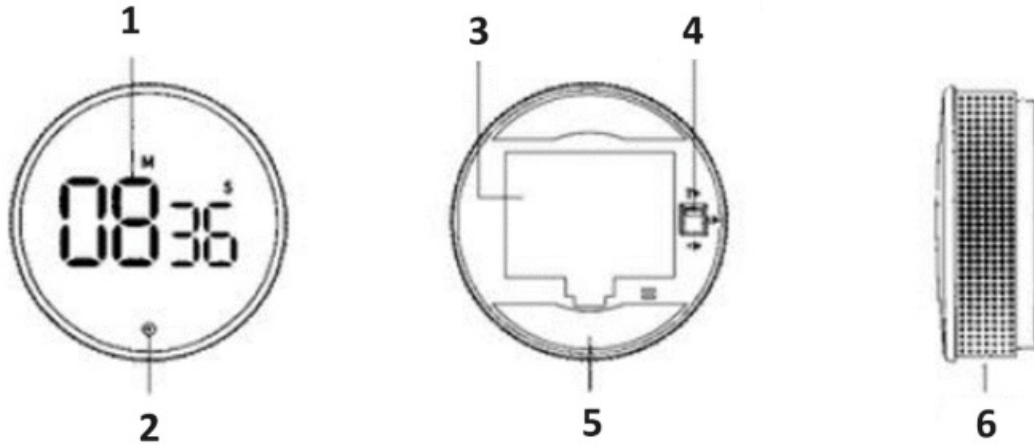

1. Large LED Display
2. Button
3. AAA Battery Slot
4. Volume Button
5. Magnet & Knob Non-slip Mat
6. Knob

HOW TO USE THE DIGITAL TIMER:


Using as a Countdown Timer:

1. Countdown Time Setting: Rotate the knob to set the desired time. Turning the knob to the right displays a positive sign (+), while turning it to the left shows a negative sign (-). Rotating the knob quickly at an angle greater than 60 degrees will rapidly increase or decrease the numbers accordingly.



2. Start/Stop Countdown: Once your countdown time is set, press the front button to start counting. Press the button again to pause counting. Press and hold the button to reset the timer to zero.
3. Buzzer Alarm: When the countdown reaches 00 minutes and 00 seconds, the timer will emit a buzzing sound, and the screen will blink. The alarm will last for 60 seconds and can be stopped by pressing the front button.

Use the volume button to adjust the alarm volume.

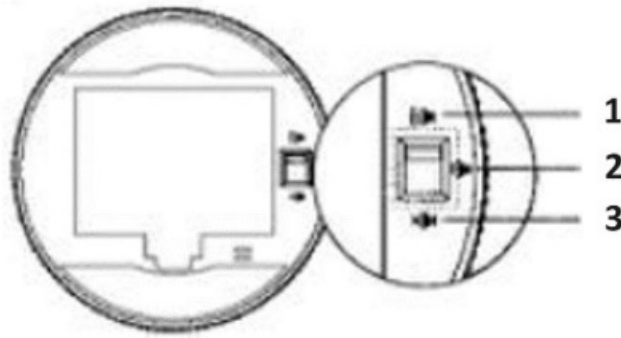

1. 80 – 90dB
2. 60 – 75dB
3. Mute

Recalling Last Countdown Time, Auto Sleep:

Press the front button once to recall the last countdown time. The timer will automatically enter sleep mode if there are no operations for 5 seconds, reducing brightness.

Using as a Stopwatch:

Press and hold the front button to reset the timer to zero. Once the display shows 00 minutes and 00 seconds, press the front button to activate the stopwatch function, which counts up to 99 minutes and 55 seconds.

Two Placement Methods:

1. The timer features two powerful magnets on the back for attachment to any iron surface, such as a fridge door or microwave oven.
2. Alternatively, it can be placed upright on a tabletop.

Battery Replacement:

The H217/H218 requires 3x AAA 1.5V batteries (not included). To replace the batteries, open the battery cover, remove the old batteries, and insert new ones correctly, ensuring proper polarity.

 
INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.

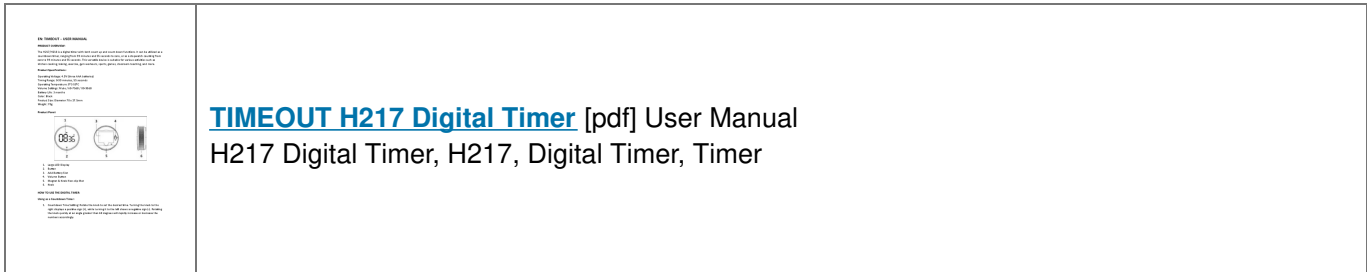

- User Manual

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.