



Timer CT01 Replacement Remote Control Instructions

[Home](#) » [Timer](#) » Timer CT01 Replacement Remote Control Instructions 

Timer CT01 Replacement Remote Control



Contents

- 1 [Product View](#)
- 2 [Buttons Description](#)
- 3 [customer support](#)
- 4 [Documents / Resources](#)
- 4.1 [References](#)
- 5 [Related Posts](#)

Product View









Buttons Description

Original	Replacement



5



6



7



5



6



7



8



9



0



8



9



0



Mute



Shift



Interval



Mute / Dimmer



Smart / List



 
Display / Media



Clock



Fav / Marker / PC



Up



Up



Left



Left



Enter



OK



Right



Right



Down



Down



 
Exit




Exit / Cancel / Clear



Edit

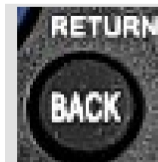

Back / Return

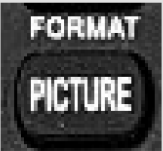 	F1		Sound / Title
	F2		Audio / Lang I/II
	F3		Subtitle / EQ
	F4		Eject / Surround
	F5		Picture / Format
	F6		Zoom / Size

	F7		Sleep / Timer
	F8		TV/Radio /
	F9		D.Menu / Top
	F10		Setup / OPT /
	F11		Text / Goto

customer support

<https://all-remote-controls.co.uk/en/Timer-Dig-6/1064815-95434-replacement-remote-control-for-TimerDig-6-CTS.html>



Documents / Resources



[Timer CT01 Replacement Remote Control](#) [pdf] Instructions

CT01 Replacement Remote Control, CT01, Replacement Remote Control, Remote Control

References

- [User Manual](#)