



# TIMETRAX Elite Prox Proximity Time Clock Terminal User Guide

[Home](#) » [TIMETRAX](#) » TIMETRAX Elite Prox Proximity Time Clock Terminal User Guide 



Elite Prox Proximity Time Clock Terminal

 


User Guide

## Contents

- [1 Contents](#)
- [2 Software Requirements](#)
- [3 Connect Terminal](#)
- [4 Download TimeTrax™ Software](#)
- [5 Mount Terminal](#)
- [6 Using Time Clock](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

## Contents

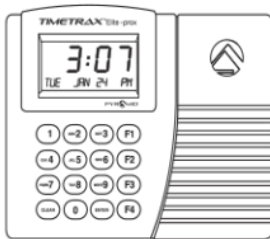


TTPROX EK  
Terminal



TTPROX EK Quick  
Start Guide



 Mounting  
Hardware

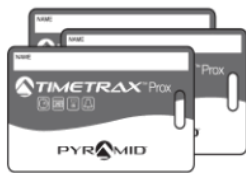


TimeTrax™  
Proximity Badges (15)  
Part #42454



Ethernet  
Cable  
(CAT5)




 Power  
Supply

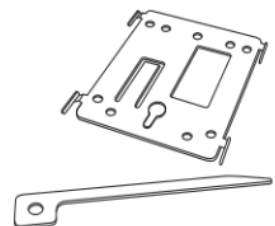

Security Bracket  
& Key

 What you will need.

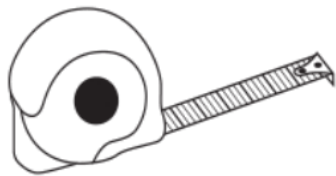

Tape Measure



Pencil



Phillips Head  
Screw Driver



Power Drill  
(Optional)



## Software Requirements



Single User installation,  
TimeTrax™ Time & Attendance software should not be installed on server PC's. Pyramid Time Systems does not support the use of TimeTrax™ software on a server PC. For Multi User Upgrade, call 888.479.7264 Ext. 1.



Windows 8 or above  
All Windows updates must be installed prior to software installation



Must be Primary Admin



Regional settings & hardware input in English

### IMPORTANT:

 
Please write down serial # located on back of terminal before mounting.  
Write your serial # here:



OPPDLAUBKN12236FFE



### Connect Terminal

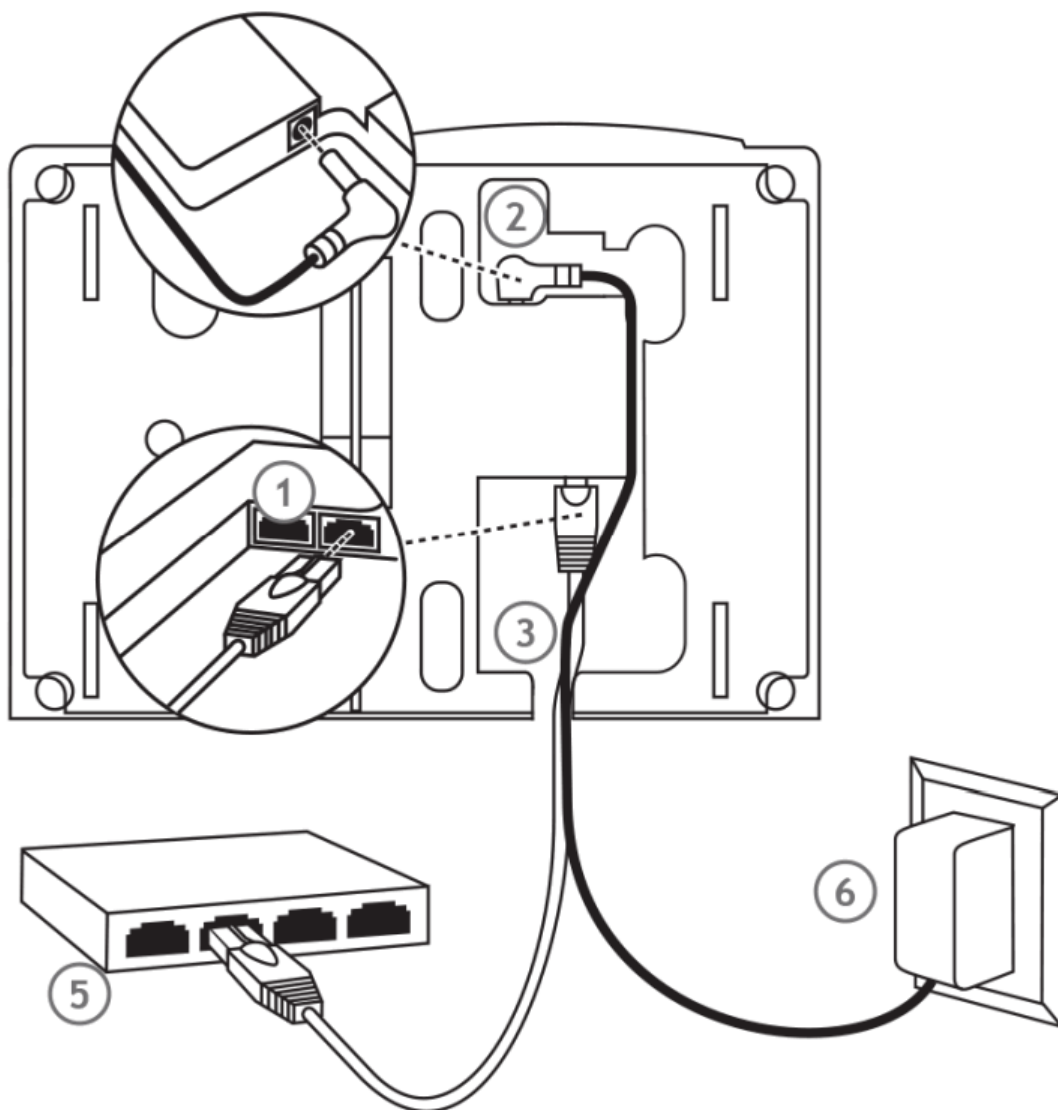

Connect either end of RJ45 cable into “ETHERNET” port located on the back of time clock terminal.  
Connect power supply into “POWER” port located in compartment on back of terminal.  
Route the cables through channel at base of terminal.  
Mount terminal (see instructions below).  
Plug free end of RJ45 cable into a DHCP network jack, router or switch.  
Plug power supply into outlet.



## Download TimeTrax™ Software

**PYRAMID** PRODUCTS RESOURCES SPECIFIER ABOUT NEWS STORE CONTACT

HOME / SUPPORT / DOWNLOADS / TIMETRAX DOWNLOAD

### TIMETRAX TIME & ATTENDANCE SOFTWARE DOWNLOAD

Please click on the secure link below for a safe, quick and simple install of TimeTrax™ Time & Attendance software.

Instructions:

1. Once the download is complete, open it.
2. Click on Extract (unzip).
3. Once the Extract is complete, Click on "TimeTrax.exe" and run. It may ask to "unzip", or "extract all". Please complete this step.
4. Reboot computer and clear cache when all above steps have been completed.

---

📎 timetrax\_5.0 (6 MB)

For further assistance, please contact us toll free at 888.479.7264, M-F 8am-5pmEST

1. Go to [pyramidthimesystems.com/support/downloads/timetrax](http://pyramidthimesystems.com/support/downloads/timetrax).
2. Click on TimeTrax™ software download.
3. Run software install. Installation may take 15 minutes or longer.

**PYRAMID** PRODUCTS RESOURCES SPECIFIER ABOUT NEWS STORE CONTACT

#### FEATURED RESOURCES

- User Guides
- Definitive Guides
- Product Brochures
- Product Catalog
- Synchronized Clock Specifications
- Videos

#### INDUSTRY APPLICATIONS

 
#### SUPPORT

- FAQs
- Tutorials
- Glossary
- Customer Support
- Downloads
- Upgrades
- Product Registration
- Warranty & Return
- Videos

1. Go to [pyramidthimesystems.com/support/videos/timetrax](http://pyramidthimesystems.com/support/videos/timetrax).
2. Click on TimeTrax™ Time & Attendance V5 Software/Start-up video.
3. Follow set-up instructions.



## Mount Terminal

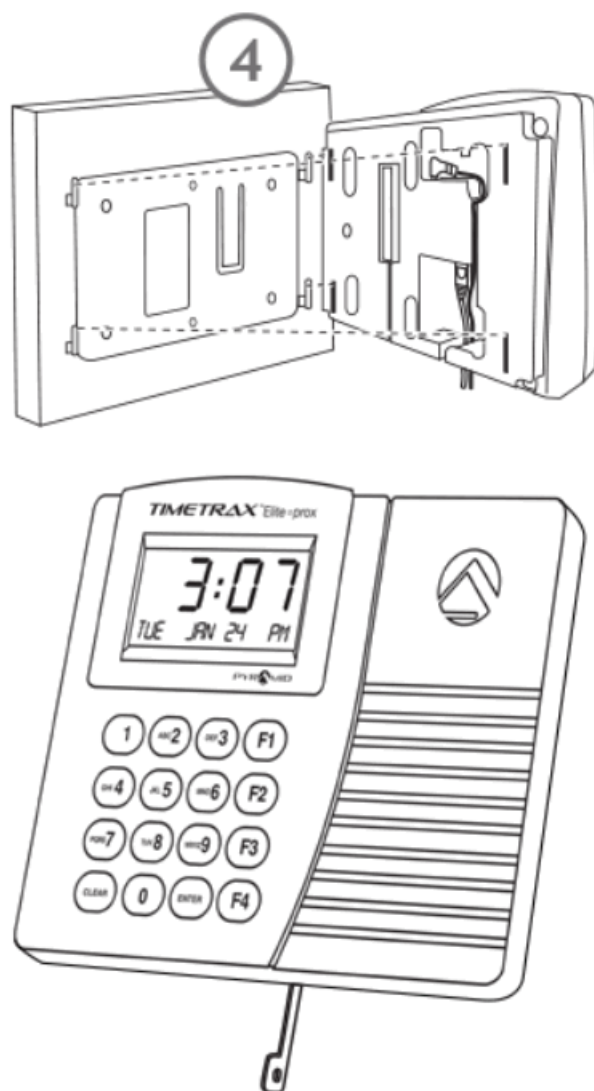

### To mount terminal.

- Install mounting bracket using provided mounting screws and drill template. Be sure the four metal tabs are facing upward.
- Additional holes are provided if mounting onto an electrical box.
- Push terminal onto mounting bracket aligning four tabs on bracket with four matching slots on back of terminal. Be sure to write down the terminal serial number before mounting.
- Slide terminal downward until locking tab clicks into place. When properly mounted, terminal cannot be removed from the bracket without using the included wall bracket release key to disengage locking tab.
- Cables may be routed through channel at base of terminal or by drilling a hole in the rectangular section of the mounting bracket and through the wall for concealing cables.

 
### To detach terminal.

- Insert key (tab facing outward) into narrow slot located on bottom of terminal to right of cable access cutout.
- Push key all the way up into slot. Key will slide easily until last 1/4 inch until some resistance from locking tab is felt.
- With key fully pushed into slot, slide the terminal up and off mounting bracket.



## Using Time Clock

Wave prox badge within two inches of target area.  
If employee badge number is successfully read, the time clock terminal will beep and the badge number will be displayed briefly on terminal screen.  
Employee records generated from prox badge punches are stored within the terminal. The terminal stores the last 6,000 punches before download is required. Depending upon usage, punches can be retrieved on a more or less frequent basis.

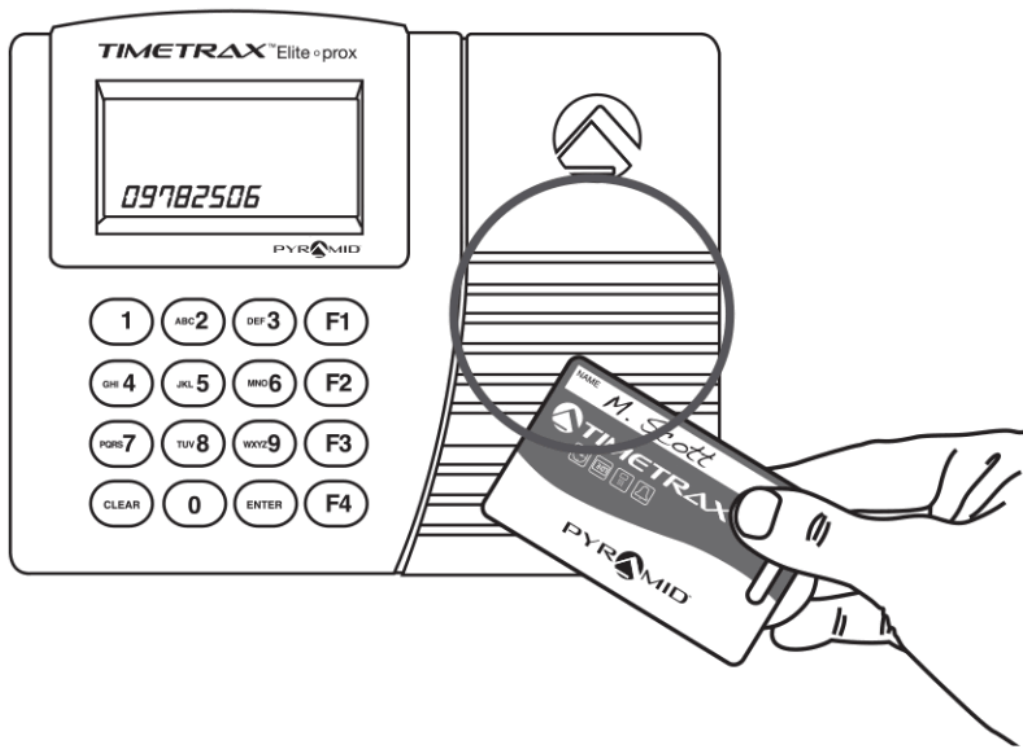


Technical Support and Warranty info at [pyramiddtimesystems.com/support/warranty-and-return](http://pyramiddtimesystems.com/support/warranty-and-return)

		
<b>Call us</b> 888.479.7264 EXT 1	<b>Chat online</b> <a href="http://pyramiddtimesystems.com">pyramiddtimesystems.com</a>	<b>Send us an email</b> <a href="mailto:customersupport@ptitime.com">customersupport@ptitime.com</a>



**Proximity Time Clock System**  
**TTPROXEK**

 Copyright © 2018 Pyramid Time Systems. All rights reserved.  
User Guide available at [pyramiddtimesystems.com/resources/user-guides](http://pyramiddtimesystems.com/resources/user-guides).

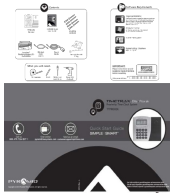

## **[TIMETRAX Elite Prox Proximity Time Clock Terminal](#) [pdf] User Guide**

Elite Prox Proximity Time Clock Terminal, Elite Prox, Proximity Time Clock Terminal, Time Clock Terminal, Clock Terminal, Clock, Terminal