

TIMEX T108 Cordless Alarm Clock with Jumbo Display Instruction Manual

Home » Timex » TIMEX T108 Cordless Alarm Clock with Jumbo Display Instruction Manual



Contents


- 1 TIMEX T108 Cordless Alarm Clock with Jumbo **Display**
- 2 TOP & BACK PANEL
- 3 Installing the Batteries
- 4 Display Icons
- **5 IMPORTANT SAFETY INSTRUCTIONS**
- **6 Battery Cautions and Tips**
- **7 FCC Information**
- 8 Documents / Resources
- 9 Related Posts




TIMEX T108 Cordless Alarm Clock with Jumbo Display



TOP & BACK PANEL

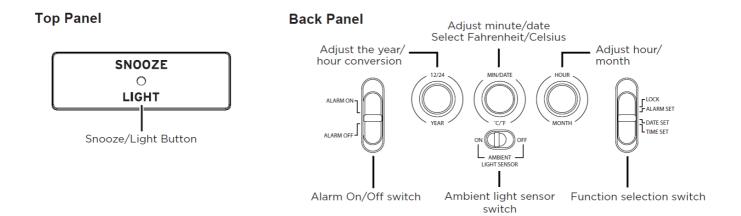


Installing the Batteries

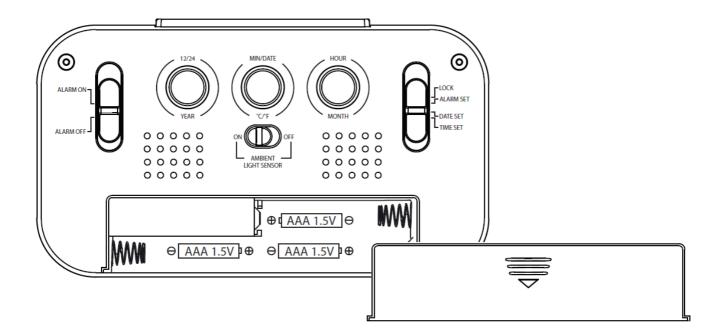

- Press in and push down on the battery door to open and remove the battery door.
- Install 3 new "AAA" batteries, matching the (+/-) markings in the battery compartment.
- · Replace the door.

Display Icons

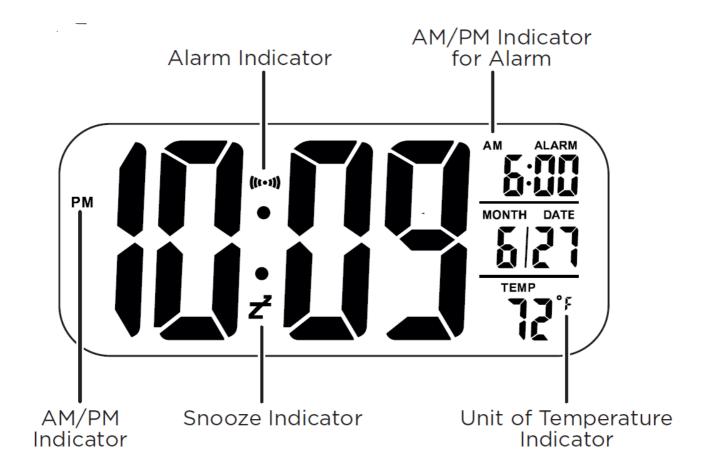

Setting the Unit of Temperature

- Device will come automatically set to Celsius.
- Press the '°C/°F' button to toggle between Celsius and Fahrenheit.

NOTE: Make sure 'Function selection switch" is in the 'LOCK' position prior to pressing '°C/°F' button.

Setting the Time

- Slide 'Function selection switch' to the 'TIME SET' position.
- Press the 'HOUR' and 'MIN/DATE' buttons to adjust the clock to your desired time.
- Once desired time is reached slide the 'Function selection switch' to the 'LOCK' position.

NOTE: If you are using the 12 hour clock, be sure to check the AM/PM indicator to make sure you are setting the clock for the right time of day.

Setting the Date

- Slide 'Function selection switch' to the 'DATE SET' position.
- Press the 'YEAR', 'MONTH', and 'MIN/DATE' buttons to adjust the clock to your desired date.
- Once desired date is reached slide the 'Function selection switch' to the 'LOCK' position.

12/24 Hour Display Settings

- Press the '12/24' button to toggle between 12 hour and 24 hour clock.
- When you are in the 12 hour mode the AM/PM indicator will appears to the left of the display.

NOTE: Make sure 'Function selection switch" is in the 'LOCK' position prior to pressing '12/24' button.

Setting the Alarm

- Slide "Function selection switch" to the 'ALARM SET' position.
- Press the 'HOUR' and 'MIN/DATE' buttons to adjust the clock to your desired wake time.
- Once desired wake time is reached slide the 'Function selection switch' to the 'LOCK' position.

NOTE: If you are using the 12 hour clock, be sure to check the AM/PM indicator to make sure you are setting the alarm for the right time of day.

Turning Alarm On and Off

- Slide 'Alarm On/Off Switch' to turn the alarm on and off. Alarm indicator will appear when alarm is turned on.
- When 'Alarm On/Off Switch' is in the 'ALARM ON' position the alarm will sound at desired time.
- Alarm will sound for 60 seconds or until snooze button is pressed or alarm is turned off.
- To turn alarm off slide 'Alarm On/Off Switch' to the 'ALARM OFF' position.

Snooze/Light Button

- When the alarm sound is ringing, press the 'SNOOZE/LIGHT' button to snooze the device for 5 minutes.
- Snooze indicator will flash when snooze is triggered.
- Press the 'SNOOZE/LIGHT' button at anytime to activate the backlight.

Light Sensor Switch

When in a dark room the display on the unit will automatically light up so the time can be read in the dark. To turn this feature o slide the 'Ambient light sensor switch' to the 'OFF' position.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective
 material should be placed between it and the furniture.

IMPORTANT SAFETY INSTRUCTIONS

Please heed all warnings, read and follow all instructions and keep these instructions handy for future reference.

- 1. Do not use this product near water.
- 2. Clean only with damp cloth. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.
- 3. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 4. Heat This product should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- 5. Only use attachments/accessories specified by the manufacturer.
- 6. Damage Requiring Service This product should be serviced by qualified service personnel when:

- Objects have fallen into or liquid has been spilled into the enclosure.
- The unit has been exposed to rain. The unit has been dropped or the enclosure damaged.
- The unit exhibits a marked change in performance or does not operate normally.
- 7. No naked flame sources, such as lighted candles, should be placed on this product.
- 8. Attention should be drawn to the environmental aspects of battery disposal. Many electronics retailers now recycle batteries and other electronic components at no charge. To find a drop-off location near you, visit www.call2recycle.com
- 9. This product is suitable for use in tropical and/or moderate climates.

WARNING:

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not dispose of batteries in the household trash or fire.

Battery Cautions and Tips

- Caution Risk of explosion if the battery is replaced by an incorrect type.
- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage, remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage
 comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30
 minutes. If skin contact occurs, wash skin with clean water for at least 15 minutes. Seek medical attention if
 any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Follow applicable laws and local regulations for the disposal and transportation of batteries

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limit for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used

in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED Information

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

© 2022 SDI Technologies, Inc. All rights reserved Questions? Visit www.timexaudio.com TIMEX trademark owned by Timex Group USA, Inc. in the US and other countries

Documents / Resources



TIMEX T108 Cordless Alarm Clock with Jumbo Display [pdf] Instruction Manual T108, T108 Cordless Alarm Clock with Jumbo Display, Cordless Alarm Clock with Jumbo Display, T108 Cordless Alarm Clock, Cordless Alarm Clock, Clock

Manuals+,