



# 001E130680 Tiny Dreamer 3-in-1 Musical Projector Instruction Manual

[Home](#) » [Tiny](#) » 001E130680 Tiny Dreamer 3-in-1 Musical Projector Instruction Manual 

## Contents

- 1 001E130680 Tiny Dreamer 3-in-1 Musical Projector
- 2 Product Information
- 3 Product Usage Instructions
- 4 IMPORTANT SAFETY INSTRUCTION
- 5 CLEANING AND STORAGE
- 6 CHARGING INFORMATION
- 7 MP3 PLAYER MODE
- 8 Button Operations
- 9 Using Instruction
- 10 Contact Information
- 11 Documents / Resources
  - 11.1 References

**Tiny Love**

001E130680 Tiny Dreamer 3-in-1 Musical Projector



## Product Information

- **Product Name:** Tiny Dreamer™ 3-in-1 Musical Projector
- **Model Number:** 130680E001
- **Brand:** Boho Chic™ – Product Type: Musical Projector
- **Usage:** Indoor use only
- **Compliance:** Complies with relevant and applicable EU and UK legislation
- **Transformer:** Class II safety isolating transformer
- **Cleaning:** Unplug the product before cleaning.

Use a damp cloth to wipe clean. Do not submerge any part of the product in water.

## Product Usage Instructions

### 1. Charging Information:

- The Projector Soother must be charged before being used for the first time.
- When the battery is almost empty, the red LED light will blink. Charge the Projector Soother when this happens.
- If the Projector Soother is not used for several days, the battery may discharge. Regularly charge using the provided USB cable.

### 2. MP3 Player Mode:

- The product can be used as an MP3 player.
- Follow the general usage instructions for charging and cleaning.
- More specific instructions for using the MP3 player mode may be provided in the complete user manual.




**Note:** The above information is a summary based on the text provided. For detailed usage instructions and safety guidelines, please refer to the complete user manual that came with the product.

## INSTRUCTION GUIDE

READ THE INSTRUCTIONS BEFORE USE, FOLLOW THEM AND KEEP THEM FOR REFERENCE.

### IMPORTANT SAFETY INSTRUCTION


#### WARNING

- This product is not a toy.
- Possible impact injury, keep out of baby's reach.
- Remove all packaging materials before use.
- Cord may be a strangulation hazard. Keep out of reach of children. Do not use with extension cords.
- **Warning.** Long cable. Strangulation hazard.
- Battery shall not be exposed to excessive heat as sunshine, fire or the like
- The light source cannot be replaced. The whole product has to be changed. 2 years Guarantee.
- This product must only be connected to a class II USB transformer marked with the symbol 
  - Moreover, this transformer must be a short circuit safety isolating transformer according to IEC 61558-2-6 or a toys transformer according to IEC 61558-2-7, and marked with the symbol 
- The transformer must be a safety isolating transformer marked with the symbol 

#### CAUTION

- Risk of explosion if the battery is replaced by an incorrect type
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

#### IMPORTANT

- This product is intended for visual stimulation and is not intended to be grasped by a child.
- Avoid dropping the soother or treating it roughly.
- Do not modify or alter this product in any way.
- Adapter not included.
- The rechargeable battery cannot be replaced.
- The product has to be charged out of the reach of children.
-  This product is a class III device.




- Product is for indoor use only.




- The product complies with the relevant and applicable EU legislation.




-  Responsible for end of life for recycling and disposal of Electrical and Electronic Equipment (EEE).



-  The product complies with the relevant and applicable UK legislation.




-  Use class II transformer.



-  A short circuit safety isolating transformer.

## CLEANING AND STORAGE

1. Unplug the product before cleaning.
2. Use a damp cloth to wipe clean.
3. DO NOT submerge any part of the product in water.

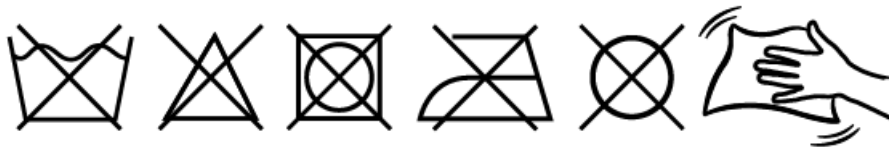



## CHARGING INFORMATION

1. The Projector Soother must be charged before being used for the first time:
  - Connect one end of the USB cable to the Projector Soother and the other to the USB transformer.
  - Leave for at least 4 hours to charge.
  - When charging the LED light will be red, when fully charged it turns green.
  - When fully charged, disconnect the USB cable and remove it from the Projector Soother.
2. When battery is almost empty, red LED light will blink. You are therefore advised to charge the Projector Soother.
3. If the Projector Soother is not used for several days, the battery may discharge. You are therefore advised to charge regularly using the USB cable provided.

## MP3 PLAYER MODE


- Connect one end of the USB cable to the Projector Soother and the other end to your computer.
- Make sure the Projector Soother is in “on” position.
- The MP3 Player is then automatically recognized.
- In this mode music and projection could not be turn on.
  
## Button Operations

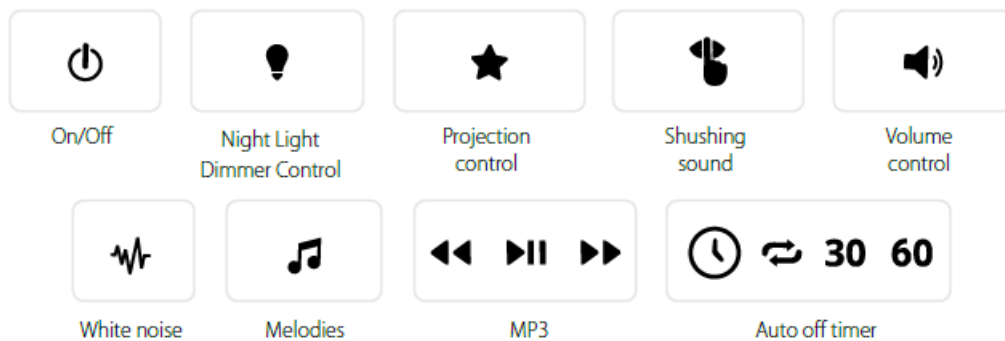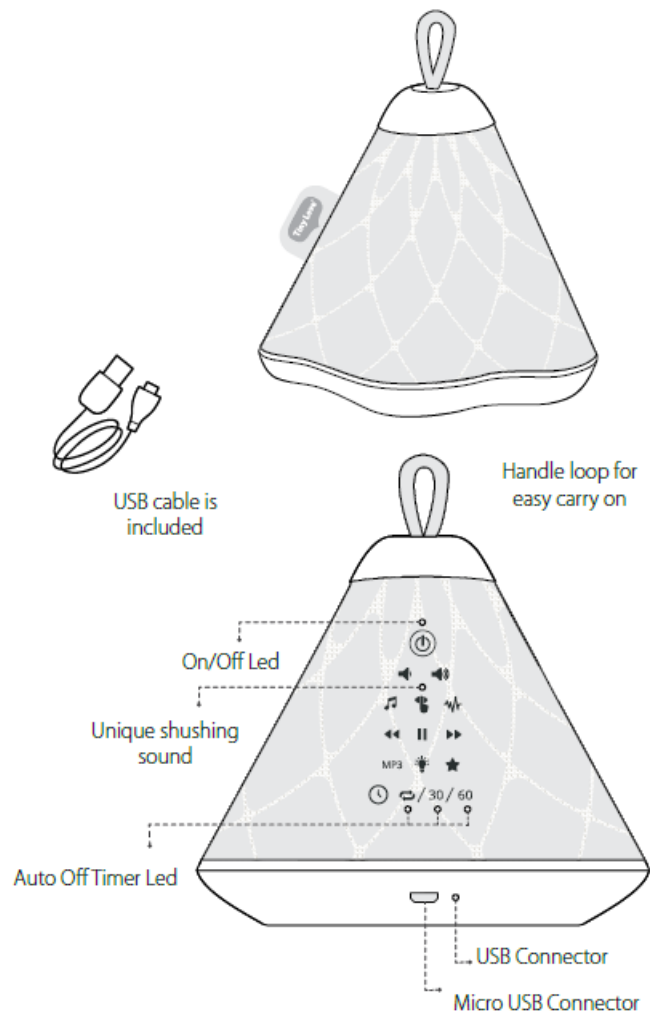


## Using Instruction
 
### 1. Projector Soother

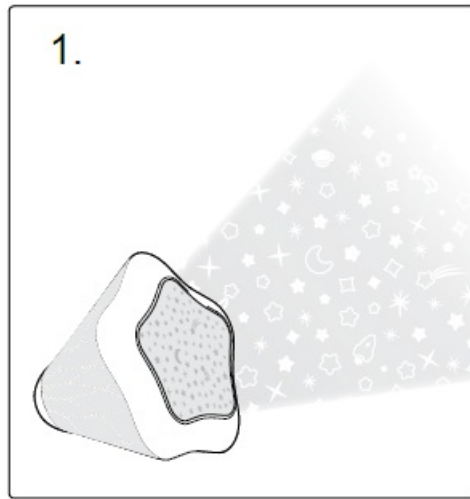

 2. Portable Lantern

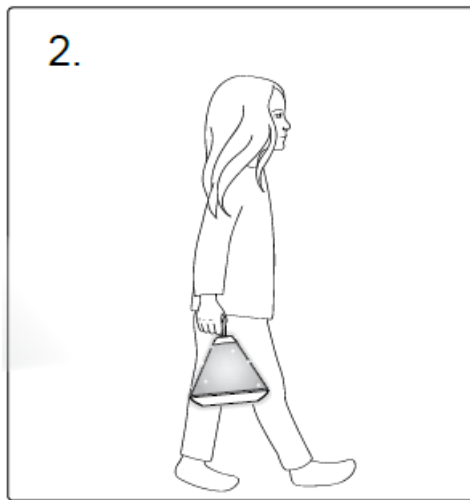

3. Glowing Night Light



## Contact Information

### Manufactured by:

Tiny Love Ltd. Korendijk 5, NL-5704 RD, Helmond.

For more developmental information and playing tips please visit:

[www.tinylove.com](http://www.tinylove.com).

## Documents / Resources



[Tiny 001E130680 Tiny Dreamer 3-in-1 Musical Projector](#) [pdf] Instruction Manual  
001E130680 Tiny Dreamer 3-in-1 Musical Projector, 001E130680, Tiny Dreamer 3-in-1 Musical Projector, Dreamer 3-in-1 Musical Projector, Musical Projector, Projector

## References

-  [Tiny Love Gymini® & Activity Mats, Baby Gear, Baby Mobiles & Soothers](#)

[Manuals+](#).