

# TMEZON MZ-IP-V1026TW 1080P IP WIFI Video Intercom User Guide

Home » TMEZON » TMEZON MZ-IP-V1026TW 1080P IP WIFI Video Intercom User Guide



#### **Contents**

- 1 TMEZON MZ-IP-V1026TW 1080P IP WIFI Video Intercom
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Description on indoor monitor
- 5 Wiring diagram
- 6 Note on wiring connection
- 7 Specification for indoor monitor
- 8 Install the indoor monitor
- 9 Specification for doorbell
- 10 Install the outdoor doorbell
- 11 Wiring diagram for outdoor doorbell
- 12 Operation mode for outdoor doorbell
- 13 Menu operation
- 14 Menu styles
- 15 Setting
- 16 Devices
- 17 Ring
- 18 Recording
- 19 Live view on the monitor
- 20 Connect network for the indoor monitor
- 21 Add the device by EZ mode
- 22 AP mode
- 23 Add the device by AP mode
- 24 Share device through home management
- 25 Function description for the app
- 26 Documents / Resources
  - 26.1 References
- **27 Related Posts**



#### TMEZON MZ-IP-V1026TW 1080P IP WIFI Video Intercom



#### **Product Information**

#### **Specifications**

Technical Support: ZZZWPH]RQFRP
Product Dimensions: 7XD6PDUW\$33
Weight: \$+'79,&9,035HVROXWLRQ

Model Number: 0DQXIDFWXUHU=KXKDL7PH]RQ7HFKQRORJ&R/LPLWHG

Power Source: =KXKDL&LW\*XDQJGRQJ&KLQD
 Operating Temperature: -40 to 70 degrees Celsius

### **Product Usage Instructions**

### Step 1: Unpacking

When you receive the product, carefully remove it from the packaging.

### **Step 2: Power Connection**

Connect the power cord to the designated power outlet. Make sure the voltage matches the specifications mentioned in the user manual.

## Step 3: Setting Up

Follow the instructions provided in the user manual to set up the product. This may involve installing software, configuring settings, or connecting to a network.

#### **Step 4: Product Operation**

Once the product is set up, refer to the user manual for detailed instructions on how to operate it. Familiarize yourself with the different features and functions of the product.

### **Step 5: Maintenance and Care**

To ensure optimal performance and longevity of the product, perform regular maintenance as recommended in the user manual. Keep the product clean and protected from dust and moisture.


## Frequently Asked Questions (FAQ)


- Q: Where can I find technical support?
  - A: For technical support, please visit ZZZWPH]RQFRP or contact our customer service hotline.
- Q: What is the operating temperature range of the product?
  - A: The product can operate within a temperature range of -40 to 70 degrees Celsius.


# **Description on indoor monitor**





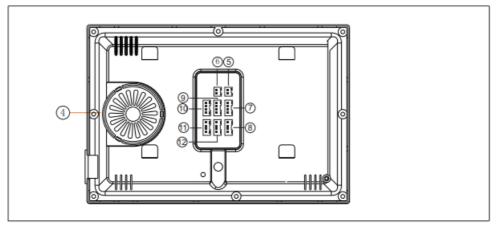

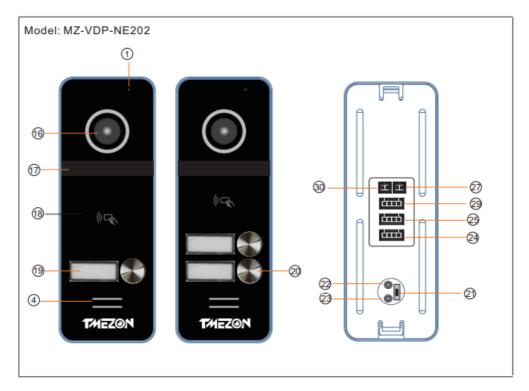

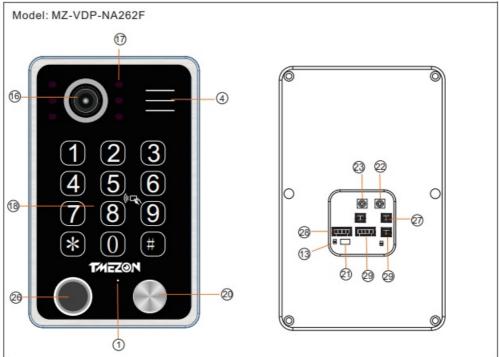


- 1. Microphone
- 2. SD card slot
- 3. TFTLCD
- 4. Speaker
- 5. Power interface for the monitor: DC-IN: 12V-15V
- 6. Independent Unlock
- 7. IN (Connect the Slave monitor)
- 8. OUT (Connect the next indoor monitor)
- 9. CAM1
- 10. DOOR1
- 11. DOOR2


- 12. CAM2
- 13. Status indicator
- 14. DOOR1 status indicator
- 15. DOOR2 status indicator
- 16. Lens/Camera
- 17. IR-LED
- 18. RFID-card induction area
- 19. Nameplate display area
- 20. Call button
- 21. Set button
- 22. Door unlock delay adjustment
- 23. Speaker volume adjuster
- 24. Connect to Monitor 1
- 25. Connect to Monitor 2
- 26. Fingerprint sensing area
- 27. Port for EXIT Switch
- 28. Connect to the monitor
- 29. Connect to the doorlock
- 30. Power interface for the doorbell: DC-IN: 12V-15V

# Wiring diagram


### 1\*10" Monitor+1\* Outdoor doorbell

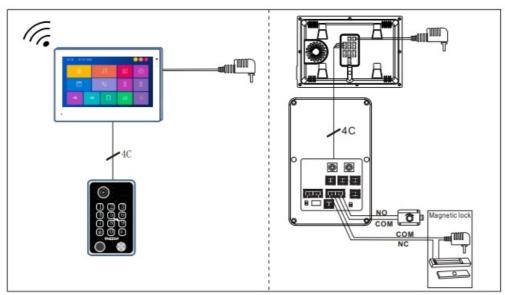


# 2 \*7" monitors +1\* Outdoor doorbell

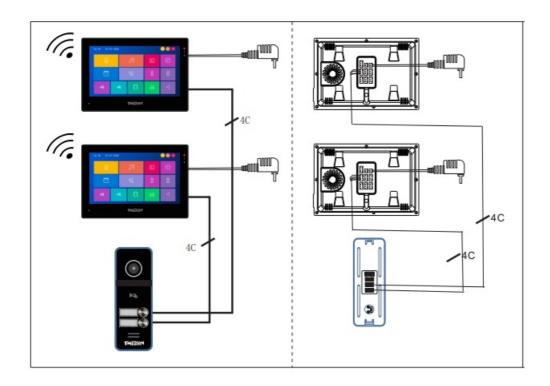

# 1 Master Monitor+5 slave monitors+2 Outdoor doorbells + 2 CCTV Cameras

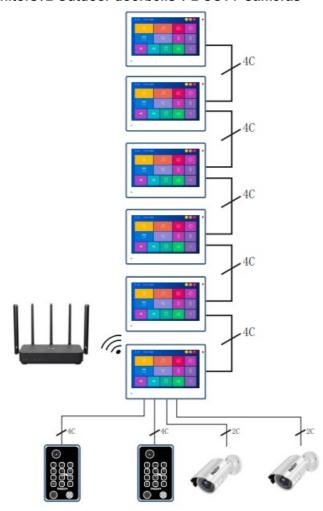

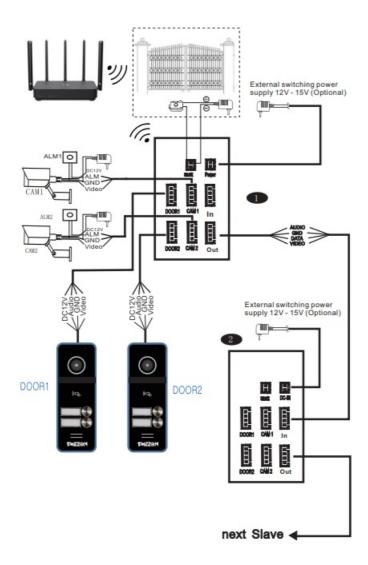

## Note on wiring connection

Please pay attention to the name marked on the sticker of the machine to avoid wrong connoction. virno rogurromonts the actuar o focrand the guanty of wire rod has the vory old relations

- 4 core ordinary unshielded and shielded wiring cable:
- The effective distance from the outdoor camera to the furthest indoor monitor:
  - Transmission <30m (4×0 4mm
  - Transmission <60m (4×0.65mme



• sat vou want to extend the distance to more than oum. it is best to choose thick cooper core cable, shielded wire or 3-core ordinary unshielded wire + 75-3 video cable. Connect the shield terminal GND

## Three-wire unshielded cable + SYV75-3 video cable



### Integrated video surveillance cable with power cord(2×0.5mm' +75-3)



• If user wants to use CAT5 or CAT6 network cable.effective distance from the outdoor camera to the furthest indoor monitor will be limited.

For unshielded network cable, the distance will be up to 20m.

For shielded network cable, the distance will be up to 40m.

So CAT5 or CAT6 network cable is not recommended.

CAT5 or CAT6 network cable consists of 4 pairs of twisted pairs(8 wires), here one pair of twisted pair will be used as one cable. Green &White+Green, Brown&White + Brown, Orange&White+Orange, Blue&White+ Blue.




If it is a shielded wire, it must be connected to GND.

# Specification for indoor monitor

Display screen	7" / 10. 1"
Definition	1024x600x3RGB
Standard	PAL/NTSC
Calling mode	Two-way conversation
Calling time	>120S
Standby current	Max 300mA
Work current	Max 800mA
Power supply	External switching power Supply(DC12V-15V)Optional
Work temperature	0~+50°C
Installation way	Surface mounting
SD Max capacity	128GB(FAT) ≽Class10
Video format	AHD/CVI/TVI/CVBS


#### Install the indoor monitor

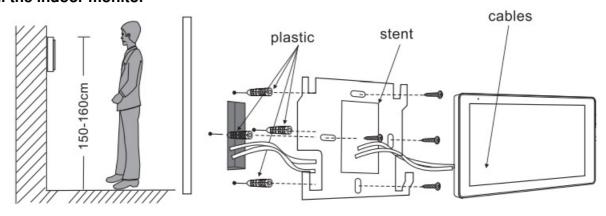



# Specification for doorbell


Sensor area	1/2.9"
Resolution	1920 X1080
Standard	PAL/NTSC
View angle	150°
Standby current	Max60mA
Work current	Max200mA
Power supply	DC12V
Work temperature	-40~+50°C
Password capacity	Max 200PCS
RFID card capacity	Max 200PCS (IC card, 13.56Mhz)
Fingerprint capacity	Max 200PCS

### Install the outdoor doorbell

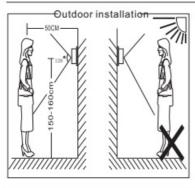

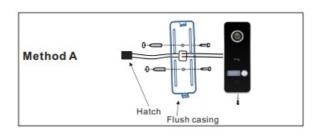

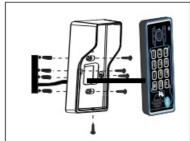


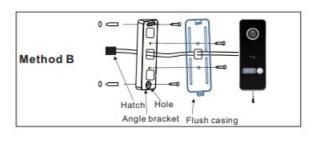

- 1. Please be far from the devices with intense radiation: TV, DVR, etc.
- 2. Do not disassemble privately to avoid the electric shock.
- 3. Do not drop, shake or knock the device, otherwise will damage the elements.
- 4. Choose the best position to install, the horizontal view is 150cm.
- 5. Please power down before installation.
- 6. Keep at a distance of more than 30cm with AC power to avoid interference.
- 7. Away from the water, magnetic field and chemicals.


# Wiring diagram for outdoor doorbell

Model: MZ-VDP-NE201

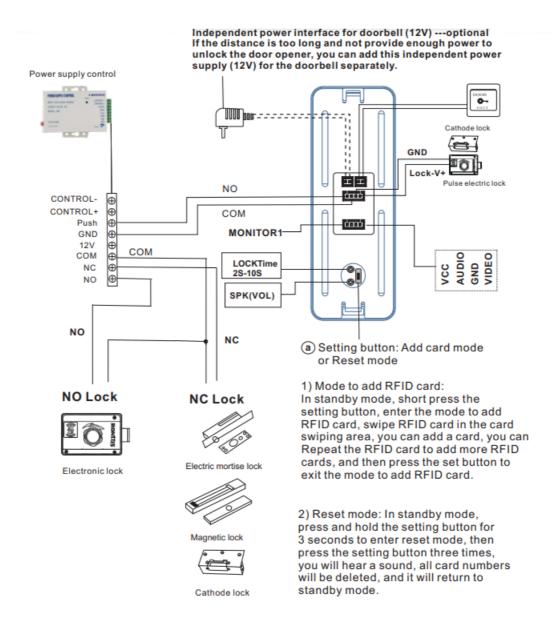


- Mode to add RFID card: In standby mode, short press the setting button, enter the mode to add RFID card, swipe RFID card in the card swiping area, you can add a card, you can Repeat the RFID card to add more RFID cards, and then press the set button to exitthe mode oadoreD cares
- 2. Reset mode: In standby mode, press and hold the setting button for 3 seconds to enter reset mode, then press the setting button three times, you will hear a sound, all card numbers will be deleted, and it will return to standoy modes

Model: MZ-VDP-NE202

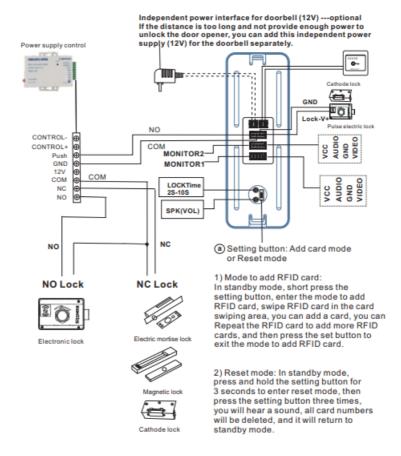


- 1. Mode to add RFID card: In standby mode, short press the exit the mode to add RFID card.
- 2. Read hold line sening button tor 3 seconds to enter reset mode, then You will heartsout a hard numbers deleted, and it will return to standby mode.

Model: MZ-VDP-NA262F

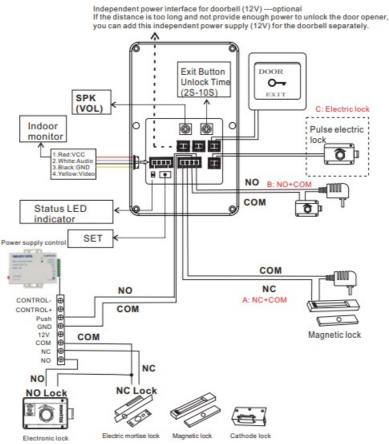

- 1. Type A: NC+COM, it requires extra power supply for the lock itself only
- 2. Type B: NO+COM, it requires extra power supply for the lock itself only
- 3. Type C: For long distance connection between the monitor and the outdoor station, in case outdoor station can not get enough power from the monitor for normal working. it is suggested to provide DC12V power supply to the Power-In terminal, here the doorlock ise rooes horneeo extra poover suoor.
- 4. Reset to factory setting: In standby mode, press and hold the setting button for 3 seconds to enter reset mode. then press the setting button three times. vou will hear a sound. all configurations of RFID cards, fingerprints and password will be deleted, the doorbell will return to standby mode.

### Operation mode for outdoor doorbell

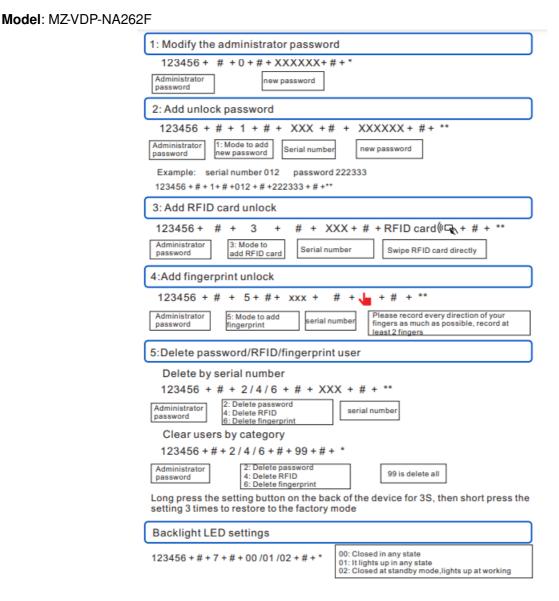

# Menu operation



1	<u> </u>	Red means that motion detection of this channel is turned on, Gray means that motion detection of this channel is turned off
2		1: At home mode, normal working state. Notification will be pushed to the mobile phone. 2: Not at home mode, directly open the message reminder, visitors can record the message with video. Notification will also be pushed to the mobile phone. 3: Sleep mode: There will be no ringing inside and outside. The notification will be pushed to the mobile phone when the doorbell is pressed
3	* •	Network connection status indication
4		Call log files.
5		Message record files.
6	\$2 <sup>C</sup>	Motion detection record files.
7	T T	Alarm log files.

# Menu styles

# Win10 style



# Android style





Three styles of interface can be set through the menu. No need to restart the monitor

## Setting



- 1. Please format the SD card with the device.
- 2. Restore factory settings: All parameters are restored to factory mode. Note that Restore factor settings: A parameters are restored to factory mode. Note that TuyaSmart's device must be deleted together before it can be used again, otherwise it cannot be added and used by other accounts.
- 3. The Device ID is an important configuration of the equipment in the system. It must be configured correctly. Otherwise it will not work properly. If the current device is connected to the Outdoor unit1, Device ID must be set to 1, and the others Slave monitors must be set 2/3/4/5/6, then work normally.


#### **Time**

- 1. (Screen off): Monitor will be off with no operation within 10s
- 2. (Clock): Time will be displayed on the screen at standby mode

# **Digital Frame**

- 1. The picture file must be copied to the Digital Frame folder, the picture resolution 1: The picture file must be copied to the Digital Frame folder, the picture resolution must not be greater than: 2526×1576, the format is JPEG
- 2. Long press the file to pop up the submenu, select "Delete" or "Delete All', and click the file to enter the playback interface.

#### **Devices**

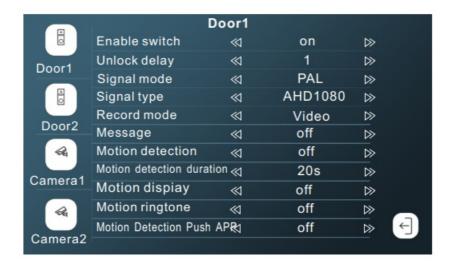


- 1. If the channel is closed, it will be skipped when monitoring the polling screen. This channel and APP will not display this channel. Please set it carefully.
- 2. When Motion Detection Push APP is closed, the phone will not receive any push information

## Ring



- 1. The ringtone of each channel can be set to three time periods, and different ringtone types and volume can be set, but it should, be noted that there can be no gaps and overlaps between the three time periods, otherwise the system will play the default parameters.
- 2. Please note that the volume setting of the Door bell cannot be greater than the volume of the indoor monitor.

# Recording

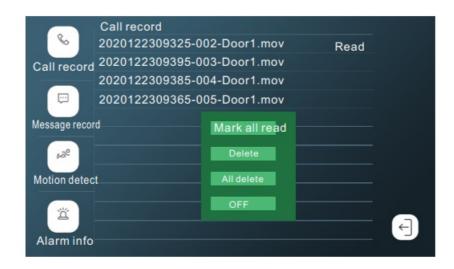

1. Click the file to play directly, long press the file to enter the delete/read operation.

# Live view on the monitor



(83)	Zoom out	
	© = © 25  ○ = © 25  Volume, brightness, contrast, saturation  ○ = © 25	
<b>(P)</b>	Zoom in	
<b>©</b>	Switch to the next channel, Door1>Door2>Cam1>Cam2	
(a)	Snapshot	
	Video	
<b>a b</b>	Door 1/Door 2 unlock	
	Release the door which connected to the indoor monitor	
	Calling, Hang up/Return	

## Connect network for the indoor monitor

• The app for the device is TuyaSmart. Please download the TuyaSmart app from the Google Play Store or APP


Store.

- The device only works with 2.4 GHz WiFi, not 5 GHz.
- Users can configure the network for the monitor through AP mode or EZ mode.
- The mobile phone should be connected to 2.4Ghz WiFi first, then add the device to the app

Scan the QR code for the instructions to create a 2.4Ghz WiFi



#### **EZ** mode

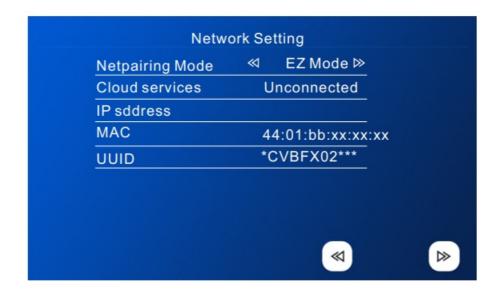


Select EZ mode and save it on the monitor, then add the device through app.

# Add the device by EZ mode

EZ mode, only use the mobile phone to connect the WIFI router and match the WIFI password, as shown below


Scan the QR code for a tutorial video of the app connection through EZ mode



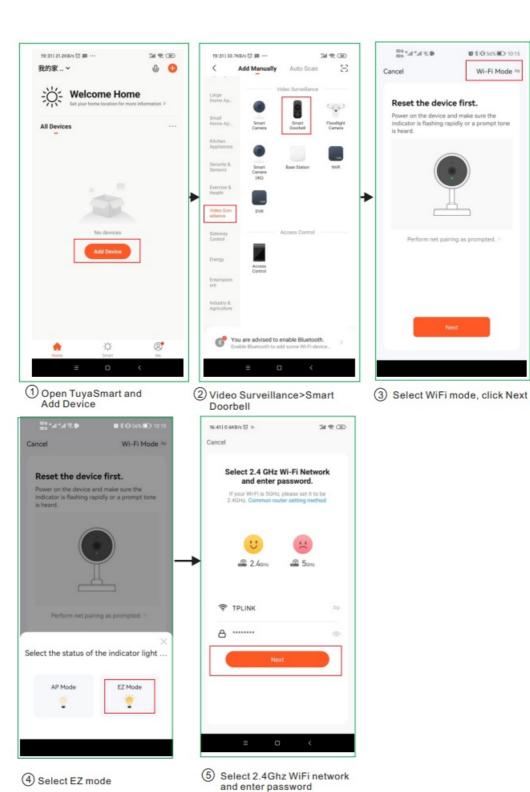


**₩** \$ (**0** 56% **W.**) 10:15

Wi-Fi Mode =

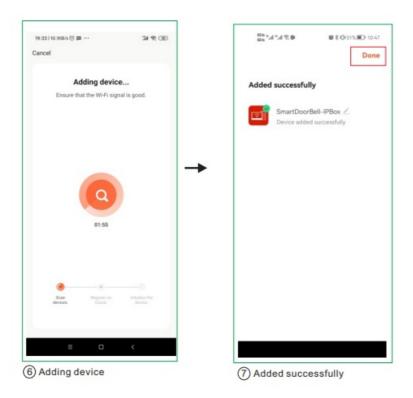


### AP mode

To quickly configure the interface and configure the AP mode in (Settings>Network Interface), note: In (Settings>Network Interface), press the return button to restart the device. (Settings> Network Interface) Vieww the WIFI hotspot name and password.

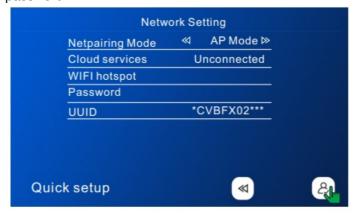

After restarting as prompted, enter the following interface in turn

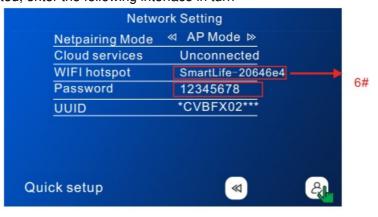

Tuya APP operates as follows

## Add the device by AP mode










Open TuyaSmart and Add Device

Video Surveillance>Smart Doorbell

3 Select WiFi mode, click Next

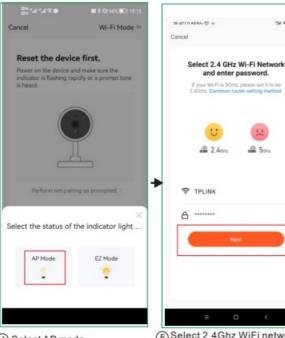


Select 2.4Ghz WiFi network and enter password




6 Switch to smartphone's setting to connect the device's hotspot

4 Select AP mode

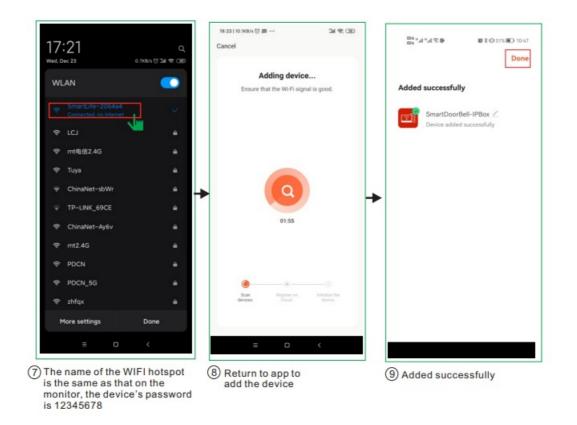

Scan the QR code for a tutorial video of the app connection through AP mode


## Share device through home management

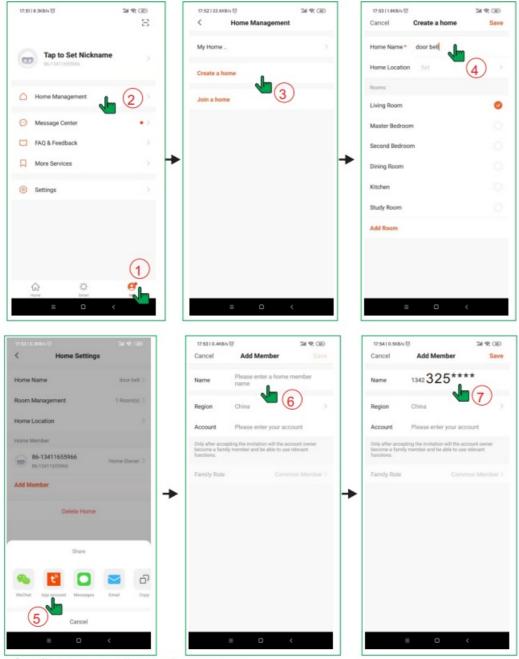

Configure according to the process

# Function description for the app

- 1. If the device has been successfully connected to the user's smartphone, the user needs to delete the device on the APP before adding it to another smartphone. (Note: The device should be deleted when the network is good, otherwise it's only deleted on the APP, but not on the server). After deleting, go back to the APP to check and confirm.
- 2. If a new user needs to add the device again after the machine restores to the factory settings, the current user needs to delete the device before re-adding. Otherwise, it is impossible to add the device to the app as a new device.

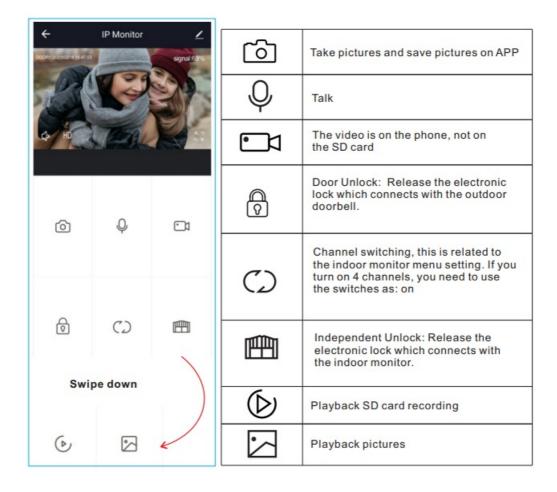

Technical support: <a href="mailto:support@tmezon.com">support@tmezon.com</a>
Official Website: <a href="mailto:http://www.tmezon.com">http://www.tmezon.com</a>

### **Documents / Resources**



TMEZON MZ-IP-V1026TW 1080P IP WIFI Video Intercom [pdf] User Guide MZ-IP-V1026TW 1080P IP WIFI Video Intercom, MZ-IP-V1026TW, 1080P IP WIFI Video Intercom, WIFI Video Intercom, Video Intercom, Intercom

#### References

User Manual

Manuals+, Privacy Policy