



# TnB HPCUBEBLAST Enceinte Bluetooth Speaker Instructions

[Home](#) » [TnB](#) » TnB HPCUBEBLAST Enceinte Bluetooth Speaker Instructions 



**ENCEINTE BLUETOOTH®**  
**Bluetooth® speaker**


## Contents

- [1 HPCUBEBLAST Enceinte Bluetooth Speaker](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 DESCRIPTION](#)
- [4 RECHARGING YOUR SPEAKER](#)
- [5 DIFFERENT LISTENING MODES](#)
- [6 TWS CONNECTION](#)
- [7 USING THE MICROPHONE](#)
- [8 GENERAL CONTROL BUTTONS](#)
- [9 FEATURES](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)

**HPCUBEBLAST Enceinte Bluetooth Speaker**



## Instructions

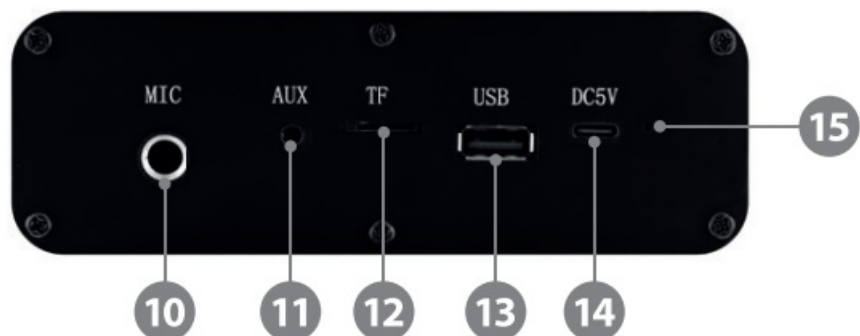

Congratulations on your purchase and thank you for the trust you have placed in T'nB.

Our products comply with the all relevant regulations and standards. Before using this equipment, we recommend that you read the instructions and safety instructions carefully and keep this manual for future reference.

## **IMPORTANT SAFETY INSTRUCTIONS**

- No guarantee will apply in case of misuse.
- T'nB accepts no liability if the safety instructions are not respected.
- Handle the device with care.
- The power supply of your device must match the initially specified characteristics
- The socket of the electrical equipment must be located near the said equipment and easy to get to.
- Keep the device away from flammable objects, explosive substances or dangerous objects.
- Use and store your device in an environment where the temperature is between 0C and 40°C.
- Store your device out of the reach of children.
- This device is not designed to be used by persons (including children) whose physical, sensory or mental capacities are reduced, or persons without experience or knowledge, except if they are supervised or receive prior instruction on using the device by a person in charge of their safety.
- Do not disassemble your device and do not attempt to repair or modify it yourself.
- Stop using your device if it has been hit or damaged.
- To avoid the risk of electric shock, disconnect your device from the mains and from any other device before cleaning it or when not in use.
- Only use the supplied accessories and connectors. The use of any other type of accessory not intended for this purpose may irretrievably damage your device.
- Make sure the appliance is switched off and cold before cleaning. Do not use any product or lubricant which may damage the appliance.
- T'nB accepts no liability for damage caused by misuse of the product or by use with an incompatible electrical device.
- Unless otherwise stated, never use your device in rain, in damp places or near a water source.
- Unless otherwise stated, this product is for indoor use only.
- Do not leave wireless products near credit cards or other data storage devices.
- Avoid using your wireless devices near sources of interference, such as power supply cables, microwave ovens, fluorescent lamps, wireless video cameras and wireless domestic telephones.
- To improve the quality and the strength of the wireless signal, reduce the number of devices operating on the same wireless frequency.

## **INCLUDED**

- CUBE BLAST speaker
- USB-C/USB-A charging cable
- 3.5-mm jack cable
- Microphone 6.35-mm jack wire

## **DESCRIPTION**

1) MODE	9)Screen
2)MENU	10) 6.35-mm jack port (microphone)
3)POWER	11)3.5-mm jack port
4) PREV	12) SD card port
5)TWSLIGHT	13) USB port:
6) NEXT	14) USB-C charging port
7)vOL	15) Charging indicator
8) VOL +	

## RECHARGING YOUR SPEAKER

Connect the USB cable to port USB-C (14) of the speaker and the other end to a USB-A port (USB charger, computer, etc.) to recharge your speaker. The charge indicator (15) light will come on red to show charging. Once the speaker is fully charged, the light will go off. When the speaker is switched on, the charge level is shown on the bottom right of the screen (9).

### SWITCHING YOUR SPEAKER ON AND OFF

Press the POWER (3) button for 3 seconds to switch the speaker on or off.

## DIFFERENT LISTENING MODES

Press the MODE (1) button briefly to switch between functions:

Bluetooth (BLUE) > USB key reader (USB) > SD card reader (TF) > Jack wire in (AUX) > Bluetooth (BLUE)

### A) Bluetooth mode

1. Before pairing your speaker with a new Bluetooth device, ensure that the speaker has been disconnected from all other Bluetooth devices.
2. Switch on the speaker by pressing the POWER (3) button for 3 seconds. When it comes on, the speaker will automatically go to "Pairing" mode. The LED (9) screen displays the "BLUE" mode and the Bluetooth logo flashes. The speaker is now ready to be paired to another Bluetooth device.
3. Activate the Bluetooth function on your device then select speaker "TNB CUBE"  
A beep will let you know that pairing has been successful. The Bluetooth logo will then stop flashing and stay on.  
When you switch on the speaker, it will automatically connect to the last Bluetooth device paired.

### B) Wired mode

To transmit your music to the speaker in wired mode, connect the 3.5-mm jack cable between your device (smartphone, computer, music player, etc.) and the 3.5-mm jack port of the speaker (11). Then press the MODE (1) button until you see "AUX" appear on the screen (9).

### C) SD card mode

If you insert the micro SD card with a maximum capacity of 32 GB into the reader (12), the speaker will automatically start playing the audio tracks on it. The screen (9) will display the "TF" mode.

### D) USB mode

If you insert the USB key with a maximum capacity of 32 GB into the USB port (13), the speaker will automatically

start playing the audio tracks on it. The screen (9) will display the “USB” mode.

## **TWS CONNECTION**

1. It is possible to connect 2 CUBE BLASTER speakers to each other to create a stereo mode that is even more powerful and immersive.
2. Before pairing the TWS, make sure that neither of the speakers is connected to any other Bluetooth devices by switching them off with the POWER (3) button and deactivating the Bluetooth function of your device.
3. Switch on the 2 speakers pressing the POWER(3) button for 3 seconds.
4. Press the TWS / LIGHT (S) button on any speakers at the same time for 3 seconds. The words “BLUE” will pass across the screen (9) of both speakers and the Bluetooth logo will flash.
5. The Bluetooth logo will then stop flashing and stay on.
6. Activate the Bluetooth function on your device then select speaker”TNB CUBE”. A beep will let you know that pairing has been successful. The sound is then shared between the 2 speakers!
7. To deactivate the TWS function, press the MODE(1) button for 3 seconds. The speaker will then go to classic”Pairing” mode.

## **USING THE MICROPHONE**

You can use the wired microphone included to create a memorable karaoke ambiance!

1. Connect the microphone to the 6.35-mm jack port on the back of the speaker (10) and switch it on by pressing the “ON” button on the microphone. The microphone is then operating.
2. You can change the microphone settings:
  - a. Press the MENU(2) button. The screen (9) will then display “H” This is the volume of the micro phone. Adjust it easily with the VOL- (7) and VOL+ (8) buttons, between 0 and 30.
  - b. Press the MENU button (2) again. The screen (9) will then display”E”. This is the echo of the microphone. Adjust it easily with the VOL- (7) and VOL+ (8) buttons, between 0 and 30.

## **GENERAL CONTROL BUTTONS**


- Play/pause: Press the POWER (3) button briefly to start or pause your music.
- Adjusting the volume: Press the button briefly VOL-(7) and VOL+ (8) to lower or increase the volume.
- Changing tracks: Press the PREV (4) button once to go to the previous track/ press the NEXT(6) button once to go to the next track.
- Switching between light modes: Press the TWS LIGHT (5) button to switch between the 4 light modes of the speaker, or to switch off the LED mode.
- If several music sources are available, press the MODE (1) button to switch from one source to another (Bluetooth, auxiliary, SD card, USB key)

## **FEATURES**

Bluetooth: S.0



Power: 40W RMS

Maximum range: 1 Om


Frequency range: 80 Hz – 18 kHz  
Audio file formats supported: MP3/WMA/WAV/FLAC  
Input (DC): USB-C5V  1,5A  
Integrated battery: Lithium-ion polymer 7.4 V 3600 mAh  
Autonomy: 4 hours at 50 % of the volume in Bluetooth mode with LEO lighting

NEED HELP?

Concerned about the satisfaction of our customers, you can contact us at [info@t-nb.com](mailto:info@t-nb.com). Maintenance, troubleshooting, miscellaneous information about this product, please visit our website: [www.t-nb.com](http://www.t-nb.com)

	Direct current To indicate on the rating plate that the equipment is suitable for direct current only; to identify relevant terminals.
	Prolonged listening at full volume can damage the user's ear.

Documents / Resources

	<a href="#">TnB HPCUBEBLAST Enceinte Bluetooth Speaker</a> [pdf] Instructions HPCUBEBLAST, HPCUBEBLAST Enceinte Bluetooth Speaker, Enceinte Bluetooth Speaker, Bluetooth Speaker, Speaker
---	--

References

- [User Manual](#)